


PPT-2400(6digits)(36), -1--1, Cylinder, Crankcase, Piston, Fan Cover
PPT-2400(6digits)(36), 2008/11/28

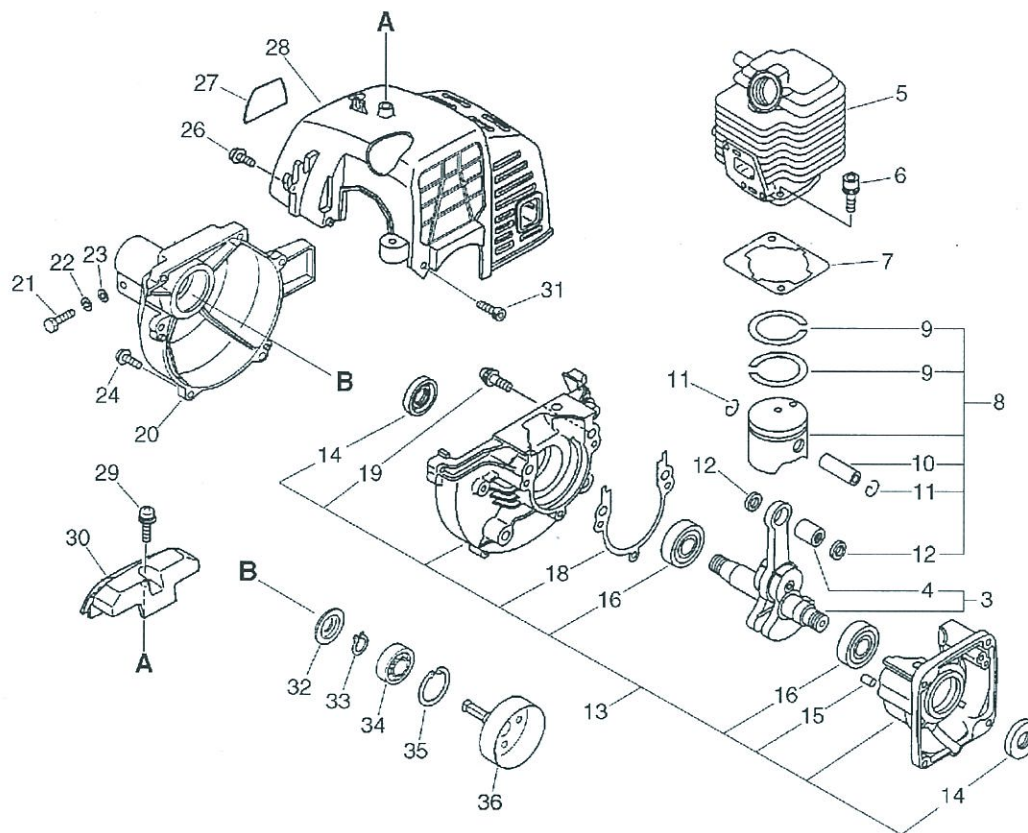


PPT-2400(6digits)(36), -1--1, Cylinder, Crankcase, Piston, Fan Cover
 PPT-2400(6digits)(36), 2008/11/28


Key	Lv	Part no.	Part description	Quantity	Note1	Note2
3		A011-000100	CRANKSHAFT,ASM	1	Sus. by A011-000101	
3		A011-000101	CRANKSHAFT,ASM	1		
4	+	V553-000010	BEARING,NEEDLE 8	1		
5		101011-08961	CYLINDER (CR)	1		
6		900162-05022	BOLT, H.S. 5*22	2		
7		101010-44332	GASKET, CYL. BASE	1		
8		100000-09563	PISTON KIT	1		
9	+	100011-09560	RING, PISTON	2		
10	+	100013-11520	PIN, PISTON	1		
11	+	100015-04630	CIRCLIP, PISTON PIN	2		
12	+	100014-11520	SPACER, PISTON PIN	2		
13		100204-52130	CRANKCASE KIT	1	Sus. by 100204-52132	
13		100204-52131	CRANKCASE KIT	1	Sus. by 100204-52132	
13		100204-52132	CRANKCASE KIT	1		
14	+	100212-42030	OILSEAL	2	Sus. by 100212-42031	
14	+	100212-42031	OILSEAL	2		
15	+	100215-03930	PIN, DOWEL	2		
16	+	94035-36201	BEARING BALL	2		
18	+	100242-42030	GASKET, CRANKCASE	1		
19	+	900162-05028	BOLT, H.S. 5*28	3		
20		101511-44630	COVER, FAN (BS)	1		
21		900151-05025	BOLT 5*25	1	Sus. by 900162-05025	
21		900162-05025	BOLT, H.S. 5*25	1		
22		900605-00005	WASHER, SPRING 5	1	Disuse	
23		900600-00005	WASHER 5	1	Disuse	
24		900163-04016	BOLT HSH	4		
26		900238-04012	SCREW 4*12	2		
27		890034-24661	LABEL, MODEL	1		
28		101514-44531	COVER, CYLINDER	1		
29		900253-05016	SCREW	1		
30		159912-44530	GUARD, TOP	1		
31		900163-04016	BOLT HSH	2		
32		175053-04920	STOPPER	1		
33		900701-00012	CIRCLIP 12	1		
34		900814-06201	BEARING, BALL 6201	1		
35		900702-00032	CIRCLIP 32	1		

PPT-2400(6digits)(36), -1--1, Cylinder, Crankcase, Piston, Fan Cover
PPT-2400(6digits)(36), 2008/11/28


Key	Lv	Part no.	Part description	Quantity	Note1	Note2
36		175005-42030	DRUM, CLUTCH	1		

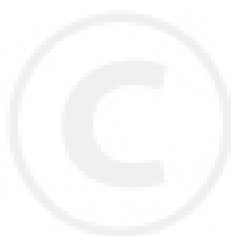


PPT-2400(6digits)(36), -1--1, Starter, Magneto, Clutch
PPT-2400(6digits)(36), 2008/11/28

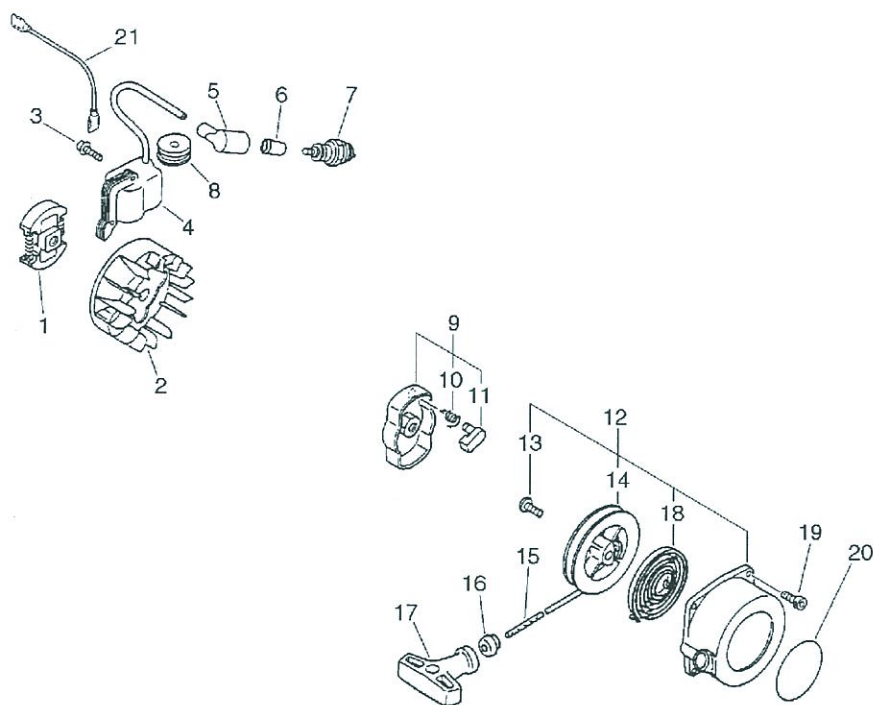

CHO	1	Sus. by X502-000 330
OUND	1	

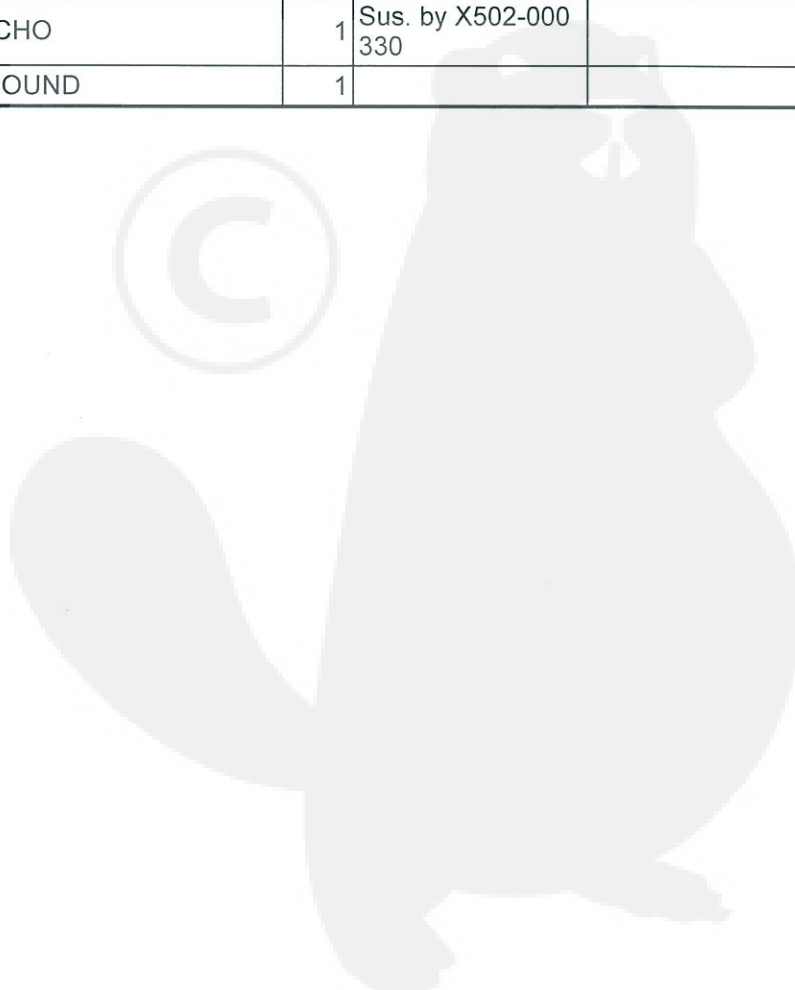


PPT-2400(6digits)(36), -1--1, Air Cleaner, Muffler
PPT-2400(6digits)(36), 2008/11/28

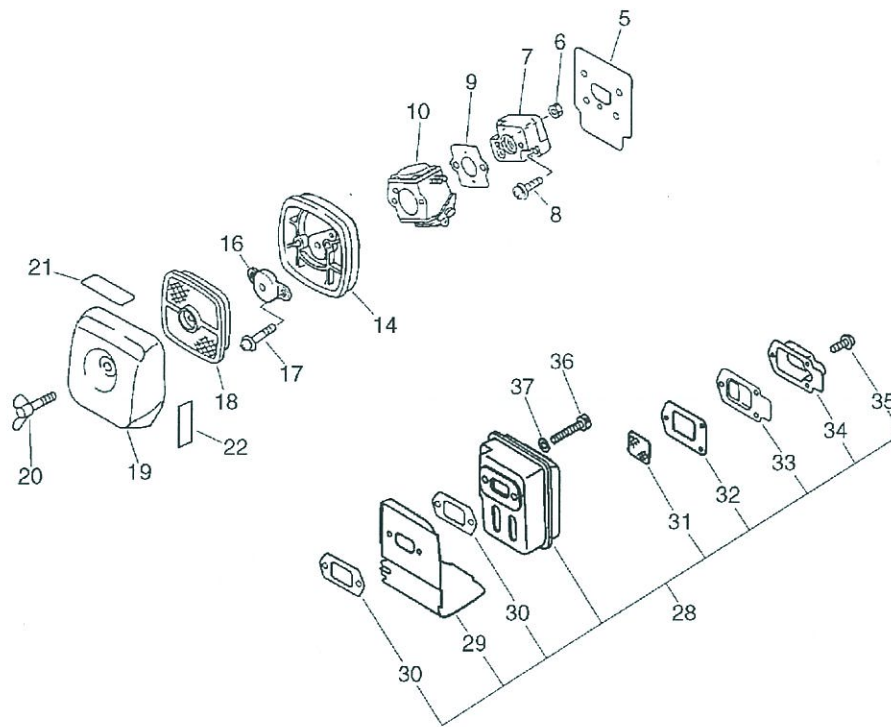

PPT-2400(6digits)(36), -1--1, Air Cleaner, Muffler
 PPT-2400(6digits)(36), 2008/11/28

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
5		130010-42032	GASKET,INTAKE	1		
7		130017-42031	INSULATOR, INTAKE	1		
6		900500-00005	NUT 5	2		
8		900238-05020	SCREW 5*20	2		
9		130010-05960	GASKET, INTAKE	1		
10		123000-52133	CARBURETOR WT-424C	1		
14		130307-06761	CASE,AIR CLEANER	1		
16		129011-06360	PLATE, PREVENT	1	Sus. by 129011-06361	
16		129011-06361	PLATE, PREVENT	1		
17		900242-05065	SCREW 5*65	2		
18		130310-54130	FILTER, AIR	1		
19		130313-05863	LID, AIR CLEANER	1		
20		210417-52730	BOLT, WING	1		
21		890334-52730	LABEL, METERING	1		
22		890332-52730	LABEL, CHOKE	1		
28		145800-52631	MUFFLER ASY (SAM)	1	Sus. by 145800-52633	
28		145800-52632	MUFFLER ASY (SAM)	1	Sus. by 145800-52633	
28		145800-52633	MUFFLER ASY (SAM)	1		
29	+	145631-42030	COVER, MUFFLER	1	Sus. by A320-000251	
29	+	A320-000250	COVER,MUFFLER	1	Sus. by A320-000251	
29	+	A320-000251	COVER,MUFFLER	1		
30	+	V104-000160	GASKET,EXHAUST	2		
31	+	145862-40630	SCREEN, MUFFLER	1		
32	+	145866-42031	GASKET, MUFFLER LID	1		
33	+	145876-42030	LID, MUFFLER (B)	1		
34	+	145818-52130	GUIDE, EXHAUST	1		
35	+	900238-04010	SCREW 4*10	3		
36		900105-05055	BOLT, H.S. 5*55	2		
37		900600-00005	WASHER 5	2		

PPT-2400(6digits)(36), -1--1, Fuel Tank
PPT-2400(6digits)(36), 2008/11/28

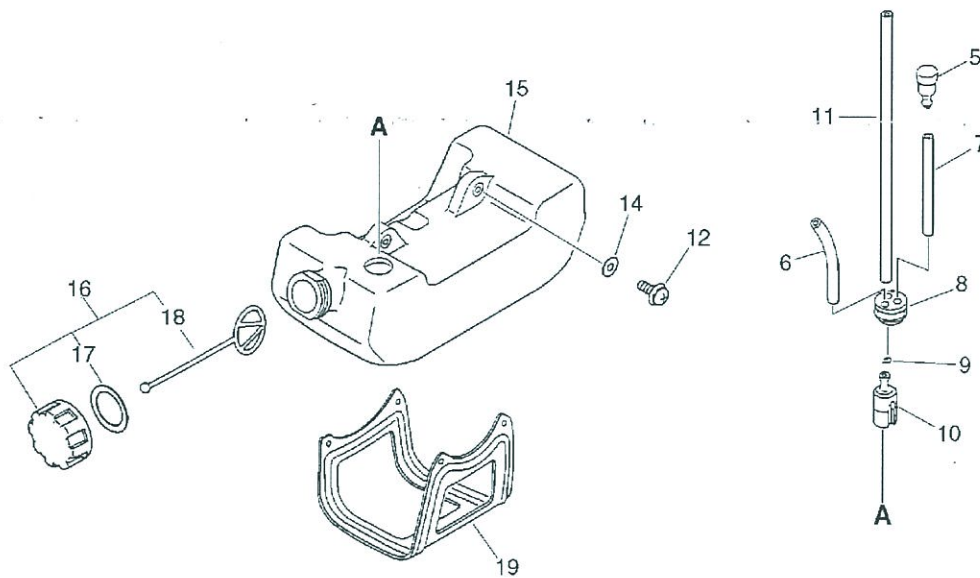


PPT-2400(6digits)(36), -1--1, Fuel Tank

PPT-2400(6digits)(36), 2008/11/28

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
5		131300-56430	VALVE, CHECK	1	Sus. by A356-000030	
5		A356-000030	VALVE,CHECK	1		
6		132010-56330	PIPE 3*6*90	1		
7		131312-39130	PIPE	1	Sus. by V471-001200	
7		V471-001200	PIPE	1		
8		132115-46730	GROMMET, FUEL	1	Sus. by V137-000030	
8		V137-000030	GROMMET,FUEL	1		
9		132013-09820	CLIP	1		
10		131205-07320	STRAINER, FUEL	1		
11		132010-13930	PIPE, FUEL	1	Sus. by V471-001190	
11		V471-001190	PIPE	1		
12		900238-05016	SCREW 5*16	2		
14		900603-00005	WASHER 5	2		
15		131005-46830	TANK, FUEL	1	Sus. by 131005-46831	
15		131005-46831	TANK, FUEL	1		
16		131004-08960	CAP ASSY, FUEL	1		
17	+	131016-55830	GASKET, FUEL CAP	1		
18	+	131051-52430	CONNECTOR, CAP	1		
19		305110-42030	STAND (BL)	1		

PPT-2400(6digits)(36), -1--1, Handle
PPT-2400(6digits)(36), 2008/11/28

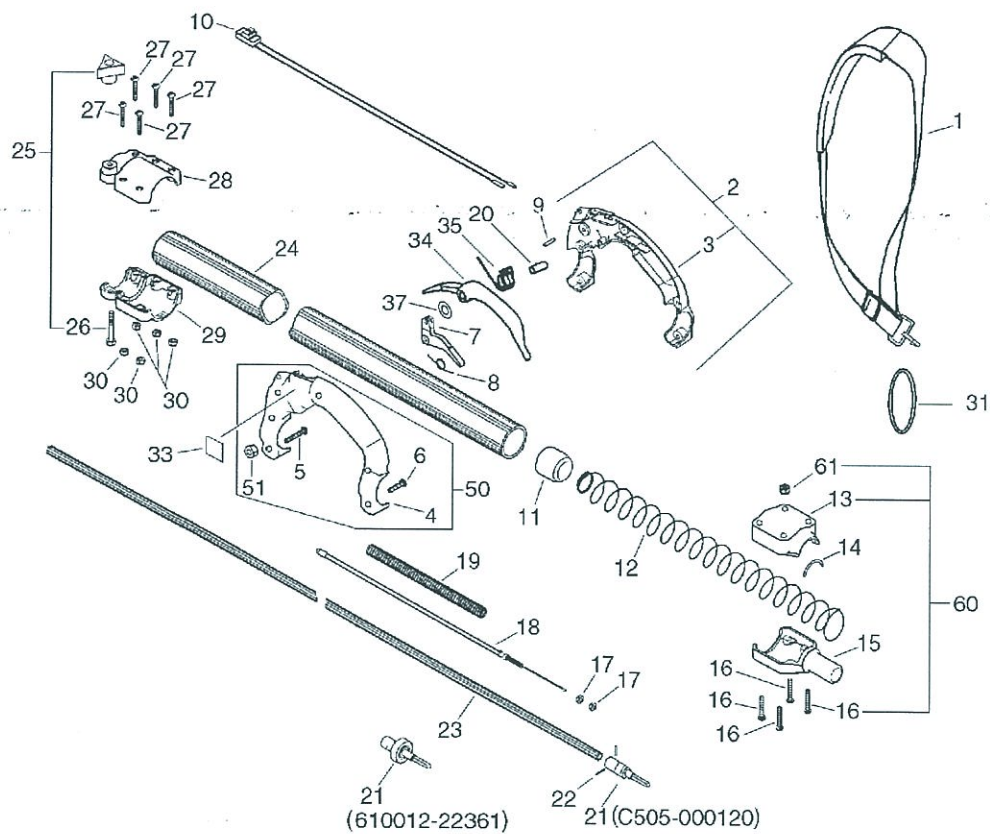


PPT-2400(6digits)(36), -1--1, Handle

PPT-2400(6digits)(36), 2008/11/28

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
1		301000-22060	HARNESS ASY,SHOULDER	1		
2		351100-22360	HANDLE SET, REAR	1	Sus. by 351100-22362	
2		351100-22361	HANDLE SET, REAR	1	Sus. by 351100-22362	
2		351100-22362	HANDLE SET, REAR	1		
3	+	351110-22562	HANDLE, REAR	1		
4	+	351101-22561	HANDLE, REAR	1	Sus. by P021-003531	
5	+	900053-00400	SCREW	4	Can be used on 351100-22360 only	
6	+	900053-00300	SCREW	2	Can be used on 351100-22360 only	
50	+	P021-003530	HANDLE ASY	1	Sus. by P021-003531	
50	+	P021-003531	HANDLE ASY	1	Sus. by P021-003532	
4	++	C410-000090	HANDLE,REAR	1	Sus. by C410-000091	
5	++	900053-00400	SCREW	6	Can be used on the P021-003530 only	
5	++	900053-00400	SCREW	2	Can be used on the P021-003531 only	
6	++	900053-00500	SCREW, PAN HEAD	4	Can be used on the P021-003531 only	
51	++	900031-50100	LOCKNUT	6		
7		178010-22560	TRIGGER, THROTTLE	1		
8		178043-22360	SPRING	1		
9		889960-22660	PIN, STRAIGHT	1		
10		163401-55630	SWITCH, IGNITION	1	Sus. by 163401-55631	
10		163401-55631	SWITCH, IGNITION	1		
11		433345-22660	GUIDE, SHAFT	1		
12		104940-22560	SPRING	1		
13		610810-22360	CAP, PIPE	1	Sus. by P021-003540	
60		P021-003540	CAP, MAIN PIPE ASY	1		
13	+	C525-000000	CAP,MAIN PIPE	1		
16	+	900053-00500	SCREW, PAN HEAD	4	Can be used on the P021-003540	
61	+	900031-50100	LOCKNUT	4		
14		104910-22460	CUSHION	1		
15		610248-22361	CONNECTOR, PIPE	1	Sus. by C510-000050	
15		610248-22362	CONNECTOR, PIPE	1	Sus. by C510-000050	
15		610248-22360	CONNECTOR, PIPE	1	Sus. by C510-000050	


15	C510-000050	COUPLING,MAIN PIPE	1		
16	900053-00400	SCREW	4	Can be used on the 610810-22360	
17	900502-00006	NUT 6 (3N)	2		
18	178001-51030	WIRE, THROTTLE	1		
19	178016-22360	TUBE	1		

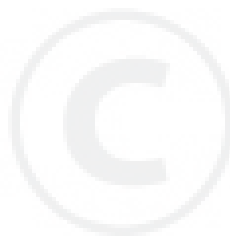

PPT-2400(6digits)(36), -1--1, Handle
 PPT-2400(6digits)(36), 2008/11/28

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
20		610850-22560	COLLAR	1		
21		C505-000120	CONNECTOR,SHAFT	1	Sus. by 610012-22361	
21		610012-22361	CONNECTOR, SHAFT	1		
22		880050-22360	PIN, SPIRAL	2	Sus. by V645-000000	
22		V620-000000	PIN,STRAIGHT 3>	2	Sus. by V645-000000	
22		V645-000000	PIN,SPIRAL	2		
23		610011-22060	SHAFT, DRIVE	1	Sus. by 610011-22061	
23		610011-22061	SHAFT, DRIVE	1		
24		610222-24660	PIPE, MAIN	1		
25		130406-22360	THUMB	1		
26	+	900051-00100	SCREW	1	Sus. by V204-000090	
26	+	V204-000090	BOLT,6	1		
27		900053-00400	SCREW	5		
28		610282-22460	COLLAR, MAIN PIPE	1		
29		610282-22360	COLLAR, MAIN PIPE	1		
30		900031-50100	LOCKNUT	5		
31		301016-52730	RING,HARNESS	1		
33		890157-39130	LABEL, SWITCH	1	Sr/Nr 36026765 and before Disuse	
34		178090-22560	LOCKOUT, THR.CONTROL	1		
35		178043-22560	SPRING	1	Sus. by 178043-22562	
35		178043-22561	SPRING	1	Sus. by 178043-22562	
35		178043-22562	SPRING	1		
37		900603-00005	WASHER 5	1		


PPT-2400(6digits)(36), -1--1, Pipe(Sr/Nr 36026865 and before)
PPT-2400(6digits)(36), 2008/11/28

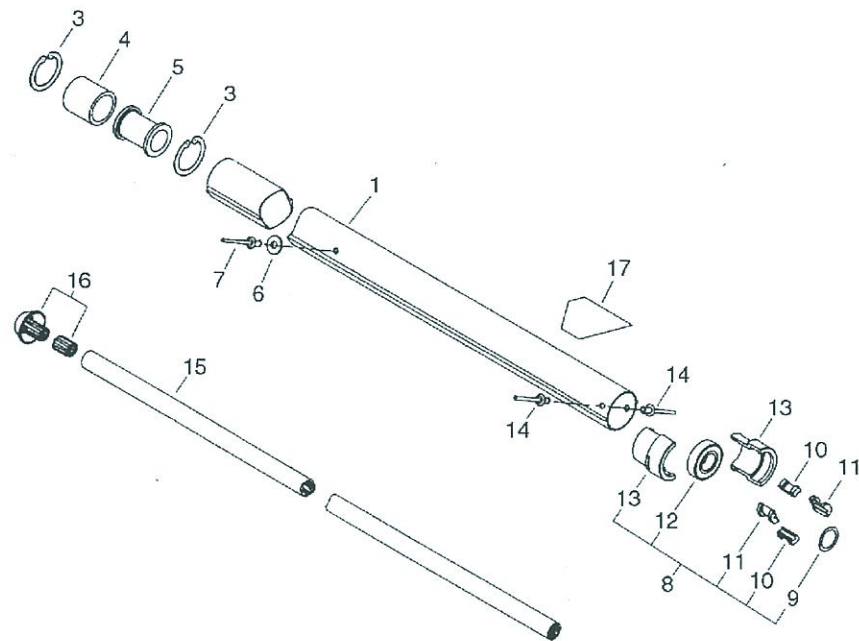

PPT-2400(6digits)(36), -1--1, Pipe(Sr/Nr 36026865 and before)
PPT-2400(6digits)(36), 2008/11/28


Key	Lv	Part no.	Part description	Quantity	Note1	Note2
1		610210-22461	PIPE, MAIN	1		
3		610335-22460	RING	2	Sr/Nr 36026865 and before Qty 2->1	
4		104293-22360	PAD, FOAM	1	Sr/Nr 36026865 and before Disuse	
5		433345-22361	GUIDE, SHAFT	1	Sr/Nr 36026865 and before Sus. by C316-000010	
6		400111-22360	WASHER	1		
7		890011-22460	RIVET	1		
8		610105-22360	BEARING, SHAFT	1		
9	+	178129-22360	WASHER	1		
10	+	433345-22460	GUIDE, SHAFT	2		
11	+	433345-22560	GUIDE, SHAFT	2		
12	+	900802-06002	BEARING, BALL 6002	1		
13	+	610111-22360	HOLDER, BEARING	2		
14		890011-22360	RIVET	2		
15		610011-22460	SHAFT, DRIVE	1		
16		610298-22360	SOCKET, SHAFT	1		
17		890160-22660	LABEL, CAUTION	1	Sus. by 890160-22661	

PPT-2400(6digits)(36), -1--1, Pipe(Sr/Nr 36026866 and after)
PPT-2400(6digits)(36), 2008/11/28

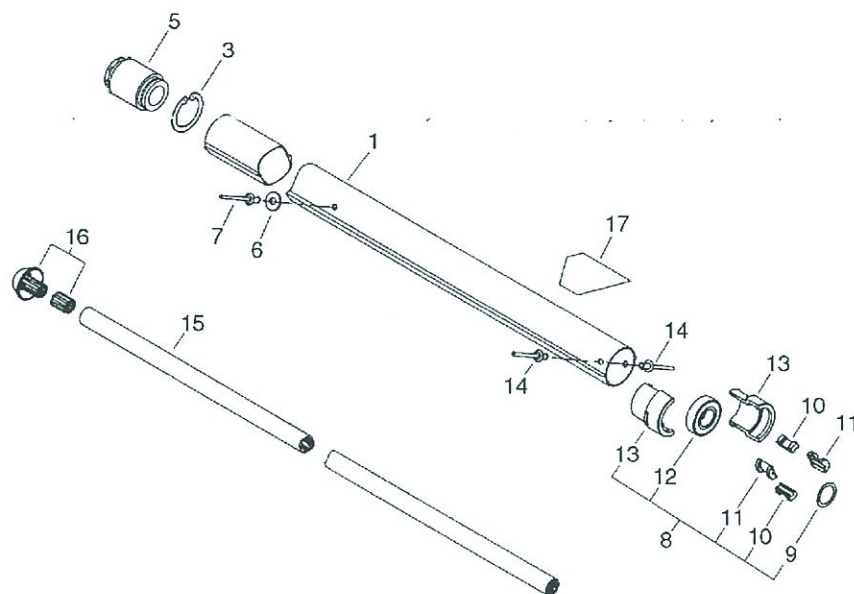


PPT-2400(6digits)(36), -1--1, Pipe(Sr/Nr 36026866 and after)
 PPT-2400(6digits)(36), 2008/11/28

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
1		610210-22461	PIPE, MAIN	1		
3		610335-22460	RING	1	Sr/Nr 36026866 and after	
5		C316-000010	GUIDE, SHAFT	1	Sr/Nr 36026866 and after	
6		400111-22360	WASHER	1		
7		890011-22460	RIVET	1		
8		610105-22360	BEARING, SHAFT	1		
9	+	178129-22360	WASHER	1		
10	+	433345-22560	GUIDE, SHAFT	2		
11	+	433345-22460	GUIDE, SHAFT	2		
12	+	900802-06002	BEARING, BALL 6002	1		
13	+	610111-22360	HOLDER, BEARING	2		
14		890011-22360	RIVET	2		
15		610011-22460	SHAFT, DRIVE	1		
16		610298-22360	SOCKET, SHAFT	1		
17		890160-22661	LABEL, CAUTION	1		

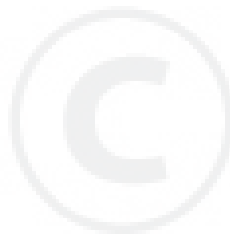

PPT-2400(6digits)(36), -1--1, Auto-Oiler, Gear Case, Tools
 PPT-2400(6digits)(36), 2008/11/28

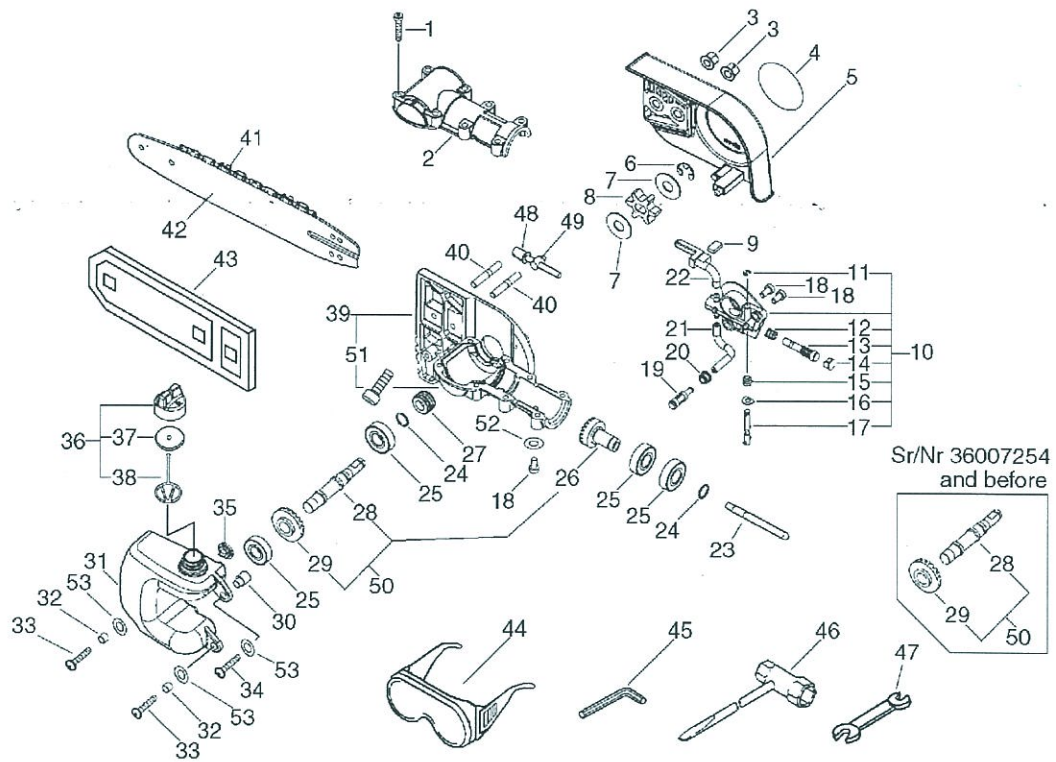

PPT-2400(6digits)(36), -1--1, Auto-Oiler, Gear Case, Tools

PPT-2400(6digits)(36), 2008/11/28


Key	Lv	Part no.	Part description	Quantity	Note1	Note2
1		V253-000000	SCREW,5	8	Sus. by 900109-05025	
1		900109-05025	BOLT, H.S,H	8		
2		C531-000030	CASE,GEAR	1		
3		433019-03933	NUT, FLANGE 6	2		
4		890118-49130	LABEL, ECHO	1	Sus. by X502-000330	
5		C300-000000	GUARD,SPROCKET	1	Sus. by C300-000001	
5		C300-000001	GUARD,SPROCKET	1		
6		V583-000010	RING	1		
7		175014-39130	WASHER, CLUTCH	2	Sus. by 175014-39131	
7		175014-39131	WASHER, CLUTCH	2		
8		C580-000070	SPROCKET,DRIVE	1		
9		437244-39130	PAD, FORM	1		
10		437002-39130	AUTO-OILER ASSY	1		
11	+	123127-15030	RING	1		
12	+	437019-38330	SPRING	1		
13	+	437024-37330	PLUNGER	1		
14	+	437062-37330	CAP, OIL PUMP	1		
15	+	437015-37330	SPRING	1		
16	+	437029-37330	WASHER	1		
17	+	437016-39130	NEEDLE, ADJUST	1		
18		V253-000010	SCREW,5	3	Sus. by 900109-05010	
18		900109-05010	BOLT, H.S,	3		
19		436205-02832	STRAINER, OIL	1		
20		132115-01461	GROMMET	1		
21		130110-12330	PIPE, IMPULSE	1		
22		V470-000180	PIPE	1		
23		610025-22360	CONNECTOR, SHAFT	1	Sus. by 610025-22361	
23		610025-22361	CONNECTOR, SHAFT	1		
24		900706-00012	CIRCLIP 12	2		
25		94042-06001	BEARING BALL	4		
26		V651-000041	GEAR,BEVEL	1	Sus. by V651-000042	
26		V651-000042	GEAR,BEVEL	1	Sr/Nr 36007254 and before	
27		437063-38330	GEAR, WORM	1		
28		C534-000020	SHAFT,GEAR	1	Sus. by P021-005391	
29		610311-22061	GEAR	1	Sus. by P021-005391	
50		P021-005390	GEAR SET	1	Sus. by P021-005391	

PPT-2400(6digits)(36), -1--1, Auto-Oiler, Gear Case, Tools

PPT-2400(6digits)(36), 2008/11/28


Key	Lv	Part no.	Part description	Quantity	Note1	Note2
50		P021-005391	GEAR SET	1	Sr/Nr 36007254 and before	
50		P021-009710	GEAR, SHAFT KIT	1	Sr/Nr 36007255 and after	
26	+	V651-000210	GEAR,BEVEL	1	Can be used on the P021-009710 only	
28	+	C534-000180	SHAFT,GEAR	1	Can be used on the P021-005391 only	
29	+	V651-000100	GEAR,BEVEL	1	Sus. by V651-000111	
29	+	V651-000110	GEAR,BEVEL	1	Sus. by V651-000111	
29	+	V651-000111	GEAR,BEVEL	1	Can be used on the P021-005391 only	
29	+	V651-000200	GEAR,BEVEL	1	Can be used on the P021-009710 only	
30		V354-000010	COLLAR,6	1		
31		C200-000000	TANK,OIL	1		
32		131045-28230	COLLAR	2		
33		V253-000030	SCREW,5	2	Sus. by 91109-05016	
33		91109-05016	BOLT	2		
34		V253-000020	SCREW,5	1	Sus. by 900109-05025	
34		900109-05025	BOLT, H.S,H	1		
35		131314-06320	VALVE, CHECK	1		
36		P021-000950	CAP ASSY, OIL	1		
37	+	436012-37830	GASKET, CIRCULAR	1		
38	+	131051-19830	LINK	1		
39		C531-000040	CASE,GEAR	1	Sr/Nr 36007474 and before	
39		C051-000120	CASE,GEAR	1	Sr/Nr 36007475 and after	
51	+	900109-05010	BOLT, H.S,	1	Can be used on the C051-000120 only	
40		V224-000000	BOLT,STUD 6	2		
41		431611-22360	CHAIN, SAW	1		
42		430411-22360	BAR, GUIDE30RC43-3/8	1	Sr/Nr 005939 and before	
42		X102-000020	BAR,GUIDE 30	1	Sr/Nr 005940 and after Sus. by X102-000060	
43		898513-22360	SCABBARD, GUIDE BAR	1	Sus. by X490-000050	
43		X490-000050	SCABBARD,CHAIN	1		
44		899580-68730	SAFETY GLASSES	1	Sus. by P021-002861	
44		X690-000030	GOGGLE	1	Sus. by P021-002	

				861	
44		P021-002861	GOGGLES	1	Sus. by X690-000 050
45		895612-03430	L-WRENCH (3MM)	1	Sr/Nr 36008259 and before
45		895610-00130	L-WRENCH (4MM)	1	Sr/Nr 36008260 and after
46		895410-39130	WRENCH, W/S-DRIVER	1	Sus. by 895410-39131
46		895410-39131	WRENCH, W/S-DRIVER	1	
47		895112-00330	SPANNER 8*10	1	Disuse

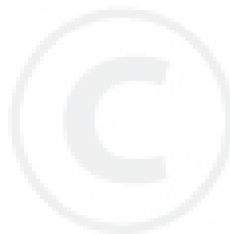


PPT-2400(6digits)(36), -1--1, Auto-Oiler, Gear Case, Tools
PPT-2400(6digits)(36), 2008/11/28

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
48		433016-39131	BOLT	1		
49		433014-03931	TENSIONER	1		
52		900600-00005	WASHER 5	1	Sr/Nr 36006088 and after	
53		900603-00005	WASHER 5	3	Sr/Nr 36006088 and after	

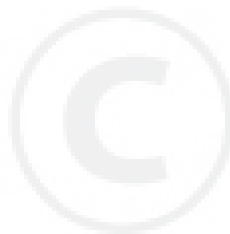

PPT-2400(6digits)(36), -1--1, Carburetor
PPT-2400(6digits)(36), 2008/11/28

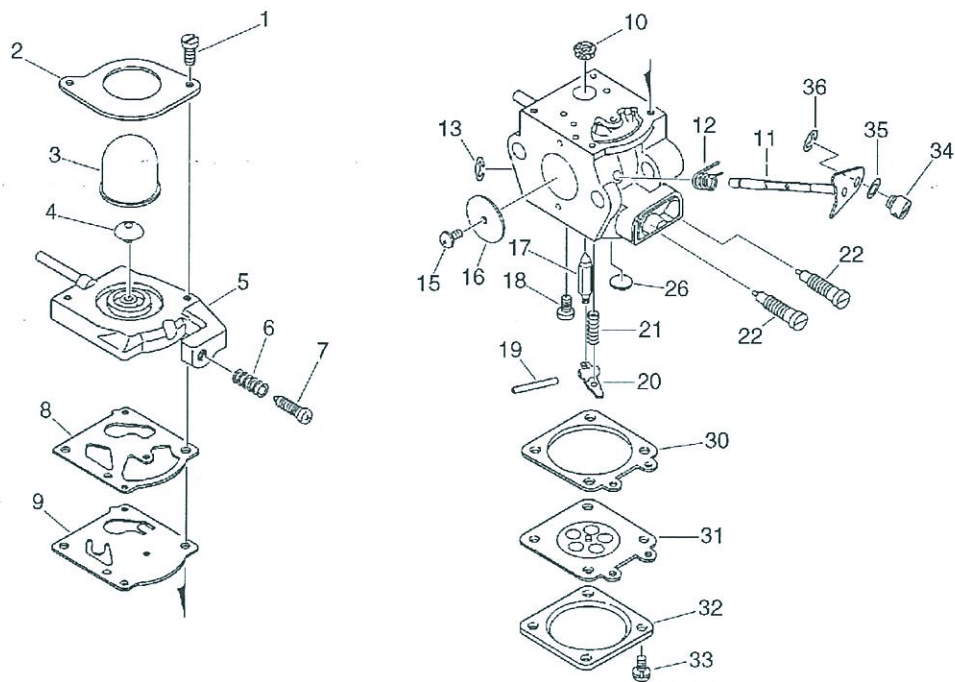

PPT-2400(6digits)(36), -1--1, Carburetor
 PPT-2400(6digits)(36), 2008/11/28

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
		123000-52133	CARBURETOR WT-424C	1		
1	+	123110-43130	SCREW	2		
2	+	123142-09560	COVER, PRIMER PUMP	1		
3	+	123181-09560	PUMP, PRIMER	1		
4	+	123171-35630	VALVE, CHECK	1		
5	+	123124-43230	COVER, FUEL PUMP	1		
6	+	123133-04260	SPRING, IDLE ADJUST	1		
7	+	123134-04260	SCREW, IDLE ADJUST	1		
8	+	123125-09560	GASKET, FUEL PUMP	1		
9	+	123112-09560	DIAPHRAGM, FUEL PUMP	1		
10	+	123126-10631	SCREEN, INLET	1		
11	+	123117-52130	SHAFT, THROTTLE	1		
12	+	123113-52130	SPRING, THE.RTN	1		
13	+	123127-15030	RING	1		
15	+	123114-38830	SCREW	1		
16	+	123116-53130	VALVE, THROTTLE	1		
17	+	123137-19830	VALVE, INLET NEEDLE	1		
18	+	123139-03930	SCREW, M. LEVER PIN	1		
19	+	123138-03930	PIN, METERING LEVER	1		
20	+	123123-03930	LEVER, METERING	1		
21	+	123122-39330	SPRING, METER. LEVER	1		
22	+	123120-52131	NEEDLE, HIGH SPEED	2		
26	+	123146-10631	PLUG, WELCH	1		
30	+	123140-03930	GASKET, M. DIAPHRAGM	1		
31	+	123141-03930	DIAPHRAGM, METERING	1		
32	+	123142-03930	COVER, M. DIAPHRAGM	1		
33	+	123130-02960	SCREW	4		
34	+	123172-26030	SWIVEL	1		
35	+	123149-26030	WASHER	1		
36	+	123173-07930	CLIP	1		