
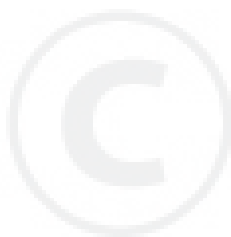


SBPP-SRM(PAS-Power Pruner), 35002500-, Auto-Oiler, Gear Case, Sprocket
P014-000320-10Hb, 2010/05/31

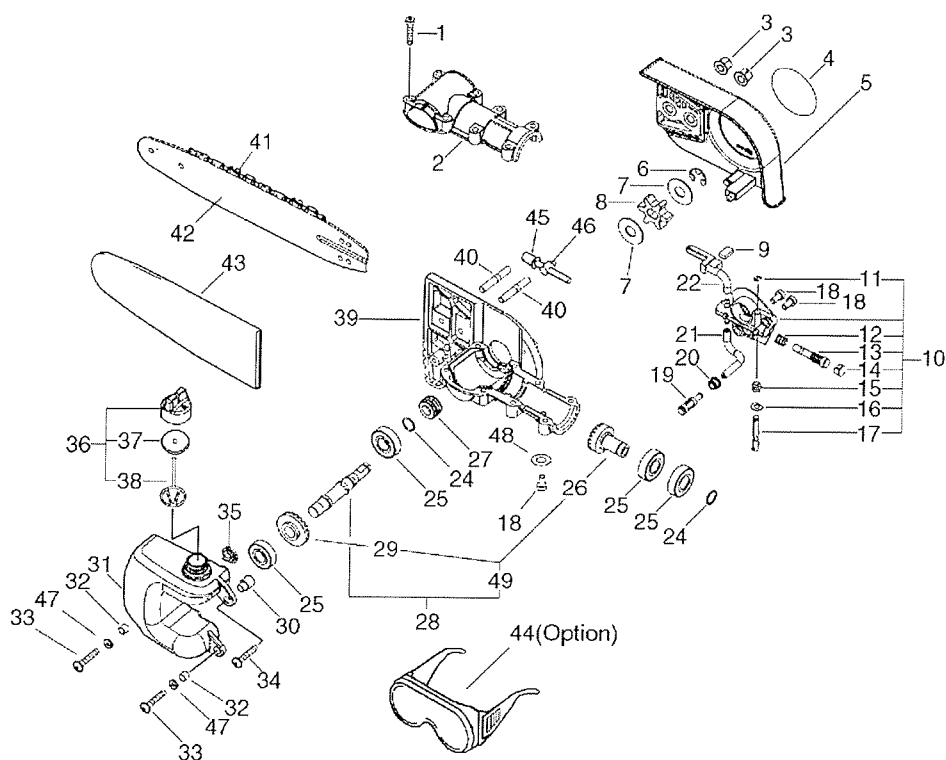

SBPP-SRM(PAS-Power Pruner), 35002500-, Auto-Oiler, Gear Case, Sprocket
 P014-000320-10Hb, 2010/05/31

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
1		900109-05025	BOLT, H.S,H	8		
2		C531-000010	CASE,GEAR	1		
3		433019-03933	NUT, FLANGE 6	2		
4		X502-000330	LABEL,ECHO	1		
5		C300-000001	GUARD,SPROCKET	1		
6		V583-000010	RING	1		
7		175014-39131	WASHER, CLUTCH	2		
8		C580-000070	SPROCKET,DRIVE	1		
9		437244-39130	PAD, FORM	1		
10		437002-39130	AUTO-OILER ASSY	1		
18		900109-05010	BOLT, H.S,	3		
19		436205-02832	STRAINER, OIL	1		
20		132115-01461	GROMMET	1		
20		132115-01461	GROMMET	1		
21		130110-12330	PIPE, IMPULSE	1		
22		V470-000180	PIPE	1		
24		900706-00012	CIRCLIP 12	2		
25		94052-06001	BEARING BALL	4		
25		94042-06001	BEARING BALL	4		
27		437063-38330	GEAR, WORM	1		
28		P021-013700	GEAR, SHAFT KIT	1		
49	+	P021-009731	GEAR,BEVEL SET	1		
26	++	V651-000230	GEAR,BEVEL	1		
29	++	V651-000201	GEAR,BEVEL	1		
30		V354-000010	COLLAR,6	1		
31		C200-000000	TANK,OIL	1		
32		131045-28230	COLLAR	2		
33		91109-05016	BOLT	2		
34		900109-05025	BOLT, H.S,H	1		
35		131314-06320	VALVE, CHECK	1		
36		P021-000951	CAP ASSY, OIL	1		
37	+	436012-37830	GASKET, CIRCULAR	1		
38	+	A365-000050	CONNECTOR,CAP	1		
39		C051-000110	CASE,GEAR	1		
40		V224-000000	BOLT,STUD 6	2		
41		X201-000000	CHAIN,SAW	1		

SBPP-SRM(PAS-Power Pruner), 35002500-, Auto-Oiler, Gear Case, Sprocket
 P014-000320-10Hb, 2010/05/31

Key	Lv	Part no.	Part description	Quantity	Note1	Note2
42		430410-22461	BAR, GUIDE	1		
43		X490-000060	SCABBARD,CHAIN	1		
45		433016-39131	BOLT	1		
46		433014-03931	TENSIONER	1		
47		900603-00005	WASHER 5	3		
48		900600-00005	WASHER 5	1		

SBPP-SRM(PAS-Power Pruner), 35002500-, Main Pipe
P014-000320-10Hb, 2010/05/31

