OWNER'S MANUAL

36" - 10 H.P. RIDING MOWER

MODEL 3554-2000

WARRANTY

Lawn Mower Division Warranty Policy ONE YEAR LIMITED WARRANTY

For one (1) year from date of purchase by the first consumer for residential use (thirty (30) days commercial use), Lawn Mower Division warrants that it will replace free of charge, including labor, any original part of any Lawn Mower Division product found to be defective by any authorized Service Dealer or the factory, except the battery which is warranted for ninety (90) days from date of purchase.

This warranty does not cover engines, transmissions, transaxles or differentials (these items are covered by their manufacturer's own warranty). This warranty does not cover parts that have failed due to normal wear or parts that have failed subject to misuse or abuse. Transportation of the unit or parts to and from an authorized Service Dealer or the factory is the responsibility of the owner.

A step by step explanation as to what procedure should be followed for this Warranty is:

- If a part becomes defective, contact the store where the unit was purchased for the name and address of the authorized Service Dealer nearest to you.
- 2. If you cannot locate an authorized Service Dealer, write Service Department of Lawn Mower Division, for the name and address of the authorized Service Dealer in your area.
- 3. Return the defective product, along with proof of purchase to such authorized Service Dealer for replacement of any defective part where covered by this warranty.

There is no other express warranty. Implied warranties, including those of merchantability and fitness for a particular purpose are limited to one (1) year from date of purchase. Liability for incidental or consequential damages are excluded.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Lawn Mower Division

P.O. Box 377

Des Moines, Iowa 50302

-UNIT PARTS AND SERVICE

This manual contains instructions for safety, assembly and maintenance. Read this manual carefully and completely so that you will know proper assembly, use and care of your unit. Also fill in and mail the warranty registration card packed with the unit. For service other than covered in this manual, contact an authorized service dealer. A nationwide parts and service organization has been established to provide locally available parts and service. A list of authorized parts distributors has been included in this manual. When ordering repair parts, always give the following information: 1. The Part Name; 2. The Part Number; 3. The Quantity desired; 4. The Full (eight digit) Model Number of the unit. The model number will be found on a plate attached to the unit.



Look for this symbol. It means — ATTENTION! BECOME ALERT! A HAZARD TO OPERATOR, BYSTANDERS, PROPERTY OR UNIT MAY EXIST.




LAWN MOWER DIVISION
P.O. BOX 377
Part No. 62283

LAWN MOWER DIVISION
P.O. BOX 377
DES MOINES, IOWA 50302

4981

Printed in U.S.A

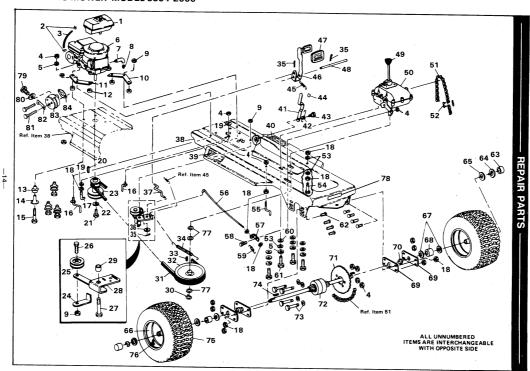

32" RIDING MOWER MODEL 3554-2000

ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS:

1.The PART NUMBER 2.The PART NAME 3.0UANTITY DESIRED 4.The MODEL NUMBER—(As shown on Model Plate)
SEND PART ORDERS AS PER INSTRUCTIONS ON THE FRONT PAGE
YOUR UNIT IS RIGHT HAND (RH) OR LEFT HAND (LH) AS YOU STAND BEHIND IT.

DO NOT USE KEY NUMBERS WHEN ORDERING REPAIR PARTS, ALWAYS USE PART NUMBERS.
All replacement parts will be supplied in current production colors or in a neutral color.

A handling fee is applicable to small parts orders.


Key		
No.	Part No.	Description
1	48812	Gas Tank
2 3 4	41008	Clip, Gas Line
3	50118	Gas Line
4	9413447	Locknut, Hex, 5/16-18 Thd
5 6 7 8 9	120638	*Lockwasher, Split, 5/16 In.
6	Engine	See Footnote Below
7	43989	Oil Drain Tube
8	23700	*Pipe Plug, ¼ In.
9	9413534	Locknut, Hex, 36-16 Thd
10	43954	Bracket, Vibration, Right
11	43955	Bracket, Vibration, Left
12	44015	Mount, Load Carrying, Upper
13	44016	Mounting, Rebound, Lower
14	42273	Insert, Steel, Vibration Mount
15	180112	Screw, Hex Hd, 5/16-18 x 2¾ In.
16	50653	Belt Guide, Blade Drive
17	49896	Belt Guide, Transmission Drive Belt
18	271184	Nut, Hex, Keps, 5/16-18 Thd
19	120386	*Flatwasher, ¼ In.
20	33200	Key, Engine Pulley
21	123567	Screw, Hex Hd, 7/16-20 x 1 In.
22	120383	Lockwasher, Split
23	43961	Pulley, Engine
24	39659	Belt Retainer
25	35374	Pulley, Idler
26	120918	*Screw, Hex Hd, %-16 x 11/2 In.

*Standard Hardware Items - May Be Purchased Locally, †Contact Tecumseh/Peerless authorized service dealer for parts and warranty.

Key No.	Part No.	Description
27	28928	Shoulder Bolt
28	46848	Arm, Drive Idler
29	43953	Spacer
30	22053	Retaining Ring
31	43979	V-Belt, Transmission Drive
32	39266	Pulley, Transmission
33	3021	Woodruff Key
34	49276	Spring, Main Drive
35	121222	*Pin, Cotter, 3/32 x ¾ In.
36	120392	Flatwasher
37	43980	Rod. Clutch
38	52709	Main Frame
39	52317	Foot Pad, Left
40	52316	Foot Pad, Right
41	43967	Arm, Parking Brake
42	43968	Spring, Parking Brake
43	40974	Shoulder Bolt, Parking Brake
44	68585	Decal, Parking Brake
45	50562	Spring, Clutch Pedal
46	52640	Brake Pedal Assembly
47	48761	Rubber Pad, Brake Pedal
48	43956	Shaft, Brake-Clutch Pedal
49	29483	Knob, Gear Shift
50	Transmission	†Peerless, Model 757
51	44044	Chain Assembly
52	20307	Link (Only), Chain Connector

62 998013 *Carriage Bolt, 5/16-18 x ¾ In. 63 40394 +Ub.Cap "E" Ring, ¾ In. 64 36625 *E" Ring, ¾ In. 65 42815 Flattwasher 67 642 Flattwasher 68 44449 Spacer 69 43987 Plate, Bearing Retainer 69 3987 Plate, Bearing Retainer 69 24616 Plattwasher 70 35345 Bearing 71 39797 Sprocket, 54 Tooth, No. 41 72 Differential Parts 74 4081 Tire 75 41081 Tire 76 24167 Valve Stem 77 40677 *Flattwasher, ¾ In. 78 68542 Plattwasher, ¾ In. 79 180020 Screw, Hex Hd, ¾-20 x ¾ In. 79 180020 Screw, Hex Hd, ¾-20	Key		
54 122089	No.	Part No.	Description
Section		446363	*Flatwasher, 5/16 In.
56 46839 Rod. Brake 57 48834 Bracket, Brake Rod 58 25494 Shoulder Bolt 59 2347 Shoulder Bolt 60 188485 Washer, Shakeproof, 5/16 In. 61 122007 Screw, Hex Hd, 5/16-18 x ¾ In. 62 98031 Garriage Bolt, 5/16-18 x ¾ In. 63 40394 Hub Cap 64 3662 "Fining, ¾ In. 65 16 3612 Wheel 67 642 Fining, ¾ In. 68 54449 Spacer 68 44449 Spacer 69 43987 Plate, Bearing Retainer 69 43987 Plate, Bearing Retainer 69 44989 Sprocket, 54 Tooth, No. 41 69 177 Differential 69 18 1 30628 Fining Waller 69 18 18 18 18 18 18 18 18 18 18 18 18 18		122089	*Screw, Hex Hd, 5/16-18 x 3 In.
1		43991	Belt Guide, Transmission Pulley
58 25494 Shoulder Bolt 24247 Spring, Brake Rod 138485 Washer, Shakeproof, 5/16 In. 122007 Screw, Hex Hd, 5/16-18 x ¾ In. 122007 Screw, Hex Hd, 5/16-18 x ¾ In. 122007 Hub Cap Hub Cap 122007 Hub Cap 1220			Rod, Brake
59 2347 Spring, Brake Rod 50 134845 Washer, Shakeproof, 5/16 in. 51 122007 Screw, Hex Hd, 5/16-18 x ¾ in. 52 999013 Carriage Bolt, 5/16-18 x ¾ in. 53 40394 Hub Cap 56 42815 Elixwasher 56 42815 Elixwasher 57 44449 58 44449 59 43987 Blate, Bearing Retainer 59 43987 Blate, Bearing Retainer 50 43987 Blate, Bearing Retainer 50 41081 Feerless, Model 1718 51 Tripe 52 Tripe 53 41081 Tripe 54 41081 Tripe 56 42815 Feerless, Model 1718 56 41081 Tripe 57 40077 Feerless, Model 1718 58 41081 Tripe 59 41081 Tripe 50 41081		46834	Bracket, Brake Rod
60 138485 "Washer, Shakeproof, 5/16 in		25494	Shoulder Bolt
61 122007 29 99013 **Gerew, Hex Hd, 5/16-18 x ¾ In. 4034 4034 4034 4034 404 40 8625 66 42 18 18 18 19 18 19 18 19 18 19 18 19 18 18 19 18 18 18 18 18 18 18 18 18 18 18 18 18	59	2347	Spring, Brake Rod
62 998013 *Carriage Bolt, 5/16-18 x ¾ In. 4034 4494 Hub Cap 64 42815 Fe Ring, ¾ In. 65 3612 Wheel 67 642 Flatwasher 68 44449 Space 67 1 39397 Plate, Bearing Retainer 68 44449 Space 69 1 39877 Plate, Bearing Retainer 69 2 1 39797 Plate, Bearing Retainer 60 2 1 39797 Plate, Bearing Retainer 60 2 1 39797 Plate, Bearing 71 39797 Sprocket, 54 Tooth, No. 41 72 Differential Parts 73 39628 Key, 3/16 x 3/16 x 2½ In. 74 1081 Tire 75 40677 Tire 76 24167 Valve Stem 77 40677 Flatwasher, ¾ In. 78 68542 Crew, Hex Hd, ¾-20 x ¾ In. 79 180020 Screw, Hex Hd, ¾-20 x ¾ In. 79 18			*Washer, Shakeproof, 5/16 In.
63 40394 Hub Cap 64 36625 "E" Ring, 34 In. 65 42815 Flattwasher 66 36122 Wheel 67 642 Flattwasher 68 44449 Spacer 69 43987 Plate, Bearing Retainer 70 38345 Bearing 71 39797 Sprocket, 54 Tooth, No. 41 72 Plifferential 73 74 41081 Tire 76 24167 Valve Stem 77 40677 Flattwasher, % In. 78 68542 Valve Stem 79 180020 Screw, Hex Hd, 4-20 x ¾ In. 78 Flattwasher, Split, ¼ In. 78 1 73063 Screw, Hex Hd, 4-20 x ¾ In. 78 Flattwasher, Split, ¼ In. 78 1 73063 Screw, Hex Hd, 4-20 x ¾ In. 78 Flattwasher, Split, ¼ In. 78 103080 Flattwasher, Split, ¼ In. 79 180020 Flattwasher, Split, ¼ In. 79 1800380 Flattwasher, Split, ¼ In. 79 1800380 Flattwasher, Split, ¼ In. 79 1800380 Flattwasher, Split, ¼ In. 79 18004 Flattwasher, Split, ¼ In. 70 18004 Flattwasher, S		122007	*Screw, Hex Hd, 5/16-18 x 3/4 In.
64 36625 "E" Ring, 34 In. 65 42815 Islawasher 66 36182 Wheel 67 62 44449 Space 69 44949 Space 70 35345 Bearing Retainer 80 39797 Sprocket, 54 Tooth, No. 41 80 19 19 19 19 19 19 19 19 19 19 19 19 19		998013	*Carriage Bolt, 5/16-18 x ¾ In.
65 42815 Flattwasher 66 36182 Wheel 67 642 Flattwasher 68 4449 Spacer 69 43987 Flattwasher 70 38345 Slate, Bearing Retainer 71 39797 Sprocks, Lof Tooth, No. 41 72 Differential Parts 73 39628 Feer 74 41081 Tire 76 24167 Valve Stem 77 40677 78 68542 Ozago 79 180020 79 180020 Szew, Hex Hd, ½-20 x ¼ In. 78 Flattwasher, Split, ¼ In. 78 Slate 79 180020 Szew, Hex Hd, ½-20 x ¾ In. 79 180020 Flattwasher, Split, ¼ In. 79 180036 79 180036 79 180036 Slattwasher, Split, ¼ In. 70 18016 Slattwasher, Split, ¼ In. 71 18016 Slattwasher, Split, ¼ In. 71 18016 Slattwasher, Split, ¼ In. 72 18016 Slattwasher, Split, ¼ In. 73 18016 Slattwasher, Split, ¼ In. 74 18016 Slattwasher, Split, ¼ In. 75 18016 Slattwasher, Split, ¼ In. 76 18016 Slattwasher, Split, ¼ In. 77 18016 Slattwasher, Split, ¼ In. 78 18016		40394	Hub Cap .
66 36182 Wheel 67 642 Flatwasher 68 44449 5pacer 69 43987 Plate, Bearing Retainer 70 35345 Bearing Sprocket, 54 Tooth, No. 41 72 Differential Perless, Model 171B 73 39628 Key, 3716 x 3716 x 2½ In. 74 4081 Tire 75 44081 Tire 76 24167 Valve Stem 79 180020 Screw, Hex Hd, ½-20 x ¾ In. 78 68542 Plate Stem 79 180020 Screw, Hex Hd, ½-20 x ¾ In. 78 Flatwasher, Split, ¼ In. 78 Flatwasher, Split, ¼ In. 78 Flatwasher, Split, ¼ In. 79 120380 Screw, Hex Hd, ½-20 x ¾ In. 79 Flatwasher, Split, ¼ In. 79 120380 Screw, Hex Hd, ½-20 x ¾ In. 79 Flatwasher, Split, ¼ In. 79 120380 Screw, Hex Hd, ½-20 x ¾ In. 79 12038		36625	"E" Ring, ¾ In.
67 642 Flatwasher 68 4449 Spacer 94499 79.20 Flate, Bearing Retainer 94449 Spacer 94499 71 39.79 Flate, Bearing Retainer 95.41 Spacer 94.52 Flate, Bearing 95.42 Flate, Bearing 9			
68 44449 Spacer 43987 Plate, Bearing Retainer 33937 Plate, Bearing Retainer 339797 Plate, Bearing Retainer 540 Sprocket, 54 Tooth, No. 41 570 Plate Plate, Space			Wheel
69 43987 Plate, Bearing Retainer 70 53545 Bearing 71 39797 Sprocket, 54 Tooth, No. 41 72 Differential Perfetes, Model 171B 73 39628 Key, 3/16 x 3/16 x 2½ In. 75 41081 Time State St			Flatwasher
70 35345 Bearing Sprocket, 54 Tooth, No. 41 Hereliess, Model 171B Differential Parts Key 3/16 x 3/16			Spacer
71 39797 Sprocket, 54 Tooth, No. 41 Priferential Perfectes, Model 1718 Differential Parts 41081 Tire 41081 Tire 41087 40677 Flatwasher, % In. Decal, Caution 20380 120380 Sprocket, 54 Tooth, No. 41 Priferential Parts 41081 Tire 41081 Parts 41081 P		43987	Plate, Bearing Retainer
72 Differential Perless, Model 171B 73 39628 Feet Feet Feet Feet Feet Feet Feet Fee			Bearing '
73 Differential Parts 74 39628 Key, 3/16 x 3/16 x 2½ ln. 75 41081 Tire 76 24167 Valve Stem 77 40677 Flatrwasher, % ln. 78 180020 Screw, Hex Hd, 220 x ¾ ln. 78 1 173063 Screw, Hex Hd, 5/16-18 x 3½ ln. 78 Engine Part 79 24167 Valve Stem 79 180020 Screw, Hex Hd, 5/16-18 x 3½ ln. 79 18	71		
74 39628 Key, 3/16 x 3/16 x 2½ ln. 75 41081 Tire 76 24167 Valve Stem 77 40677 Flattwasher, % ln. 79 180020 Screw, Hex Hd, ½20 x ¾ ln. 80 120380 I 173083 Screw, Hex Hd, 5/16-18 x 3½ ln. Engine Part 83 49993 Muffler		Differential	
75 41081 Tire 76 24167 Valve Stem 77 40677 *Flattwasher, % In. 78 68542 Decal, Cautio, % 20 x % In. 79 180020 Screw, Hex Hd, 20 x % In. 79 180020 Flattwasher, Split, % In. 79 180020 Screw, Hex Hd, 5/16-18 x 3% In. 79 180020 Engine Part 81 41081 Tire 80 241081 Tire 80 241081 Tire 80 241081 Tire 90 241081 T			
76 24167 Valve Stem Flattwasher, % In. B8542 Decal, Caution Screw, Hex Hd, X-20 x % In. Flatwasher, Split, % In. Flatwasher, Split, % In. Flatwasher, Split, % In. Engine Part Split, % In. Flattwasher, Split, % In. Engine Part Split, % In. Flattwasher, Split, % In.			
77 40677 "Flatwasher, % In. 78 68542 Decal, Caution 79 180020 Screw, Hex Hd, %-20 x ¾ In. 79 180020 Screw, Hex Hd, %-20 x ¾ In. 70 Flatwasher, Split, ¼ In. 70 Screw, Hex Hd, 5/16-18 x 3 ¼ In. 70 Engine Part 83 49993 Muffler			
78 68542 Decal, Caution 79 1800/20 Screw, Hex Hd, ¾-20 x ¾ In. 81 120380 Flatwasher, Split, ¼ In. 81 173063 Screw, Hex Hd, 5/16-18 x 3⅓ In. 82 Engine Part 83 49993 Muffler			
79 180020 Screw, Hex Hd, ½-20 x ¾ In. 80 120380 Flatwasher, Split, ¼ In. 173063 Screw, Hex Hd, 5/16-18 x 3½ In. Engine Part 83 49993 Muffler			
80 120380 Flatwasher, Spit, ¼ In. 81 173063 Screw, Hex Hd, 5/16-18 x 3½ In. 82 Engine Part 83 49993 Muffler			
81 173063 Screw, Hex Hd, 5/16-18 x 3½ In. 82 Engine Part 83 49993 Muffler			Screw, Hex Hd, ¼-20 x ¾ In.
82 Engine Part 83 49993 Muffler			Flatwasher, Split, ¼ In.
83 49993 Muffler		173063	Screw, Hex Hd, 5/16-18 x 31/2 In.
			Engine Part
84 Gasket, Muffler (Engine Part)		49993	
	84		Gasket, Muffler (Engine Part)

Replacement engines and parts are obtainable from Engine Manufacturer's authorized Service Stations who are also to be contacted in regard to the Engine Warranty. See your Engine Manual for location of these stations.

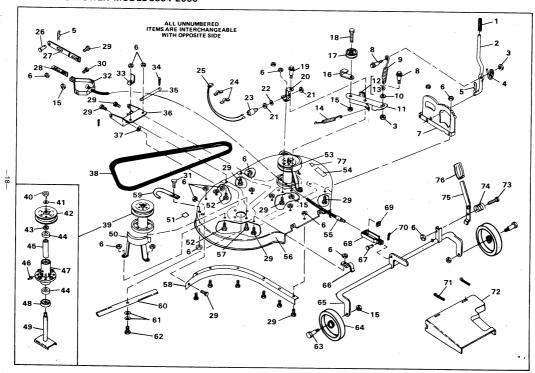


32" RIDING MOWER MODEL 3554-2000

	Key			Key	Т
	No.	Part No.	Description	No.	ı
	1	46478	Hand Grip	27	t
	2 3 4	49130	Lever, Clutch	28	ı
	3	9424215	Locknut, 1/4-20 Thd.	29	ı
	4	46561	Spring, Clutch Lever	30	ı
	5	8260	Hairpin Cotter	31	l
	6	9413447	Locknut, 5/16-18 Thd.	32	ı
	7	51986	Quadrant	33	ı
	8	46563	Shoulder Bolt	34	ı
	9	47357	Spring, Clutch Lever	35	l
	10	120392	Flatwasher, ¼ In.	36	ı
	11	53055	Idler Arm Assy (Incl. Nos. 12 & 13)	37	ı
	12	41471	Brake Pad	38	ı
	13	41601	Rivet, Brake Pad	39	
	14	35410	Spring	40	
	15	9413534	Locknut, %-16 Thd.	41	
	16	46477	Belt Retainer	42	
	17	46476	Pulley, Idler	43	
	18	122168	Screw, Hex Hd, %-16 x 1% In.	44	
	19	47516	Shoulder Bolt	45	
	20	47517	Bracket, Idler Arm	46	
	21	45877	Nut (lockout switch part)	47	
;	22	45878	Lockwasher (lockout switch part)	48	
	23	41204	Switch, Lockout	49	
	24	41482	Switch, Lockout Clip, Press	50	
	25	43038	Wire Assembly	51	
	26	47816	Pull Pin	52	
					-

	Key				П
	No.	Part No.	Description		ŀi
1	27	49059	Bar Hitch		Г
	28	49058	Lock Bracket		
i	29	120228	Screw, Hex Hd, 5/16-18 x % In.		
	30	120918	Screw, Hex Hd, 3/8-16 x 11/2 In.		
	31	122007	Screw, Hex Hd, 5/16-18 x 3/4 In.		
	32	50613	Pivot Bracket		
	33	47389	Bracket, Upstop		
	34	48675	Cotterpin, 3/16 x 11/4 In.		
	35	47814	Pin, Pivot		
	36	48676	Lift Support, Plate Assembly		
	37	996416	Flatwasher, % In.		
	38	47390	V-Belt		
	39	51446	Quill Assy (Incl. Nos. 39-48)		
	40	51445	Nut 7/16-20 Thd.		
	41	446248	Flatwasher		
	42	51442	Pulley	-	
	43	51441	Spacer	- [
	44	50697	Bearing	П	
	45	50818	Spacer	J	
	46	706	Grease Fitting		
	47	50702	Quill Housing	П	
	48	50616	Dust Shield		
	49	51439	Saddle & Shaft Assembly	1	
	50	47353	Cover, Pulley, L.H.		
	51	68542	Decal, Caution	ļ	
L	52	122017	Screw, Hex Hd, 5/16-18 x 1 In.	Į	

Key		
No.	Part No.	Description
53	47352	Cover, Pulley, R.H.
54	68882	Decal, Height Adjust
55	53037	Lift Cable
56	51948	Mower Deck
57	50634	Screw, Taptite, 5/16-18 x % In.
58	47354	Baffle, L.H.
59	51921	Skid
60	42433	Blade, 16 In.
61	2483	Formed Washer
62	39573	Screw, Hex Hd, 36-24 x 1 In.
63	23763	Wheel Axle
64	52584	Wheel, 6 In.
65	52612	Pivot Tube Assembly
66	51985	Support, Pivot Tube
67	39522	Pin, Clevis
68	39404	Clevis, Lift Cable
69	120372	Square Nut, 1/4-20 Thd.
70	121222	Cotterpin, 3/32 x 3/4 ln.
71	120123	Cotterpin /
72	47355	Chute Extension
73	122040	Screw, Hex Hd, 5/16-18 x 11/2 In
74	29170	Spring
75	49131	Lever, Height Adjust
76	20250	Hand Grip
77	68913	Decal, Blade Engage

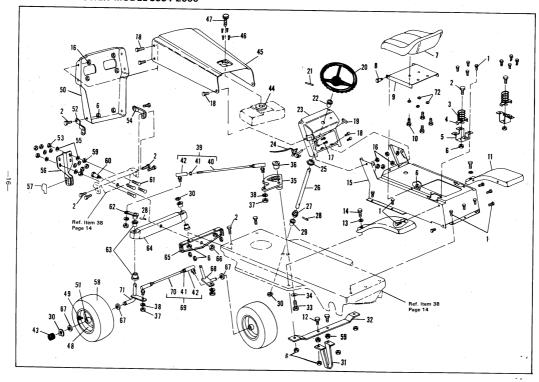


32" RIDING MOWER MODEL 3554-2000

Key No.	Part No.	Description
1	995346	*Screw, Taptite, ¼-20 x ½ In.
2	120228	*Screw, Hex Hd, 5/16-18 x % In.
3	49335	Spring, Seat
4	49339	Clip, Spring
5 6 7	49735	Bracket, Spring Support
6	9413447	Locknut, 5/16-18 Thd.
7	51866	Seat
8	20507	Shoulder Bolt
9	51072	Seat Bracket
10	120228	*Screw, Hex Hd, 5/16-18 x % In.
11	43970	Fender
12	122040	*Screw, Hex Hd, 5/16-18 x 11/2 In.
13	446363	*Flatwasher, 5/16 In.
14	122017	*Screw, Hex Hd, 5/16-18 x 1 in.
15	50029	Console Assembly
16	9424215	Locknut, Hex, 1/4-20 Thd
17	35287	Screw, Taptite, No. 8-32 x % In.
18	48900	Screw, Hex Wa. Hd, 1/4-20 x 1 In.
19	39486	Knob, Throttle Control Lever
20	47083	Steering Wheel
21	456836	Roll Pin
22	39432	Bearing, Steering
23	48839	Dash Assembly
24	50117	Lever, Throttle Control

24	50117	Lever, Throttle Control
*Standa	rd Hardware	Items - May Be Purchased Locally

	Key		
	No.	Part No.	Description
	25	39492	Retaining Ring
	26	44008	Shaft, Steering
	27	44009	Pinion Gear
	28	454565	Roll Pin
	29	39580	Bearing, Steering
	30	36625	"E" Ring
	31	49776	Bracket, Deck Guide
	32	43964	Bracket, Deck Guide Support
	33	39573	Screw, Hex Hd Lock, %-24 x 2 In
	34	2483	Spring Washer
	35	44010	Sector Gear
	36	44011	Shoulder Bolt, Sector Gear
	37	120369	*Nut, Hex, %-24 Thd.
	38	120382	*Lockwasher, Split, % In.
	39	44059	Drag Link Assembly
	40	44060	Drag Link
	41	124925	Nut, Hex, %-24 Thd
	42	21275	Ball Joint
	43	40394	Hub Cap
	. 44	44843	Pad, Vibration
ĺ	45	49615	Hood
	46	49050	Screw, Plastite, ¼-10 x ¾ In.
	47	51578	Gas Gauge
	48	39937	Wheel w/Rearing

Key No.	Part No.	Description
49 50	24167 49999	Valve Stem Grille
51	39979	Bearing
52	49041	Bracket, Grille Support, L.H.
53	9413534	Locknut, %-16 Thd.
54	49040	Bracket, Grille Support, R.H.
55	274517	*Flatwasher, % In.
56	47830	Bracket, Deck Hanger
57	68644	Decal, Hanger
58 59	41096	Tire
60	271190	Nut, Keps, %-16 Thd.
61	29616 45892	Shoulder Bolt, Axle Pivot
62	49447	Carriage Bolt, %-1.6 x 1½ In.
63	50546	Arm, Steering Bearing, Spindle
64	50549	Front Axle Assembly
65	43988	Bracket, Front Axle Support
66	274654	Locknut, Hex, ¼-20 Thd.
67	642	Flatwasher
68	44002	Spindle, Right
69	48762	Tie Rod Assembly
70	48764	Tie Rod
71	4404	Spindle, Left
72	120638	Lockwasher, Split, 5/16 In. I.D.

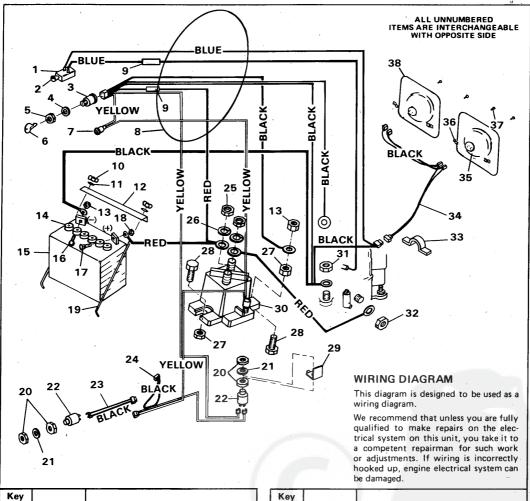

Key]	
No.	Part No.	Description
1	40997	Switch w/Knob, Headlight
2	40778	Knob, Headlight Switch
3	44745	Switch, Ignition w/Keys
4	138557	Lockwasher (Switch Part)
5	48140	Locknut (Switch Part)
6	49643	Key, Ignition
7	45333	Ignition Light
8	53092	Wire Harness Assembly
9	49211	Fuse
10	997208	Wing Nut, Nylock, 1/4-20 Thd.
11	120386	Flatwasher, ¼ In.
12	40243	Bracket, Battery, Hold-Down
13	271172	Nut, Keps, ¼-20 Thd.
14	40892	Cap, Battery
15	52936	Battery
16	126203	Carriage Bolt, ¼-20 x % In.
17	126216	Carriage Bolt, 5/16-18 x ¾ In.
.18	271184	Nut, Keps, 5/16-18 Thd.
19	40234	Battery Rod

	Key	1	
	No.	Part No.	Description
L	20	45877	Nut (Lockout Switch Part)
۱	21	45878	Lockwasher (Lockout Switch Part)
	22	41204	Switch, Lockout
	23	43038	Wire Assembly, Deck Switch
	24	42071	Wire Assembly, By-Pass
	25	120368	Locknut, Hex, 5/16-24 Thd.
	26	120638	Lockwasher, Split, 5/16 In.
	27	9424215	Locknut, Hex, ¼-20 Thd.
	28	121900	Screw, Hex Hd., 1/4-20 x 1 In.
	29	49734	Bracket, Switch Mounting
	30	52323	Solenoid
	31	9413447	Locknut, Hex, 5/16-18 Thd.
	32		Engine Part
	33	41482	Wire Clip, Press
	34	42103	Lead Wire, Headlight
	35	42318	Headlamp
1	36	41373	Clip, Headlamp Mounting
	37	9426210	*Screw, Taptite, No. 8-18
Į	38	44638	Ring, Headlamp
			

170

4.0

Sec. 1

200

^{*}Standard Hardware Item - May Be Purchased Locally.