


# REPAIR PARTS

## 36" RIDING MOWER MODEL 3560-001

**NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS**  
Use of service/replacement parts other than original equipment parts may void your warranty

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE

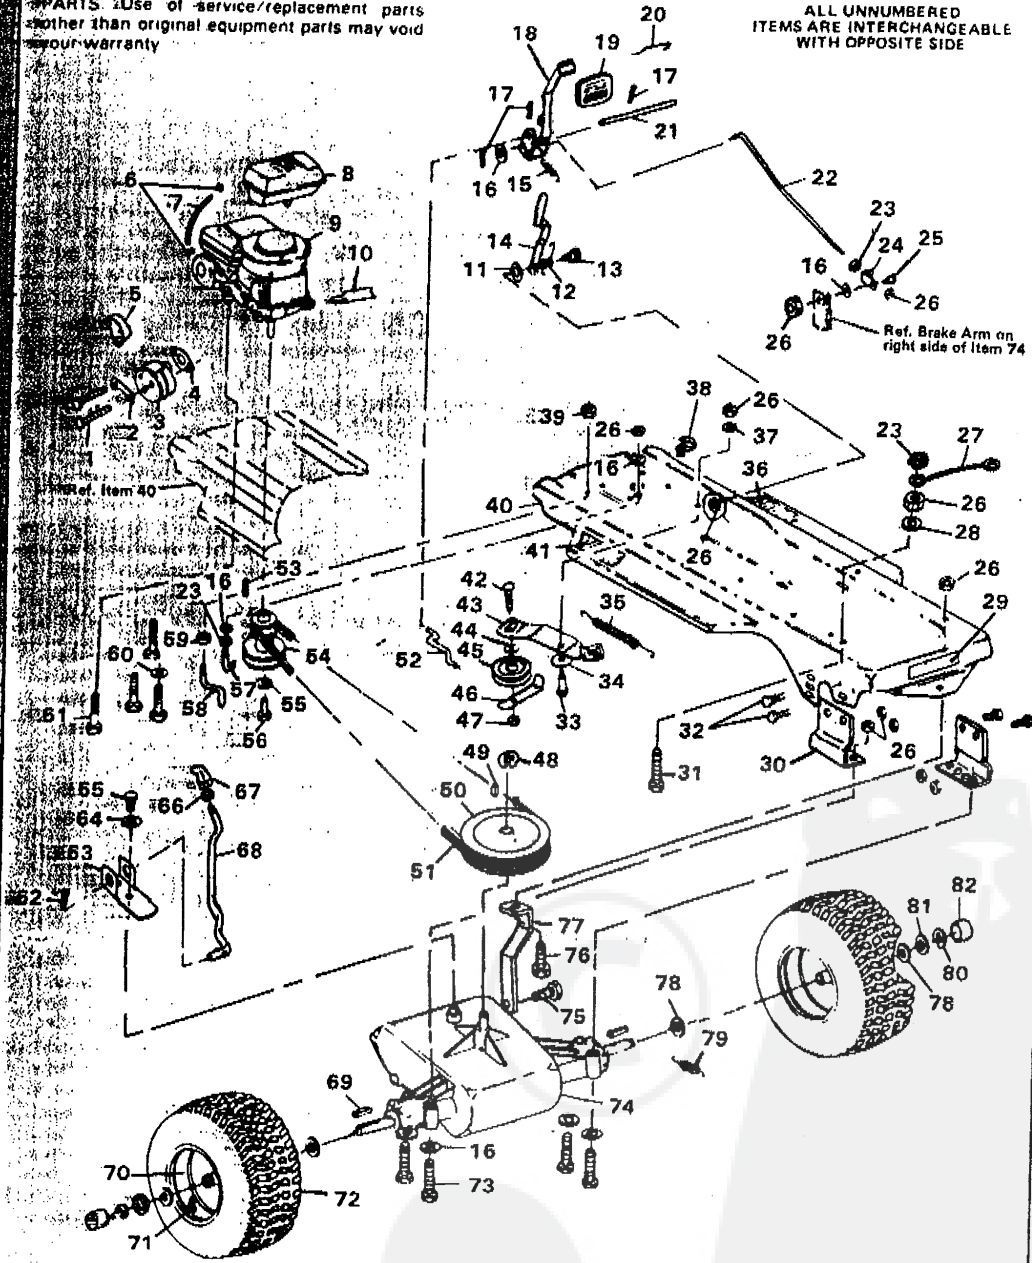

### 36" RIDING MOWER MODEL 3560-001


ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS:  
 1. The PART NUMBER; 2. The PART NAME; 3. QUANTITY DESIRED; 4. The MODEL NUMBER (As shown on Model Plate).  
 SEND PART ORDERS AS PER INSTRUCTIONS ON THE FRONT PAGE.  
 YOUR UNIT IS RIGHT HAND (RH) OR LEFT HAND (LH) AS YOUR STAND BEHIND IT.  
 DO NOT USE KEY NUMBERS WHEN ORDERING REPAIR PARTS, ALWAYS USE PART NUMBERS.  
 All replacement parts will be supplied in current production colors or in a neutral color.  
 A handling fee is applicable to small parts orders.

Key No.	Part No.	Description	Key No.	Part No.	Description
1	173083	Screw, Hex Hd, 5/16-18 x 3-1/2 In.	43	53762	Idler Arm
2		Engine Part	44	274517	Flatwasher, 25/64 In.
3	57908	Muffler	45	35374	Pulley, Idler
4		Gasket, Muffler (Engine Part)	46	39659	Belt Retainer
5	54767	Heat Shield, Muffler	47	9413534	Locknut, Hex, 3/8-16 Thd.
6	41008	Clip, Gas Line	48	22053	Retaining Ring
7	42258	Gas Line	49	3021	Key, Woodruff, No. 606
8	48812	Gas Tank	50	55520	Pulley, Transaxle
9		Engine ~See Footnote Below	51	54758	V-Belt
10	54873	Trough, Oil Drain	52	43980	Rod, Clutch
11	32327	Wave Washer	53	33200	Key, Engine Pulley
12	43988	Spring, Parking Brake	54	55796	Pulley, Engine
13	40974	Shoulder Bolt, Parking Brake	55	120383	Lockwasher, Split, 7/16 In.
14	50980	Arm, Parking Brake	56	123567	Screw, Hex Hd, 7/16-20 x 1 In.
15	50562	Spring, Clutch Pedal	57	49896	Belt Guide, Trans. Drive Belt
16	120393	Flatwasher, 5/16 In.	58	50653	Belt Guide, Blade Drive
17	121222	Pin, Cotter, 3/32 x 3/4 In.	59	271190	Nut, Hex, Keys, 3/8-16 Thd.
18	55722	Brake Pedal Assembly	60	138489	Washer, Ext. Lock, 3/8 In.
19	53979	Rubber Pad, Brake Pedal	61	50947	Screw, Hex Hd, 3/8-16 x 1-1/4 In.
20	55025	Retainer, Pad, Brake Pedal	62	137185	Pin, Cotter, 1/8 x 1 In.
21	43956	Shaft, Brake-Clutch Pedal	63	56256	Shift Bracket
22	54715	Rod, Brake	64	57157	Washer
23	271184	Nut, Hex, Keys, 5/16-18 Thd.	65	56255	Screw, Nylock, 1/4-28 x 3/4 In.
24	54723	Bracket, Brake Rod	66	120238	Jam Nut, 1/2-13 Thd.
25	20507	Shoulder Bolt	67	59284	Knob, Gear Shift
26	9413447	Locknut, Hex 5/16-18 Thd.	68	55528	Shift Lever
27	55511	Ground Wire	69	39628	Key, 3/16 x 3/16 x 2-1/2 In.
28	138485	Washer, Ext. Lock, 5/16 In.	70	41105	Wheel, Rear
29	68746	Decal, Caution	71	24167	Valve Stem
30	53768	Bracket, Axle	72	41106	Tire
31	122017	Screw, Hex Hd, 5/16-18 x 1 In.	73	180112	Screw, Hex Hd, 5/16-18 x 2-3/4 In.
32	120228	Screw, Hex Hd, 5/16-18 x 5/8 In.	74	Transaxle	*Peerless 4 speed Model 900
33	41890	Shoulder Bolt	75	35498	Screw, Hex Wa Tap, 5/16-18 x 3/4 In.
34	4107	Washer	76	122007	Screw, Hex Hd, 5/16-18 x 3/4 In.
35	49276	Spring, Main Drive	77	54713	Bracket, Stabilizer
36	54618	Foot Pad, R.H.	78	642	Flatwasher
37	45602	Washer	79	35410	Spring, Brake Return
38	54888	Retainer, Wire	80	36625	"E" Ring
39	41529	Locknut, 3/8-16 Thd.	81	42815	Flatwasher
40	56570	Main Frame	82	40394	Hub Cap
41	54955	Foot, pad, L.H.	83	83019	Operator's Manual (Not Illustrated)
42	45892	Carriage Bolt, 3/8-16 x 1-1/2 In.	84	302097	Repair Parts Manual (Not Illustrated)

- (\*) Standard Hardware Items - May Be Purchased Locally
- (^) Contact Tecumseh/Peerless authorized service dealer for parts and warranty.
- (~) Contact Engine Manufacturer's authorized service dealer (See Engine Manual) for parts and warranty.

36" RIDING MOWER MODEL 3560-001

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/replacement parts other than original equipment parts may void your warranty.

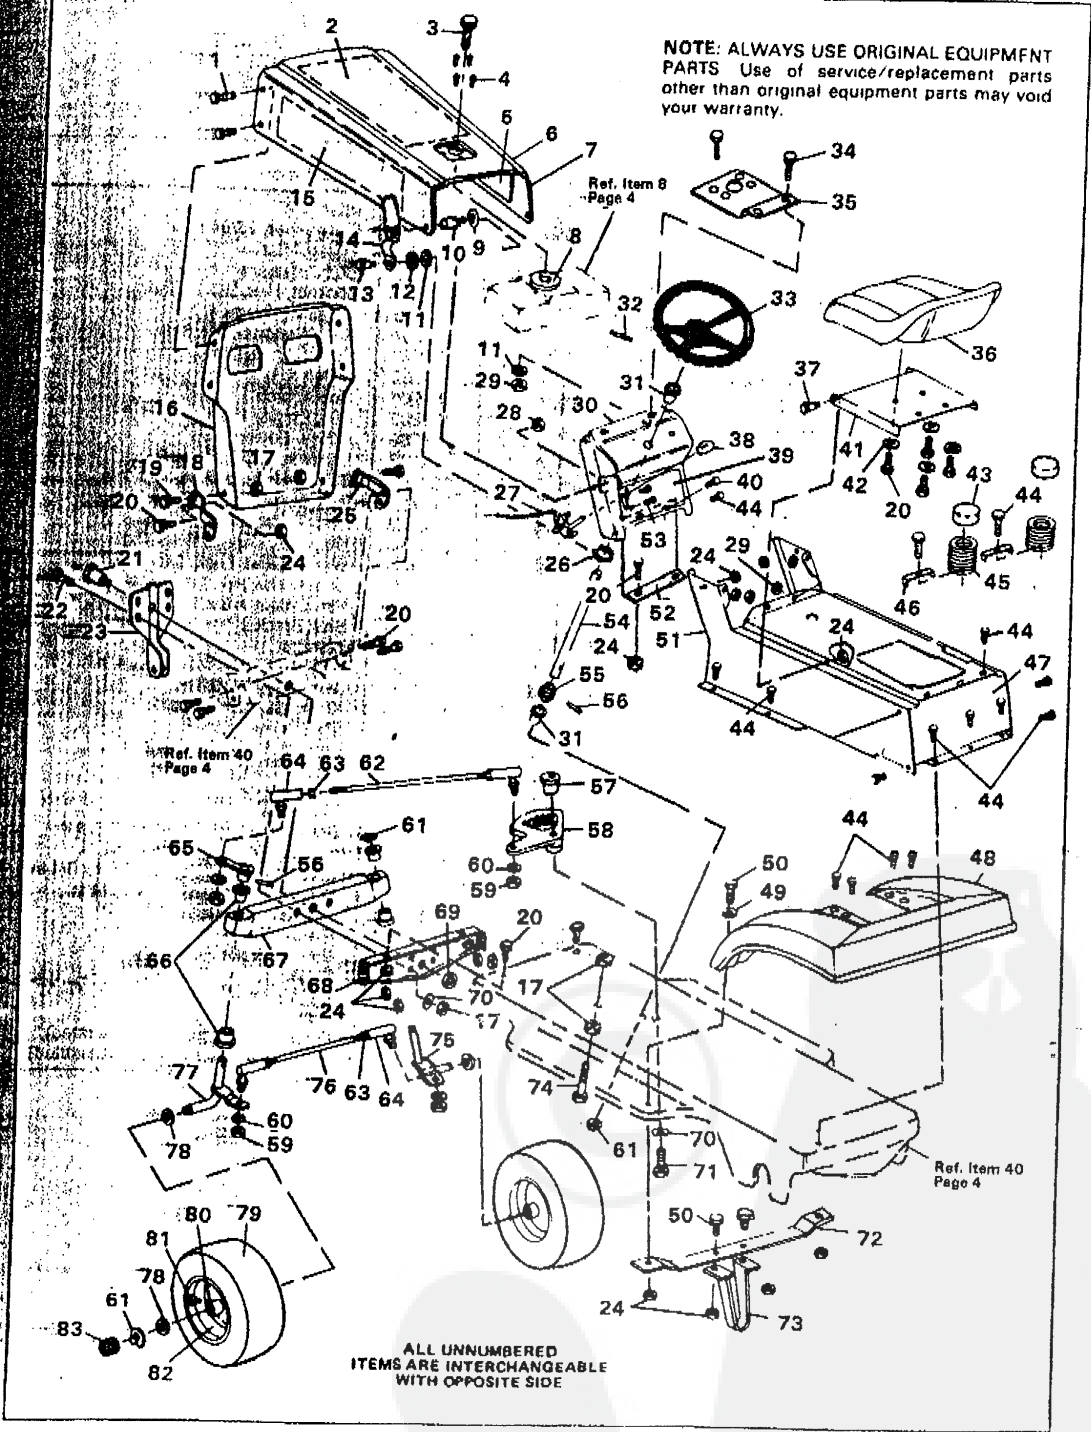


36" RIDING MOWER MODEL 3560-001

Key No.	Part No.	Description	Key No.	Part No.	Description
1	57215	Screw, Plastite, 5/16-9 x 3/4 In.	43	302099	Cover, Seat Spring
2	55832	Foam Pad, Hood Top	44	995346	Screw, Taplite, 1/4-20 x 1/2 In.
3	50988	Gas Gauge	45	56220	Spring, Seat
4	49050	Screw, Plastite, 1/4-20 x 3/4 In.	46	300284	Clip, Seat Spring
5	55834	Foam Pad, Hood, R.H.	47	56235	Cover, Rear Console
6	53954	Hood	48	52470	Fender Assembly
7	55040	Edgine, Hood	49	446363	Flatwasher, 5/16 In.
8	54885	Pad, Vibration	50	122017	Screw, Hex Hd, 5/16-18 x 1 In.
9	138538	Lockwasher, Int. Tooth, 5/16 In.	51	56226	Console Assembly
10	53446	Pin, Hood Latch	52	55537	Bulkhead, Console
11	120393	Flatwasher	53	35287	Screw, Taplite, No. 8-32 x 3/8 In.
12	120394	Flatwasher, 13/32 In.	54	44008	Shaft, Steering
13	8482	Shoulder Bolt	55	44009	Pinion Gear
14	57159	Latch, Hood	56	454565	Roll Pin
15	55833	Foam Pad, Hood, L.H.	57	44011	Shoulder Bolt, Sector Gear
16	53402	Grille	58	48543	Sector Gear
17	9413534	Locknut, 3/8-16 Thd.	59	120369	Nut, hex, 3/8-14 Thd.
18	56259	Bracket, Grille Support, L.H.	60	120382	Lockwasher, Split, 3/8 In.
19	120233	Screw, Hex Hd, 3/8-16 x 1 In.	61	36625	"E" Ring
20	120228	Screw, Hex Hd, 5/16-18 x 5/8 In.	62	58190	Drag Link
21	50720	Shoulder Bolt, Axle Pivot	63	124925	Nut, 3/8-24 Thd.
22	122201	Screw, Hex Hd, 3/8-16 x 2-3/4 In.	64	21275	Bell Joint
23	56281	Bracket, Deck Hanger	65	49447	Arm, Steering
24	9413447	Locknut, Hex, 3/16-18 Thd.	66	50546	Bearing, Spindle
25	56260	Bracket, Grille Support, R.H.	67	56400	Front Axle Assembly
26	39492	Retaining Ring	68	56362	Bracket, Front Axle Support
27	50117	Lever, Throttle Control	69	274654	Locknut, Hex, 1/4-20 Thd.
28	45174	Locknut, Wide Flange, 1/4-20 Thd.	70	2483	Spring Washer
29	9424215	Locknut, Hex, 1/4-20 Thd.	71	39573	Screw, Hex hd, Lock, 3/8-24 x 1 In.
30	53951	Dash Assembly	72	43964	Bracket, Deck Guide Support
31	54902	Bearing, Steering	73	44500	Bracket, Deck Guide
32	456836	Spring Pin, 1/4 x 2-1/4 In.	74	49930	Upstop Bolt
33	301251	Steering Wheel	75	55518	Spindle, Right
34	120854	Screw, Hex Hd, 1/4-20 x 5/8 In.	76	55666	Tie Rod
35	55387	Bracket Support, Gas Tank	77	55519	Spindle, Left
36	57455	Seat	78	642	Flatwasher, 3/4 In.
37	20507	Shoulder Bolt	79	41108	Tire
38	50807	Knob, Throttle Control Lever	80	39979	Bearing
39	70085	Decal, Lower Dash	81	24167	Valve Stem
40	274672	Screw, Hex Wa Hd, 1/4-20 x 5/8 In.	82	39829	Wheel w/Bearing
41	57417	Seat Bracket	83	40394	Hub Cap
42	120638	Lockwasher, Split, 5/16 In.			

(\*) Standard Hardware Items - May Be Purchased Locally.

## 36" RIDING MOWER MODEL 3560-001

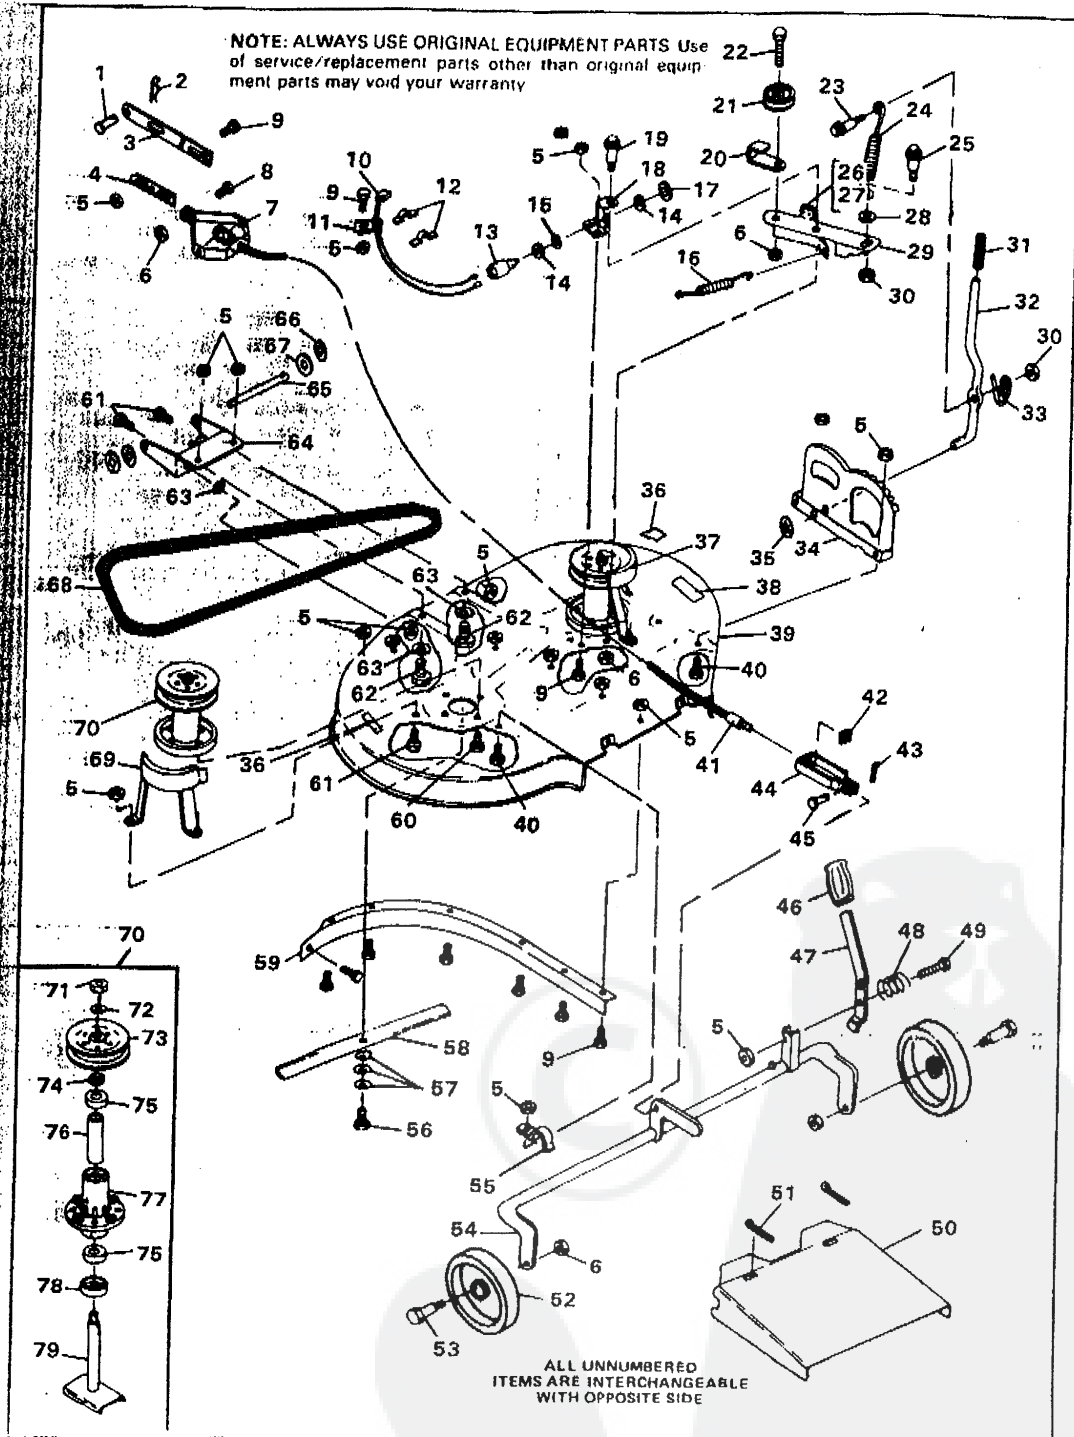



## 36" RIDING MOWER MODEL 3560-001

Key No.	Part No.	Description	Key No.	Part No.	Description
1	47816	Pull Pin	41	55880	Lift Cable
2	56180	Hairpin cotter	42	120372	Nut, Square, 1/4-20 Thd.
3	49059	Bar Hitch	43	8260	Hairpin cotter
4	49058	Lock Bracket	44	300703	Clevis, Lift Cable
5	9413447	Locknut, 5/16-18 Thd.	45	39522	Pin, clevis
6	9413534	Locknut, 3/8-16 Thd.	46	20250	Hand Grip
7	50613	Pivot Bracket	47	49131	Lever, Height Adjust
8	120918	Screw, Hex Hd, 3/8-16 x 1-1/2 In.	48	53246	Spring
9	120228	Screw, hex Hd, 5/16-18 x 5/8 In.	49	120696	Screw, hex Hd, 5/16-18 x 2-1/4 In.
10	48851	Wire Assembly	50	50993	Chute Extension
11	57569	Retainer, Wire	51	120123	Pin, Cotter, 1/8 x 1-1/14 In.
12	41482	Clip, Press	52	52584	Wheel
13	41204	Switch, Lockout	53	23763	Wheel Axle
14	45877	Nut (Lockout Switch Part)	54	52613	Pivot Tube Assembly
15	45878	Lockwasher (Lockout Switch Part)	55	51985	Support, Pivot Tube
16	35410	Spring	56	39573	Screw, Hex Hd, 3/8-24 x 1 In.
17	56635	Nut, Hex	57	2483	Formed Washer
18	47517	Bracket, Idler Arm	58	56821	Blade, 18 In.
19	47516	Shoulder Bolt	59	55655	Baffle, L.H.
20	300844	Belt Retainer	60	50634	Screw, Tapfit, 5/16-18 x 7/8 In.
21	300841	Pulley, Idler	61	122017	Screw, hex Hd, 5/16-18 x 1 In.
22	122168	Screw, hex Hd, 3/8-16 x 1-3/8 In.	62	122007	Screw, Hex Hd, 5/16-18 x 3/4 In.
23	53696	Shoulder Bolt	63	998416	Flatwasher, 3/8 In.
24	52636	Spring, Clutch Lever	64	48676	Lift Support, Plate Assembly
25	48563	Shoulder Bolt	65	55724	Pin, Pivot
26	41471	Brake Pad	66	20864	"E" Ring
27	41601	Rivet, Brake Pad	67	998425	Flatwasher
28	120392	Flatwasher, 9/32 In.	68	48044	V-Belt
29	53055	Idler Arm Assy.(Incl. Nos. 26 & 27)	69	46365	Cover, Pulley, L.H.
30	9424215	Locknut, 1/4-20 Thd.	70	56424	Quill Assy.(Incl. Nos. 71-79)
31	46478	Hand Grip	71	51445	Locknut, Flange
32	300910	Lever, Clutch	72	56365	Flatwasher
33	46561	Spring, Clutch Lever	73	56390	Pulley
34	53247	Quadrant	74	51449	Spacer
35	53697	Push Nut	75	49562	Bearing
36	68746	Decal, Caution	76	50818	Spacer, Tube
37	46364	Cover, Pulley, R.H.	77	55547	Quill Casting
38	68750	Decal, Height Adjust	78	50616	Dust Shield
39	55663	Mower Deck	79	58425	Saddle and Shaft Assembly
40	120834	Screw, Hex Hd, 5/16-18 x 1/2 In.			

(\*) Standard Hardware Items - May Be Purchased Locally.

36" RIDING MOWER MODEL 3560-001

Key No.	Part No.	Description	Key No.	Part No.	Description
1	39463	Ammeter	20	45878	Lockwasher (Lockout Switch Part)
2	300626	Key, Ignition	21	45877	Nut (Lockout Switch Part)
3	48140	Locknut, (Switch Part)	22	41204	Switch, Lockout
4	138557	Lockwasher (Switch Part)	23	48651	Wire Assembly, Deck Switch
5	300687	Switch, Ignition	24	42071	Wire Assembly, By-Pass
6	49211	Fuse	25	9424215	Locknut, Hex, 1/4-20 Thd.
7	56750	Wire Harness Assembly	26	49734	Bracket, Switch Mounting
8	120375	*Nut, hex, 1/4-20 Thd.	27	187745	*Screw, Hex Hd, 1/4-20 x 3/4 In.
9	120380	*Lockwasher, Split, 1/4 In.	28	53716	Solenoid
10	120392	*Flatwasher, 9/32 In.	29	138485	Lockwasher, Ext. Tooth, 5/16 In.
11	56360	Bracket, Battery Hold-Down	30	120368	Locknut, Hex, 5/16-24 Thd.
12	271184	*Nut, Keps, 5/16-18 Thd.	31		Engine Part
13	271172	*Nut, Keps, 1/4-20 Thd.	32	54888	Retainer, Wire
14	55511	Ground Wire	33	41482	Wire Clip, Press
15	52936	Battery	34	58189	Lead Wire, Headlight
16	126203	*Carriage Bolt, 1/4-20 x 5/8 In.	35	50688	Screw, Hex Wa Hd, No. 10-14 x 1/2 In.
17	126216	*Carriage Bol, 5/16-18 x 3/4 In.	36	52571	Bezel, Headlight
18	40234	Battery Rod	37	52572	Bulb, Headlight
19	56635	Nut, hex, 15/32-32 Thd.	38	52570	Lens, Headlight

(\*) Standard Hardware Items - May Be Purchased Locally.

