


MODEL 385009x98B

REPAIR PARTS CHASSIS & HOOD

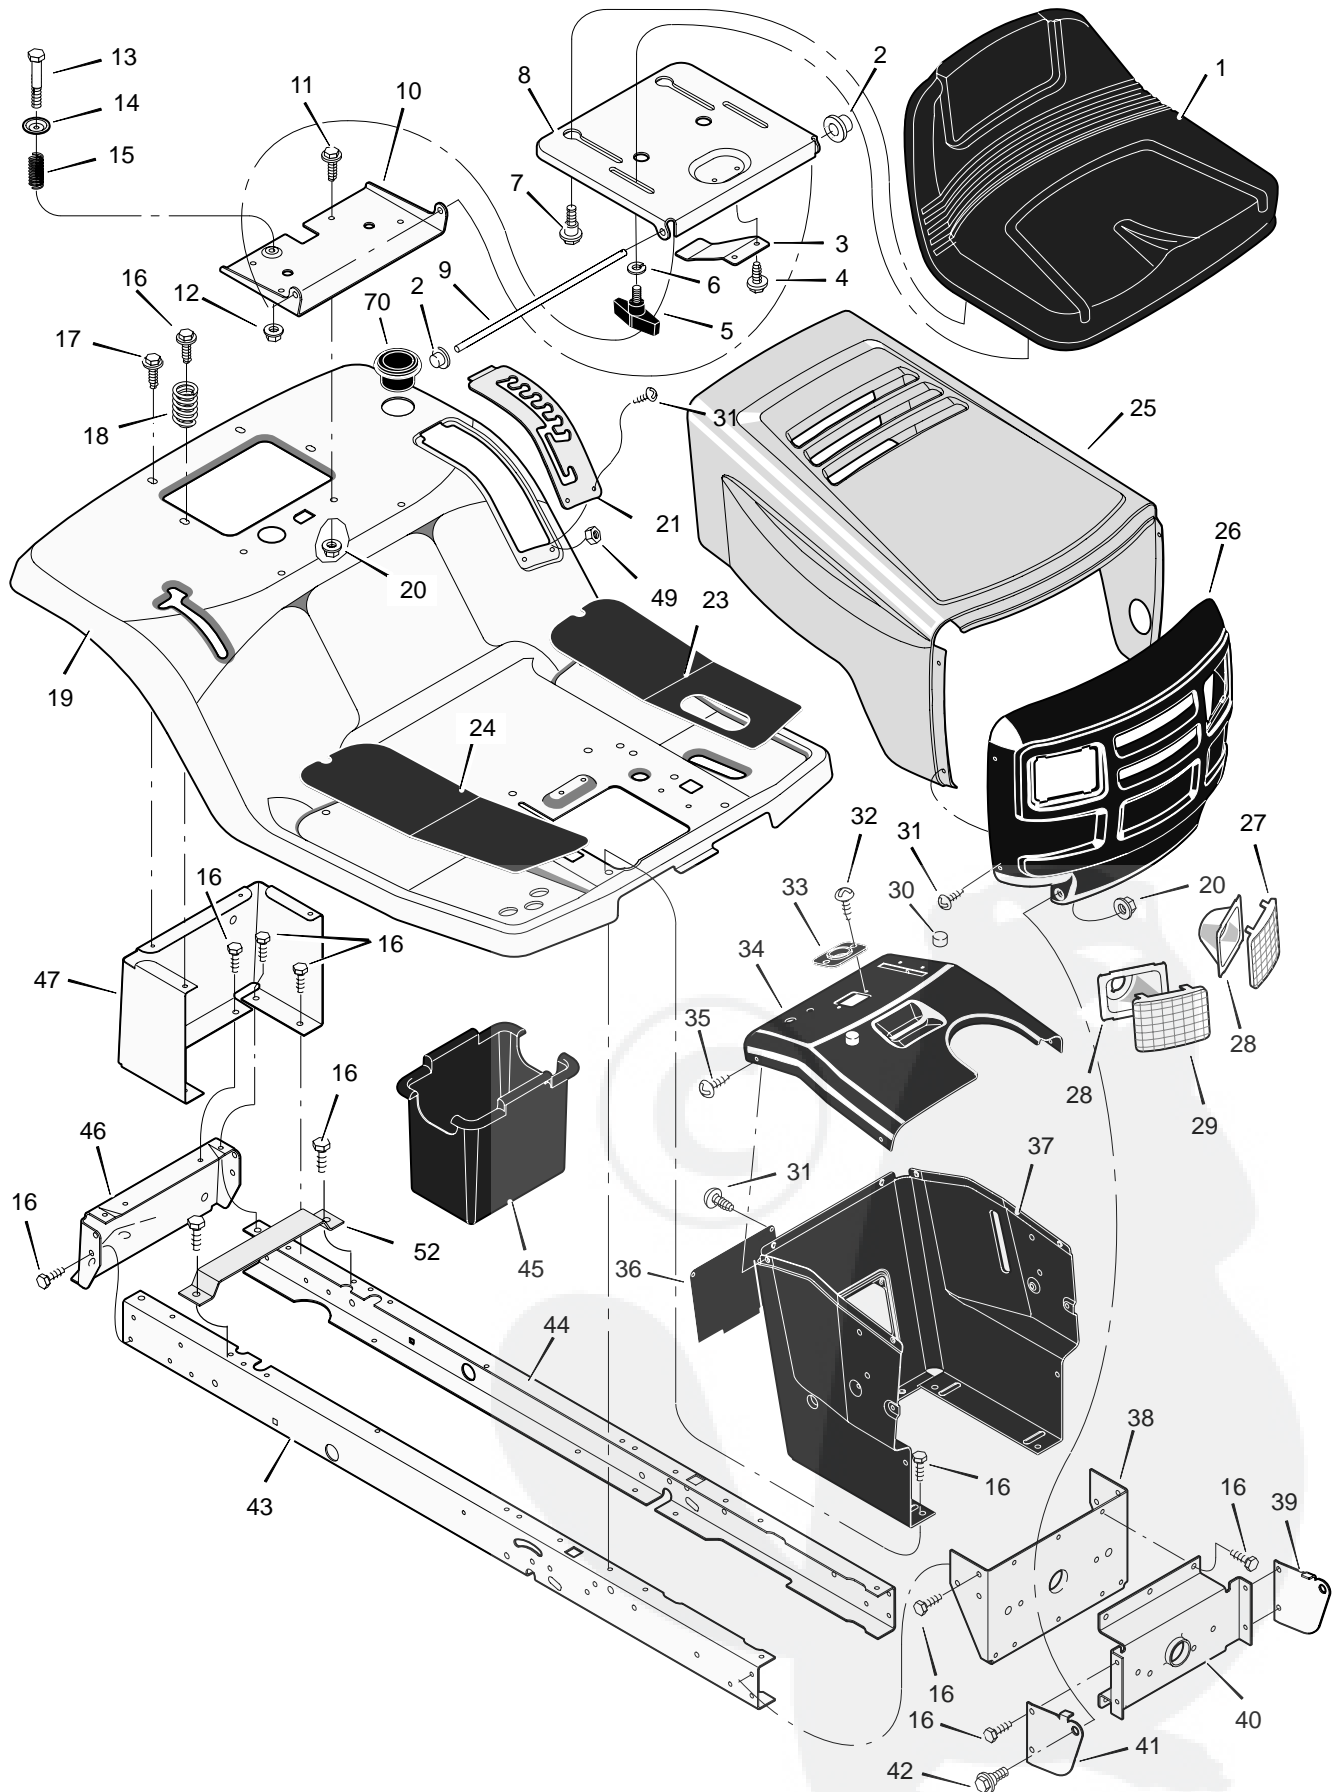


MODEL 385009x98B

REPAIR PARTS CHASSIS & HOOD

| Key No. | Description | Part No. | Key No. | Description | Part No. |
|---------|----------------|-------------|---------|-------------------------------|-------------|
| 1 | Seat | 690566 | 28 | Bezel | 094807 Z |
| 2 | Cap, Push On | 028x23 | 29 | Lens, Right | 094080 |
| 3 | Spring | 094057 | 30 | Bumper | 094376 |
| 4 | Screw | 26x229 | 31 | Screw | 26x270 |
| 5 | Bolt, Wing | 1001054 | 32 | Screw | 26x238 |
| 6 | Washer | 017x47 Z | 33 | Bearing, Steering | 1001491 |
| 7 | Bolt, Shoulder | 009x56 | 34 | Dash | 1001584E700 |
| 8 | Support, Seat | 094154E700 | 35 | Screw | 26x201 |
| 9 | Rod, Pivot | 094156 Z | 36 | Panel, Access | 093007E700 |
| 10 | Bracket, Pivot | 094153E700 | 37 | Support, Dash | 095318E700 |
| 11 | Bolt | 001x45 | 38 | Bracket, Rear Hanger | 1001270E700 |
| 12 | Nut | 015x89 | 39 | Support, Left Grille | 094083E700 |
| 13 | Bolt, Shoulder | 009x55 | 40 | Axle, Hanger | 094007E700 |
| 14 | Washer | 094155 Z | 41 | Support, Right Grille | 094082E700 |
| 15 | Spring | 164x31 | 42 | Bolt, Shoulder | 009x58 |
| 16 | Screw | 26x249 | 43 | Frame, Right | 1001268E701 |
| 17 | Screw | 26x263 | 44 | Frame, Left | 1001269E701 |
| 18 | Spring | 164x30 | 45 | Container, Battery | 690424 |
| 19 | Deck, Seat | 1001558E245 | 46 | Plate, Hitch | 1001002E700 |
| 20 | Nut | 015x88 | 47 | Panel, Rear | 690434E700 |
| 21 | Plate, Index | 094829E700 | 49 | Nut | 015x81 |
| 23 | Mat, Left | 094999 | 50 | Screw | 26x277 |
| 24 | Mat, Right | 094998 | 52 | Support, Battery | 690482E701 |
| 25 | Hood | 1001492E245 | 70 | Holder, Cup | 1001542 |
| 26 | Grille | 094079E700 | — | Instruction Book & Parts List | F-030719L |
| 27 | Lens, Left | 094081 | | | |

MODEL 385009x98B

REPAIR PARTS MOTION DRIVE

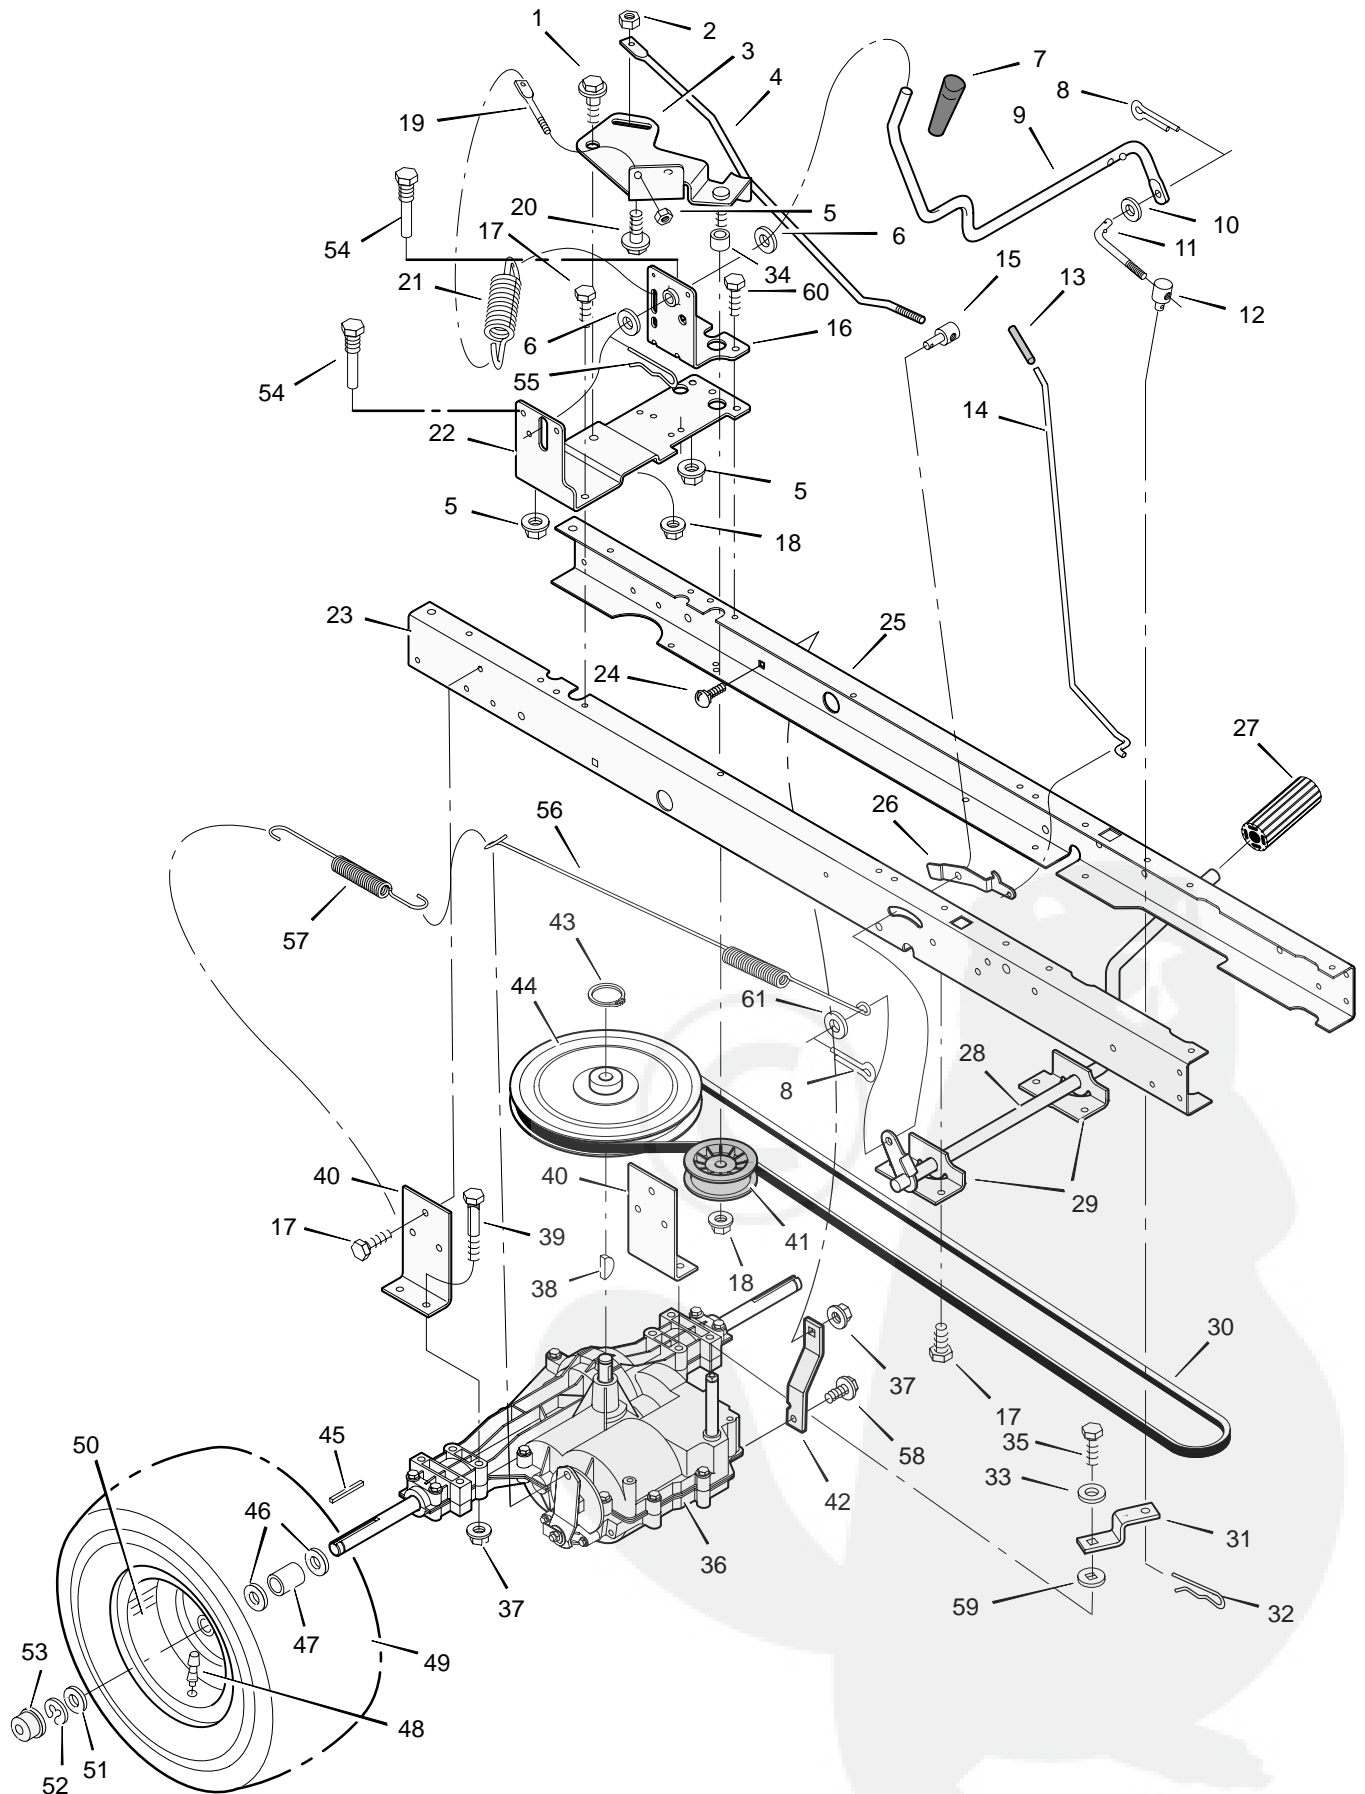

MODEL 385009x98B

REPAIR PARTS MOTION DRIVE


| Key No. | Description | Part No. | Key No. | Description | Part No. |
|---------|------------------------|-------------|---------|----------------------------|------------|
| 1 | Bolt, Shoulder | 009x39 | 32 | Pin, Hair | 0031x6 |
| 2 | Nut, Hex | 015x89 | 33 | Washer | 017x38 |
| 3 | Arm, Idler | 690173 Z | 35 | Bolt | 06x105 |
| 4 | Rod, Clutch | 094041 Z | 36 | Transaxle ** | — |
| 5 | Nut | 015x79 | 37 | Nut | 015x88 |
| 6 | Washer | 17x102 | 38 | Key, Woodruff | 020697 |
| 7 | Grip | 092697 | 39 | Bolt | 01x155 |
| 8 | Pin, Cotter | 030x20 | 40 | Bracket, Transaxle | 094008E701 |
| 9 | Lever, Shift | 094043 Z | 41 | Pulley | 690409 |
| 10 | Washer | 017x47 | 42 | Bracket, Transaxle Support | 094433E700 |
| 11 | Link, Shift | 094044 Z | 43 | E-Ring | 0011x7 |
| 12 | Nut, Adjuster | 021920 | 44 | Pulley, Drive | 095094 |
| 13 | Grip | 091079 | 45 | Key, Square | 021553 |
| 14 | Rod, Parking Brake | 1001245 Z | 46 | Washer | 17x160 |
| 15 | Nut, Adjuster | 094815 | 47 | Spacer, Transaxle | 690554 Z |
| 16 | Bracket, Shift Pivot | 1001303 Z | 48 | Stem, Valve | 024373 |
| 17 | Screw | 26x249 | 49 | Tire * | 091923 |
| 18 | Nut | 015x84 | — | Tube | 407049 |
| 19 | Mount, Stud Spring | 094042 Z | 50 | Wheel & Tire Assembly | 92288-601 |
| 20 | Bolt, Shoulder | 009x54 | 51 | Washer | 17x195 |
| 21 | Spring, Extension | 165x116 | 52 | E-Ring | 0011x3 |
| 22 | Bracket, Right Shifter | 1001302E701 | 53 | Hub Cap | 094618 |
| 23 | Frame, Right | 1001268E701 | 54 | Guide, Belt | 093349 |
| 24 | Bolt, Carriage | 002x53 | 55 | Pin, Hair | 0031x4 |
| 25 | Frame, Left | 1001269E701 | 56 | Spring, Extension | 165x115 |
| 26 | Latch, Parking Brake | 094045 Z | 57 | Spring, Extension | 165x92 |
| 27 | Pedal | 021544 | 58 | Screw | 26x216 |
| 28 | Lever, Brake/Clutch | 094038E700 | 59 | Washer | 17x148 |
| 29 | Bracket, Pedal | 1001117E701 | 60 | Screw | 26x267 |
| 30 | Belt, Motion Drive | 037x87 | 61 | Washer | 17x169 |
| 31 | Yoke, Shift | 094031 Z | | | |

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

** For information on Replacement Parts see the Central Parts Distributor in your area.

MODEL 385009x98B

REPAIR PARTS STEERING

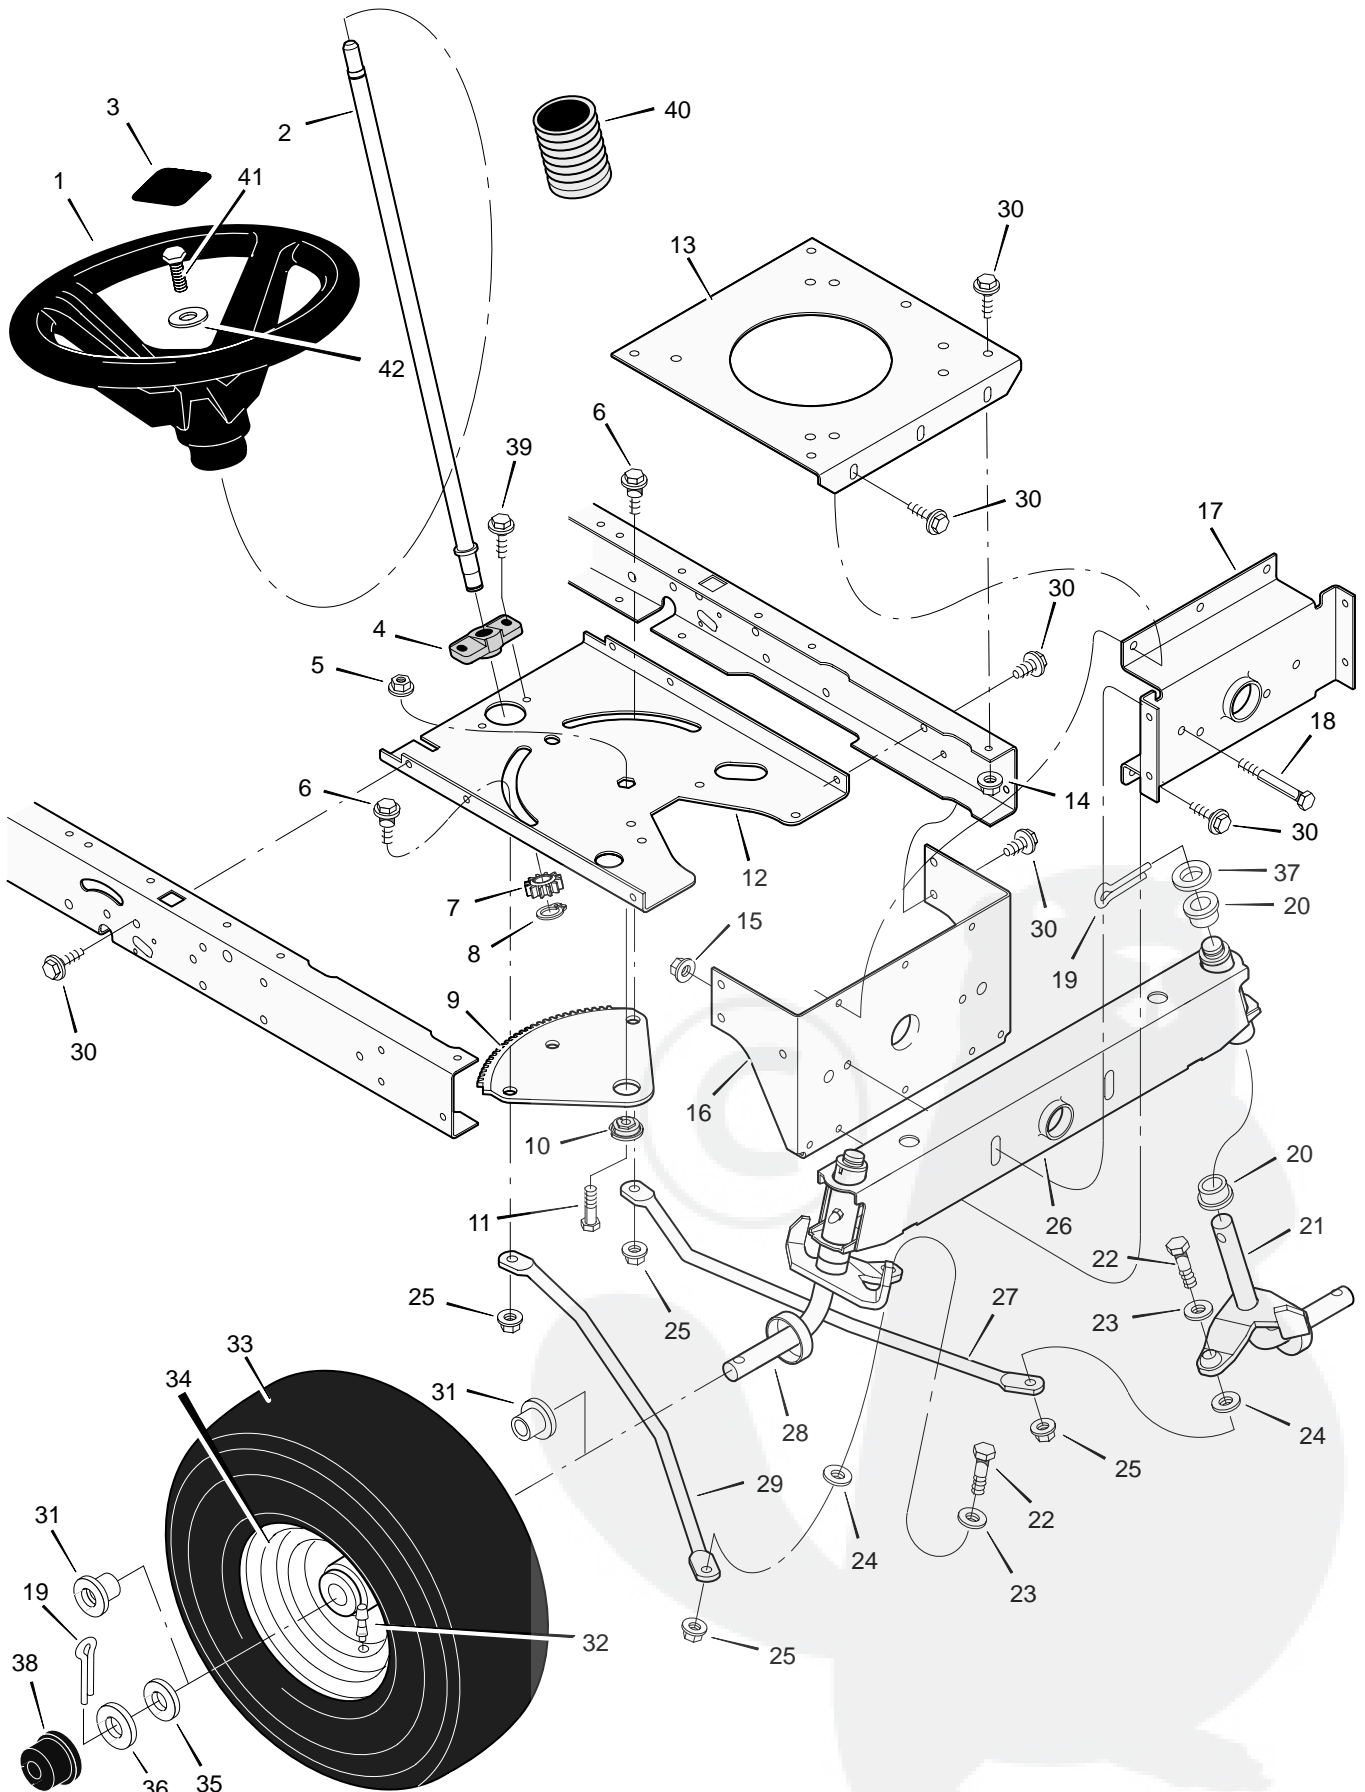

MODEL 385009x98B


REPAIR PARTS STEERING

| Key No. | Description | Part No. | Key No. | Description | Part No. |
|---------|------------------------|-------------|---------|-------------------------|------------|
| 1 | Wheel, Steering | 095336 | 23 | Washer | 17x104 |
| 2 | Post, Steering | 690625 | 24 | Washer | 017x53 Z |
| 3 | Insert, Steering Wheel | 095336 | 25 | Nut, Flange | 015x84 |
| 4 | Bearing | 094124 | 26 | Axle Assembly | 7601037 |
| 5 | Nut, Flange | 15x111 | 27 | Drag Link, Left | 095329E701 |
| 6 | Bolt, Shoulder | 009x57 | 28 | Spindle Assembly, Right | 094575E701 |
| 7 | Gear, Pinion | 690183 | 29 | Drag Link, Right | 095328E701 |
| 8 | Ring, Snap | 011x25 | 30 | Screw | 26x249 |
| 9 | Gear, Sector | 094121 | 31 | Bearing, Wheel | 091334 |
| 10 | Bearing | 094123 | 32 | Stem, Valve | 024373 |
| 11 | Bolt | 001x84 | 33 | Tire * | 091923 |
| 12 | Plate, Steering | 1001121E701 | — | Tube | 407924 |
| 13 | Plate, Engine | 094006E700 | 34 | Wheel and Tire Assembly | 094578-601 |
| 14 | Nut, Flange | 015x88 | 35 | Washer | 17x195 |
| 15 | Nut, Flange | 15x118 | 36 | Washer | 17x192 |
| 16 | Bracket, Hanger | 1001270E701 | 37 | Washer | 17x113 |
| 17 | Axle, Hanger | 094007E701 | 38 | Hub Cap | 094618 |
| 18 | Bolt | 01x146 | 39 | Screw | 26x267 |
| 19 | Pin, Cotter | 030x49 | 40 | Bellows | 092059 |
| 20 | Bearing | 690150 | 41 | Bolt | 0025x3 |
| 21 | Spindle Assembly, Left | 094576E701 | 42 | Washer | 17x146 |
| 22 | Bolt | 01x111 | | | |

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

MODEL 385009x98B

REPAIR PARTS MOWER HOUSING SUSPENSION

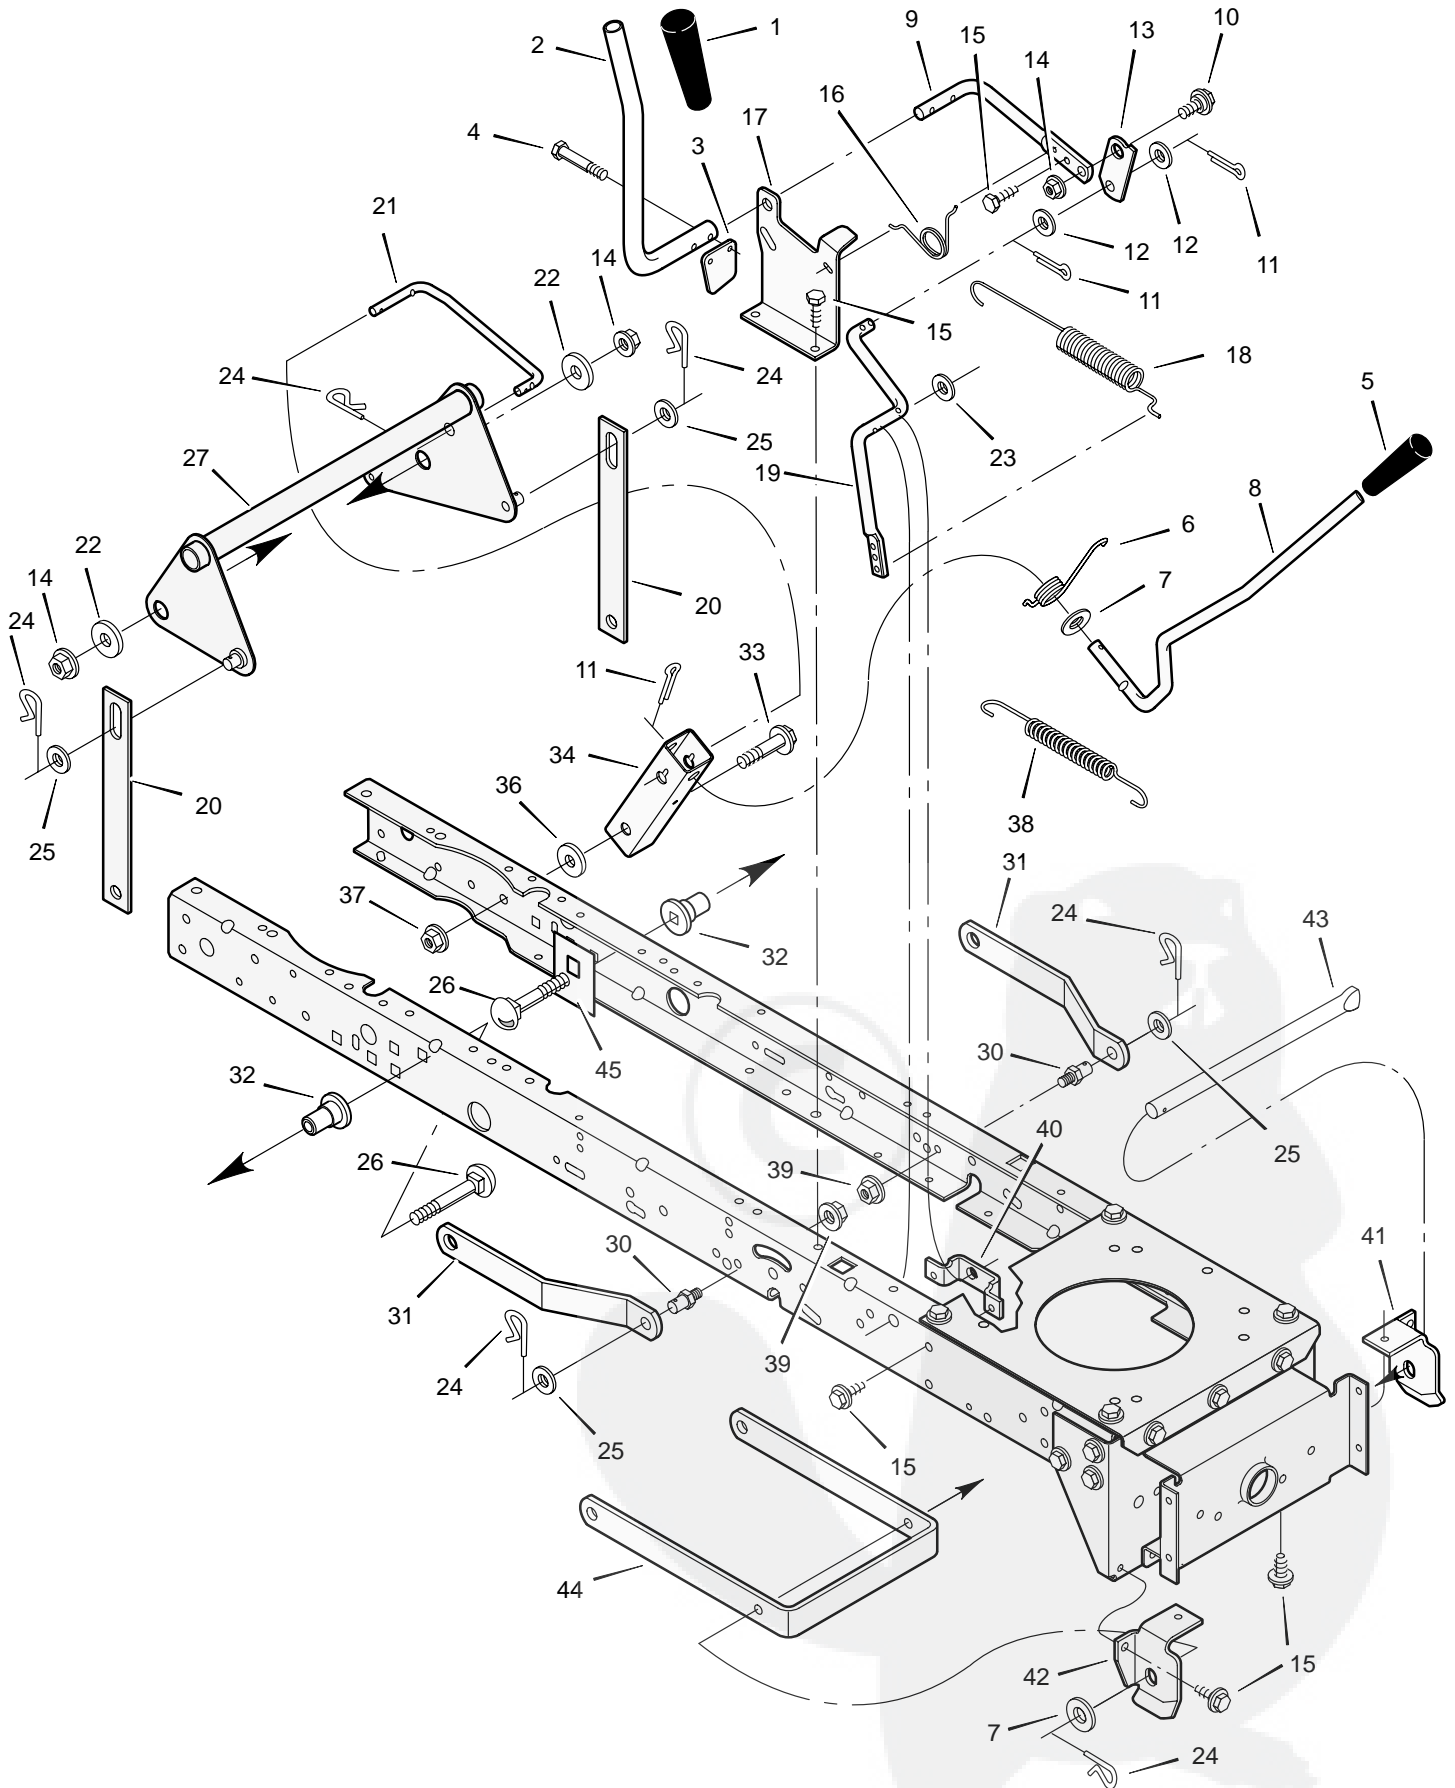


MODEL 385009x98B

REPAIR PARTS MOWER HOUSING SUSPENSION

| Key No. | Description | Part No. | Key No. | Description | Part No. |
|---------|-------------------|------------|---------|--------------------------|-------------|
| 1 | Grip | 092698 | 22 | Washer | 17x168 |
| 2 | Handle, PTO | 094157 Z | 23 | Washer | 017x57 |
| 3 | Pad, Switch | 094022 Z | 24 | Pin, Hair | 0031x4 |
| 4 | Bolt | 0025x3 | 25 | Washer | 017x91 |
| 5 | Grip | 092697 | 26 | Bolt, Carriage | 002x85 |
| 6 | Spring | 166x40 | 27 | Lever Assembly, Lift | 1001111E700 |
| 7 | Washer | 17x103 | 30 | Pin | 094067 |
| 8 | Handle, Lift | 690533 | 31 | Bracket, Rear Suspension | 094055E701 |
| 9 | Lever, PTO | 094017 Z | 32 | Spacer, Lifter | 690151 |
| 10 | Bolt, Shoulder | 009x39 | 33 | Bolt, Shoulder | 009x53 |
| 11 | Pin, Cotter | 030x20 | 34 | Bracket, Pivot | 094015E700 |
| 12 | Washer | 017x57 | 36 | Washer | 17x191 |
| 13 | Link, PTO | 094004 Z | 37 | Nut, Flange | 015x84 |
| 14 | Nut, Flange | 015x84 | 38 | Spring | 165x131 |
| 15 | Screw | 26x249 | 39 | Nut, Flange | 015x68 |
| 16 | Spring | 166x39 | 40 | Bracket, PTO | 094005E700 |
| 17 | Bracket, PTO | 094018E701 | 41 | Hanger, Left Deck | 094027E700 |
| 18 | Spring | 165x118 | 42 | Hanger, Right Deck | 094026E700 |
| 19 | Crank, PTO | 690394E701 | 43 | Rod, Hanger | 094158 Z |
| 20 | Link, Lift | 690212E700 | 44 | Bracket, Suspension | 690539E701 |
| 21 | Link, Lift Handle | 690122E700 | 45 | Plate, Stiffening | 1001098E701 |

MODEL 385009x98B

REPAIR PARTS MOWER HOUSING

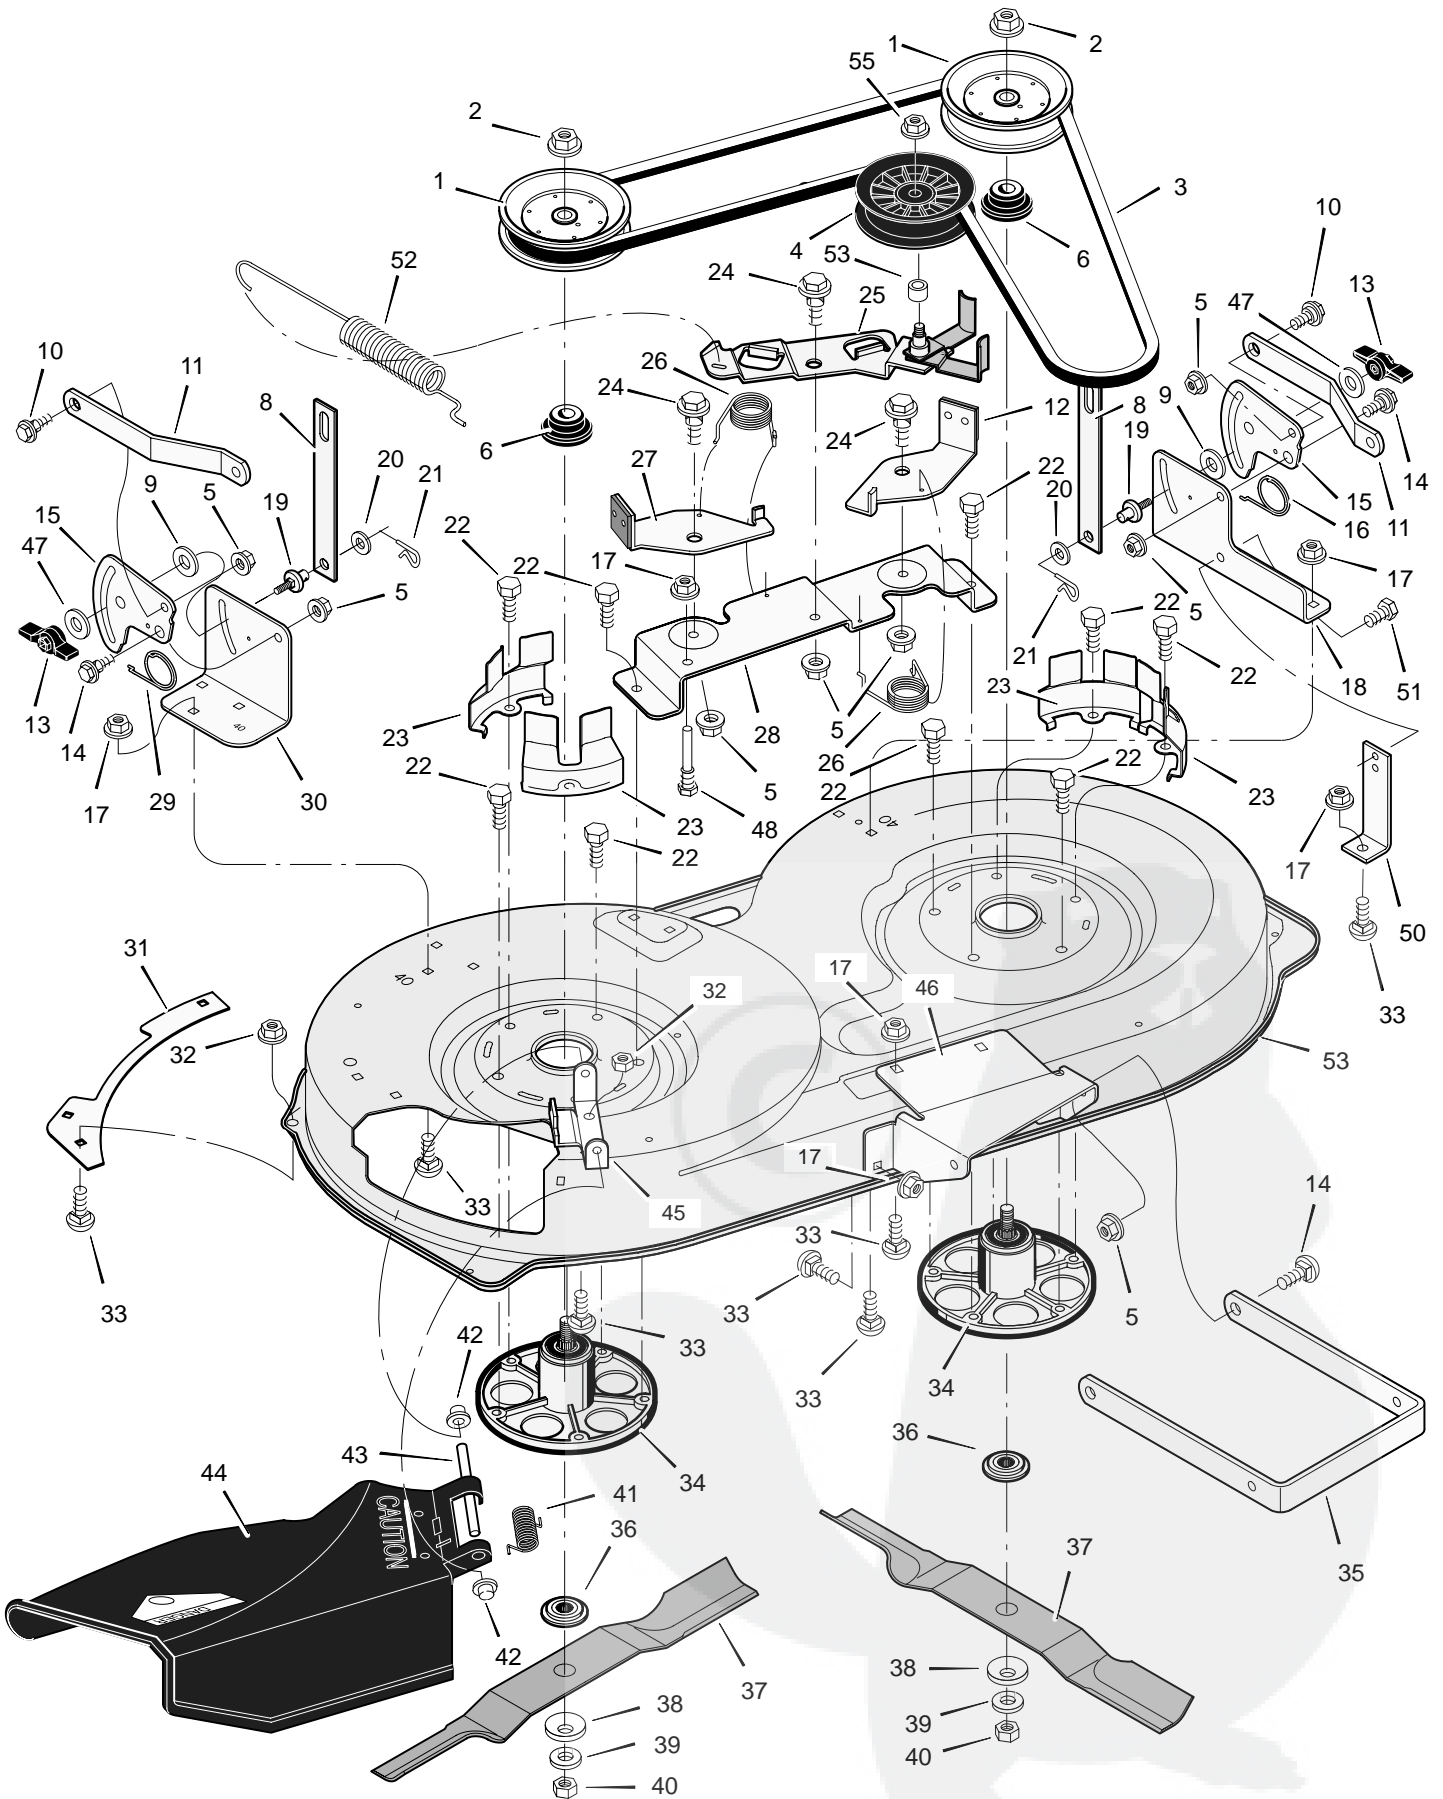

MODEL 385009x98B


REPAIR PARTS MOWER HOUSING

| Key No. | Description | Part No. | Key No. | Description | Part No. |
|---------|---------------------------|------------|---------|---------------------------------|-------------|
| 1 | Pulley, Jackshaft | 092852 | 29 | Spring | 166x42 |
| 2 | Nut, Hex | 15x140 | 30 | Bracket, Right Suspension | 094052E701 |
| 3 | Belt, Mower Drive | 037x86 | 31 | Plate | 091770E700 |
| 4 | Pulley, Idler | 690387 | 32 | Nut, Flange | 015x88 |
| 5 | Nut, Flange | 015x84 | 33 | Bolt, Carriage | 002x53 |
| 6 | Spacer, Pulley | 1001197 | 34 | Mandrell (Includes Key 6) | 1001200 |
| 8 | Link, Lift | 690212E701 | 35 | Bracket, Suspension | 690539E701 |
| 9 | Pad, Friction | 094137 | 36 | Adapter, Blade | 690411 |
| 10 | Bolt, Shoulder | 009x52 | 37 | Blade | 1001427E701 |
| 11 | Bracket, Suspension | 094055E701 | 38 | Washer | 17x166 |
| 12 | Pad Assembly, Left Brake | 094049E701 | 39 | Washer | 17x165 |
| 13 | Knob | 094068 | 40 | Nut | 15x100 |
| 14 | Bolt, Shoulder | 009x51 | 41 | Spring | 0166x4 |
| 15 | Plate, Suspension | 094128E700 | 42 | Cap, Push On | 028x23 |
| 16 | Spring | 166x43 | 43 | Rod, Pivot | 094957 Z |
| 17 | Nut, Flange | 015x79 | 44 | Deflector Assembly | 094707 |
| 18 | Bracket, Left Suspension | 094054E700 | 45 | Bracket, Deflector | 094956E701 |
| 19 | Pin, Hanger | 095194 | 46 | Bracket, Front Hanger | 094062E700 |
| 20 | Washer | 017x91 | 47 | Washer | 017x45 Z |
| 21 | Pin, Cotter | 0031x4 | 48 | Guide, Belt | 094781 |
| 22 | Bolt | 0025x7 | 50 | Bracket, Support | 094681E700 |
| 23 | Cover, Pulley | 094051E701 | 51 | Screw | 26x249 |
| 24 | Bolt, Shoulder | 009x39 | 52 | Spring, Extension | 165x118 |
| 25 | Arm, Idler | 1001499 | 53 | Spacer | 690369 |
| 26 | Spring | 166x41 | 54 | Housing, Blade * | 094061E700 |
| 27 | Pad Assembly, Right Brake | 094047E701 | 55 | Nut, Flange | 015x98 |
| 28 | Bracket Assembly, Brake | 094059E700 | 1-55 | Complete Mower Housing Assembly | 776000 |

* Includes Key No. 17, 18, 30, 31, 32, 33, 45, 46, 47 and 51.

MODEL 385009x98B

REPAIR PARTS ENGINE MOUNT

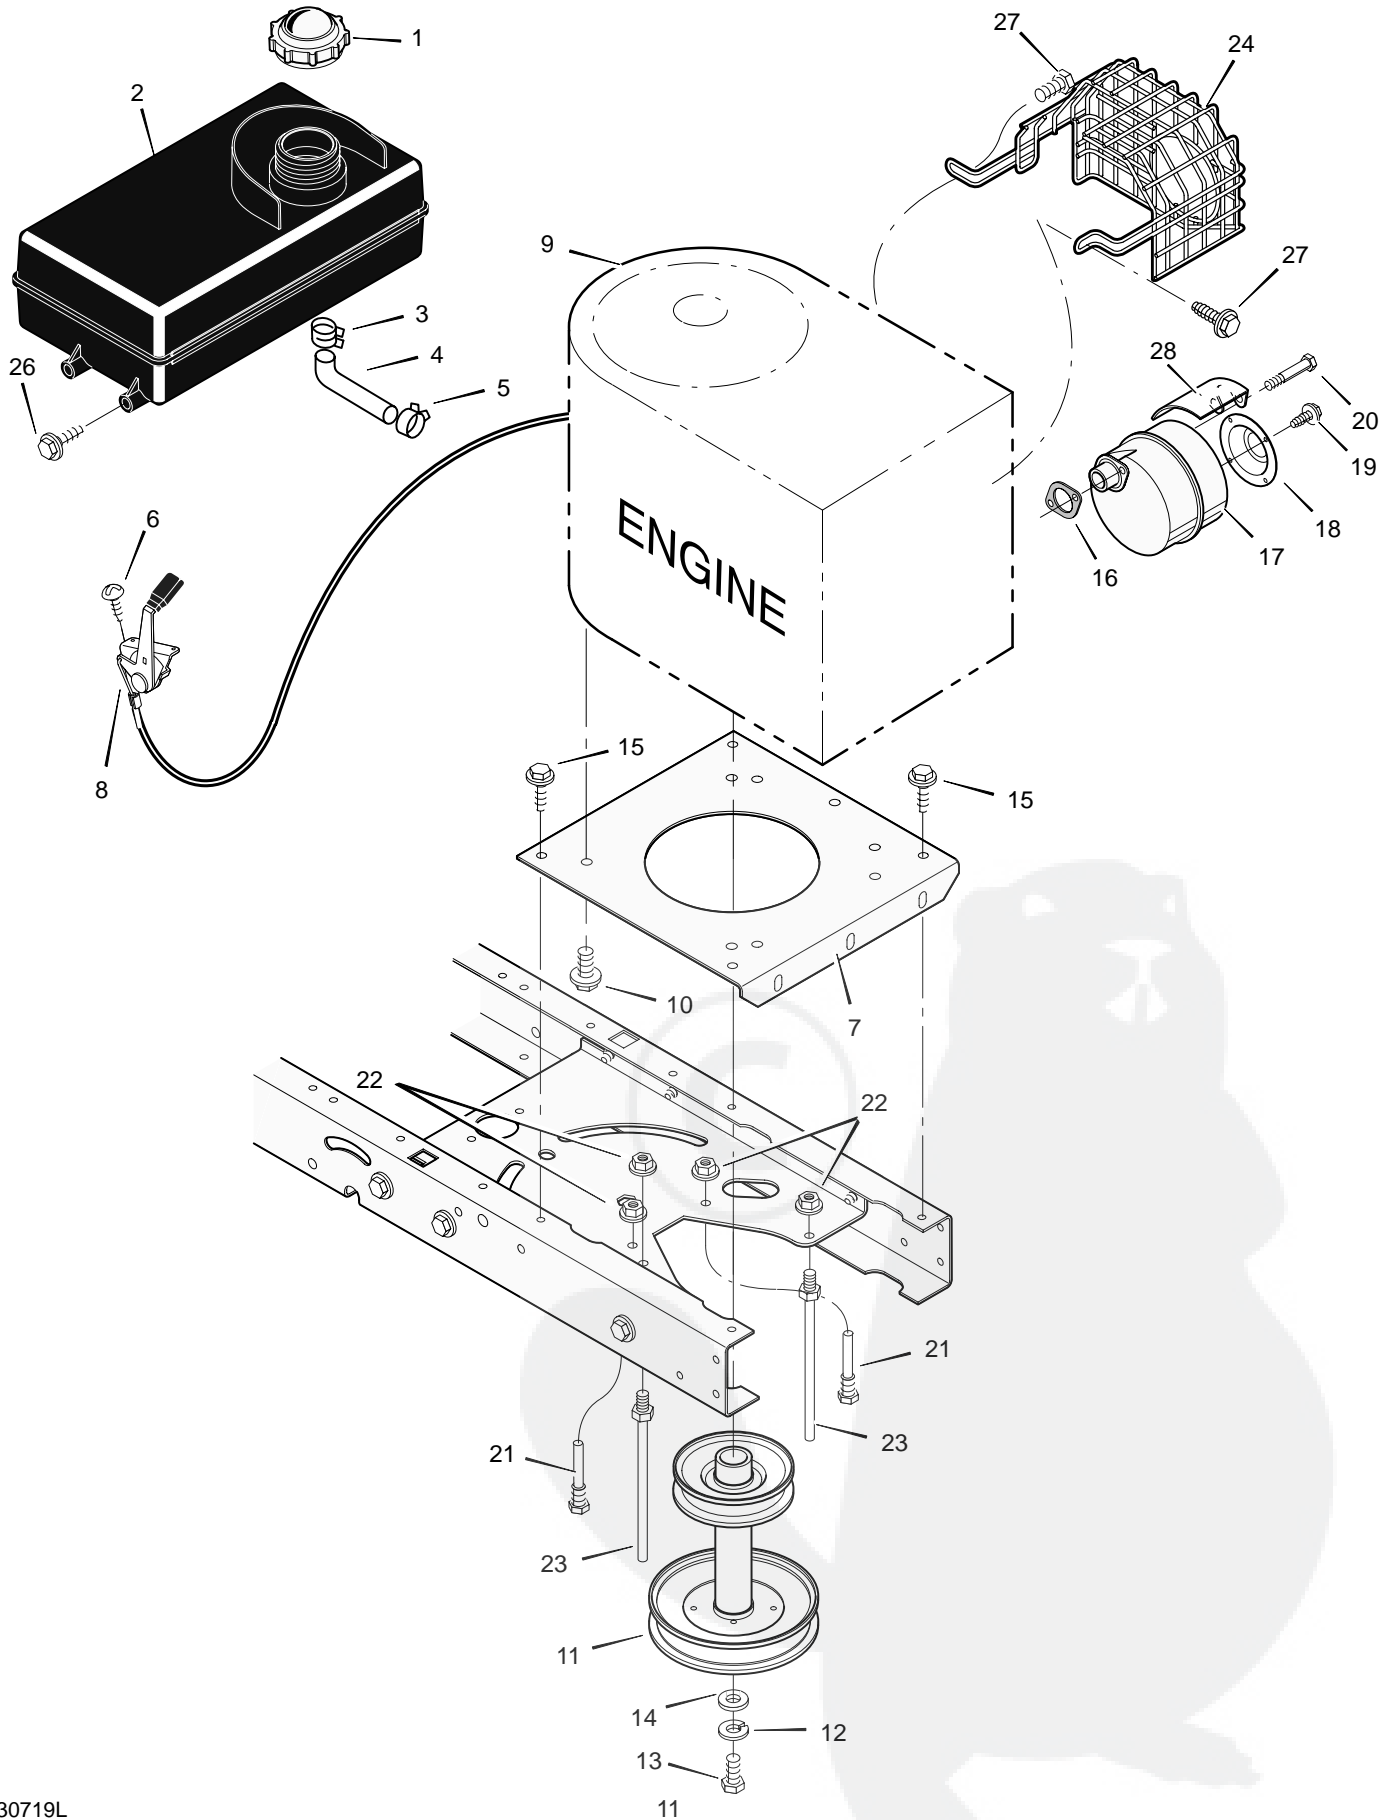


MODEL 385009x98B

REPAIR PARTS ENGINE MOUNT

| Key No. | Description | Part No. |
|---------|--|------------|
| 1 | Fuel Cap | 092317 |
| 2 | Fuel Tank | 690280 |
| 3 | Hose Clamp (Incl'd w/Key 2) | 095197 |
| 4 | Fuel Line (must cut to length) (Incl'd w/Key 2) | 7601033 |
| 5 | Hose Clamp | 095197 |
| 6 | Screw | 26x201 |
| 7 | Plate, Engine | 094006E700 |
| 8 | Throttle Control | 092371 |
| 9 | Engine* | — |
| 10 | Bolt, Engine Mount | 0025x7 |
| 11 | Stack Pulley Assembly | 690439 Z |
| 12 | Lockwasher | 019x35 |
| 13 | Bolt, Hex | 01x140 |
| 14 | Washer | 17x170 |
| 15 | Screw | 26x249 |
| 16 | Gasket | 091309 |
| 17 | Muffler | 091271 |
| 18 | Deflector, Muffler | 1001350 |
| 19 | Screw | 26x208 |
| 20 | Bolt, Hex | 01x134 |
| 21 | Guide, Belt | 093349 |
| 22 | Nut, Flange | 015x79 Z |
| 23 | Guide, Belt | 094066 |
| 24 | Shield, Heat | 1001595 Z |
| 26 | Screw | 26x253 |
| 27 | Screw | 26x263 |
| 28 | Shield, Heat | 091277 |

* Parts are available from an engine Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.

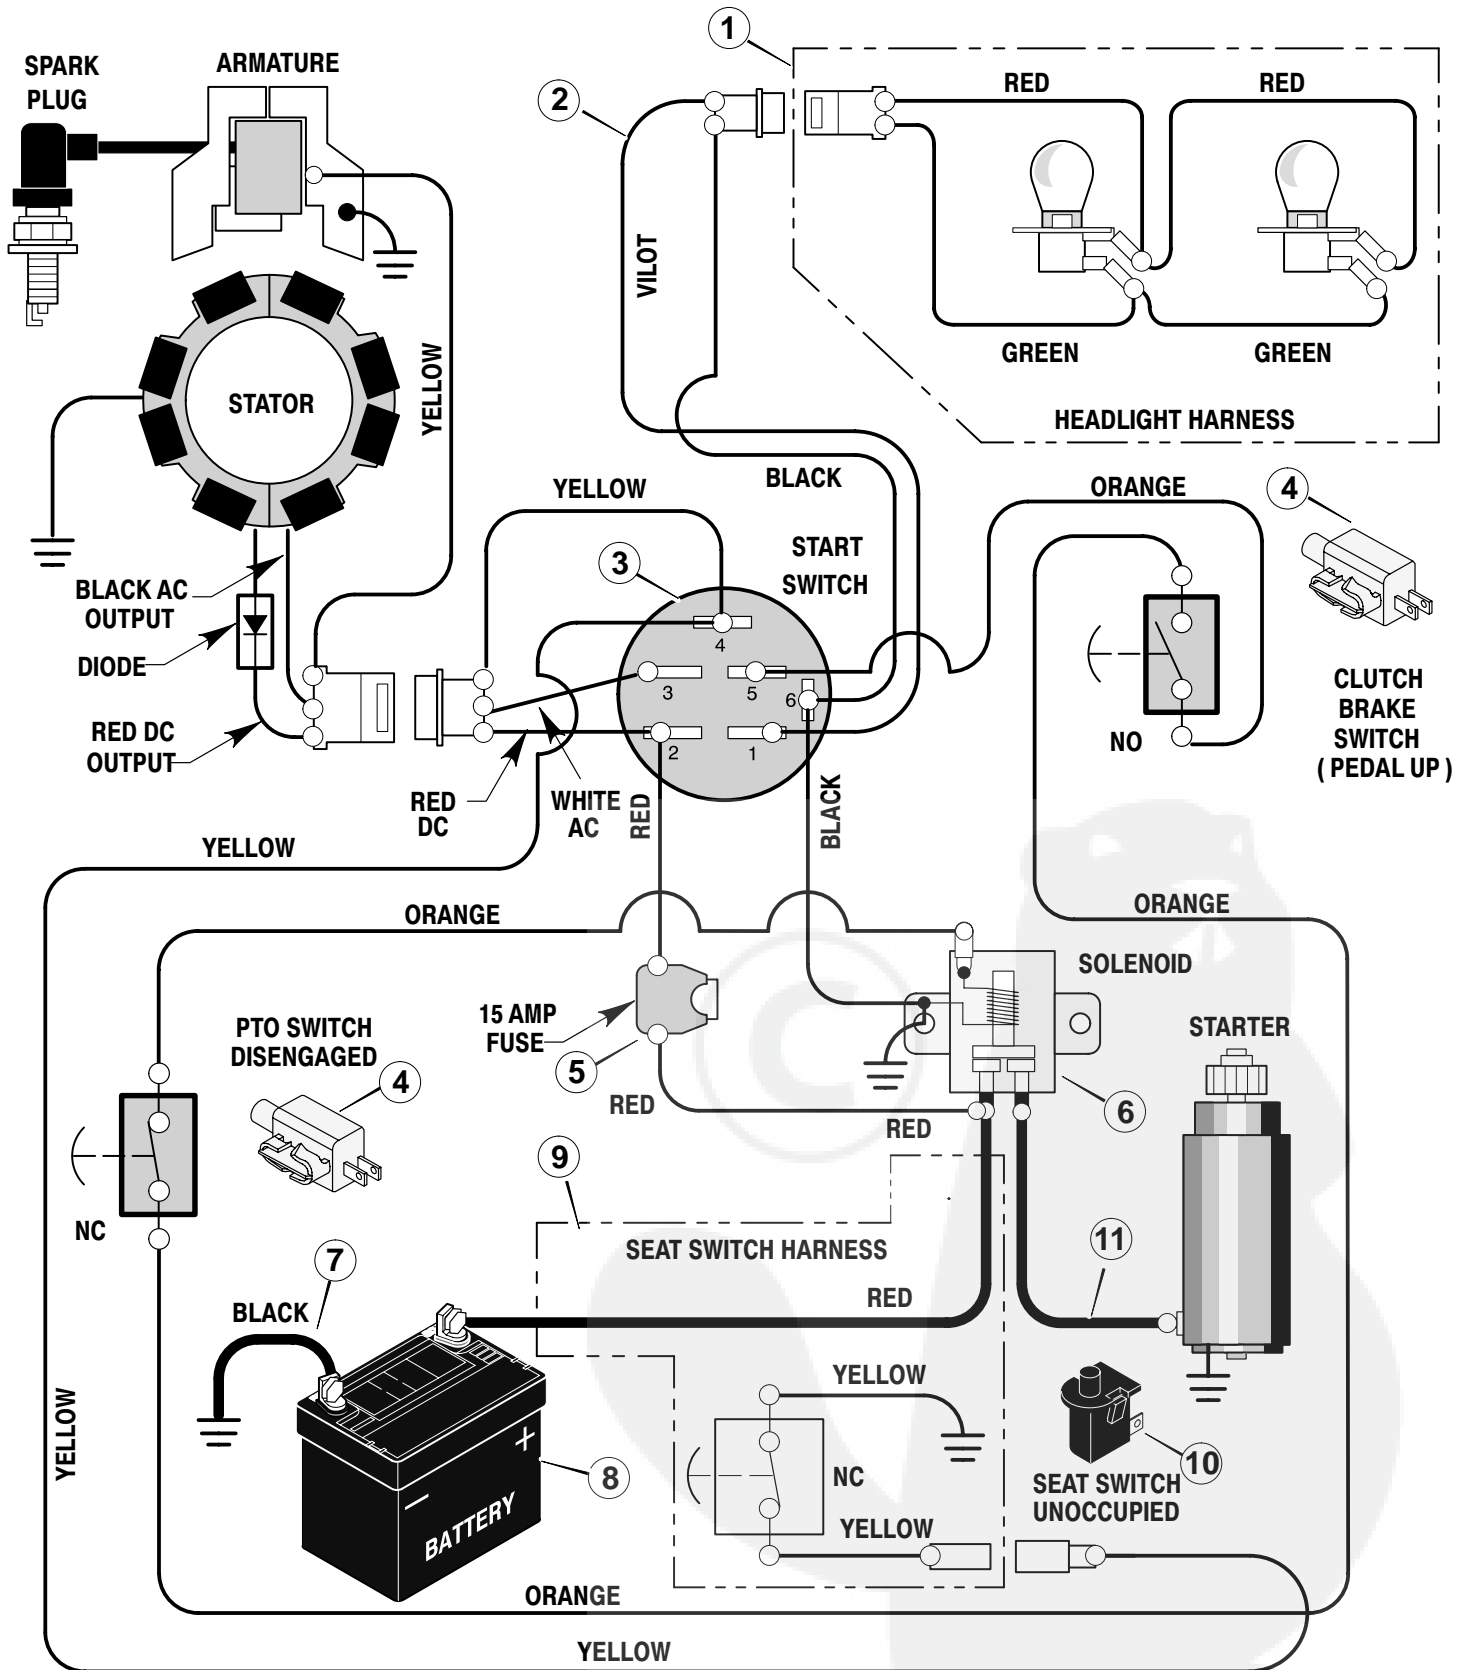

| Key No. | Description | Part No. |
|----------------|---------------------------|-----------------|
| 1 | Harness, Light Wire | 250x92 |
| | Socket, Light | 092372 |
| | Bulb, Light | 090084 |
| 2 | Harness, Chassis Wire | 250x113 |
| 3 | Switch, Ignition | 092377 |
| | Key, Ignition | 020729 |
| | Nut, Hex | 091489 |
| | Cap, Ignition | 091488 |
| 4 | Switch, Limit | 1001575 |
| 5 | Fuse | 302031 |
| | Holder, Fuse | 407078 |
| 6 | Solenoid | 094613 |
| | Screw, Mounting | 26x229 |
| | Locknut | 15x116 |
| 7 | Cable, Battery Ground | 024x32 |
| | Screw, Ground Cable | 26x213 |
| 8 | Battery | 021075 |
| | Bolt, Carriage | 002x82 |
| | Wingnut | 014x79 |
| | Boot, Battery –Positive | 690604 |
| 9 | Harness, Seat Switch Wire | 250x67 |
| 10 | Switch, Seat Sensor | 094159 |
| 11 | Cable | 024x31 |