


MODEL 38702x8A

38" S/D - L/T
12 HP B&S ENGINE
5-SPEED DANA TRANSAXLE

REPAIR PARTS CHASSIS & HOOD

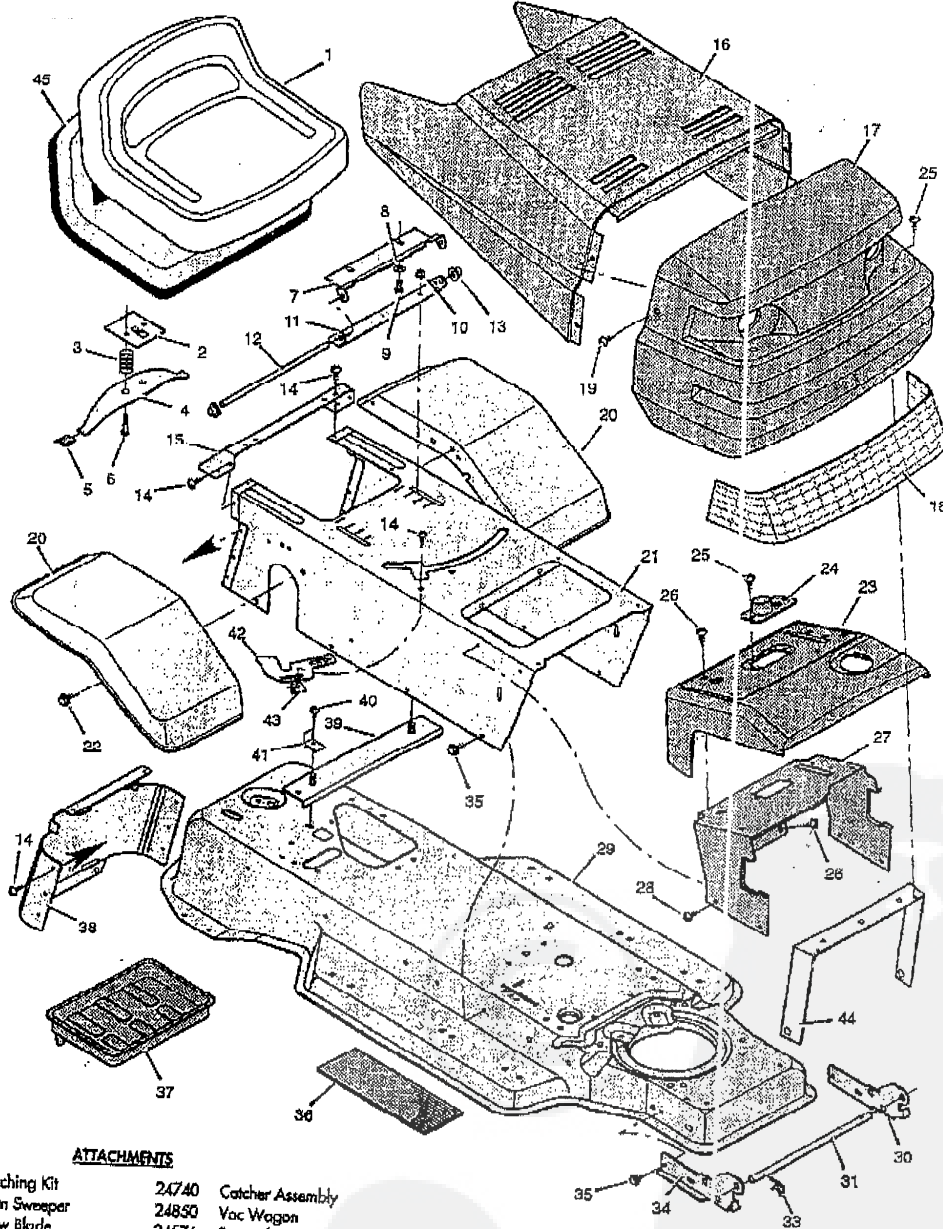

ATTACHMENTS

- | | | | |
|-------|--------------|-------|------------------|
| 24750 | Mulching Kit | 24740 | Catcher Assembly |
| 24720 | Lawn Sweeper | 24850 | Vac Wagon |
| 24455 | Snow Blade | 24576 | Snow Blower |
| 24003 | Wht. Weights | 24538 | Tire Chains |

F-3

M30 5/93

MODEL 38702x8A

**REPAIR PARTS
CHASSIS & HOOD**


Key No.	Description	Part No.	Key No.	Description	Part No.
1	Seat Cover	92469	28	Screw	26x250
2	Plate Assembly, Switch	91963Z	29	Frame Assembly	92500F200
3	Spring, Compression	164x26	30	Bracket, Left Grille	92347
4	Spring, Seat	91964	31	Rod, Pivot	92332Z
5	Glide, Spring	91822	33	Pin, Hair	31x4
6	Bolt, Shoulder	9x38	34	Bracket, Right Grille	92346
7	Support, Seat	92334E700	35	Screw	26x249
8	Lockwasher	18x16	36	Mat	91900
9	Bolt, Hex	1x45	37	Tray, Battery	91895
10	Locknut, Flange	15x88	38	Cap, Console	92443E700
11	Bracket, Pivot	91729E700	39	Channel Assembly	91857E700
12	Rod, Pivot	91790E700	40	Screw	26x184
13	Cap, Push On	26x23	41	Clip, Battery	91841
14	Screw, Tap	26x250	42	Plate, Shift Lever Adjuster	92360 BC
15	Fender, Apron	91724E700	43	U-Nut	26x72
16	Hood	92333F200	44	Brace, Grille	92448
17	Grille	92343	45	Pan, Seat & Foam	92367
18	Lens	92344	---	Instruction Book	F-93700
19	Screw	9x47	---	Repair Parts Book	F-93767
20	Fender	92328F200	---	Decal, Left Hood	44x3043
21	Console	92442F200	---	Decal, Right Hood	44x3042
22	Screw	26x263	---	Decal, Grille Front	44x946
23	Dash Panel	92345F200	---	Decal, Left Console	44x947
24	Bearing, Steering	92348	---	Decal, Right Console	44x106
25	Screw	26x239	---	Decal, Top Console - Warning	44x2585
26	Screw	26x270	---	Decal, Shift Pattern	44x1091
27	Support, Dash	92331E700	---	Plaque, Name	280x57

F-93767

F-4

MODEL 38702x8A

REPAIR PARTS
STEERING

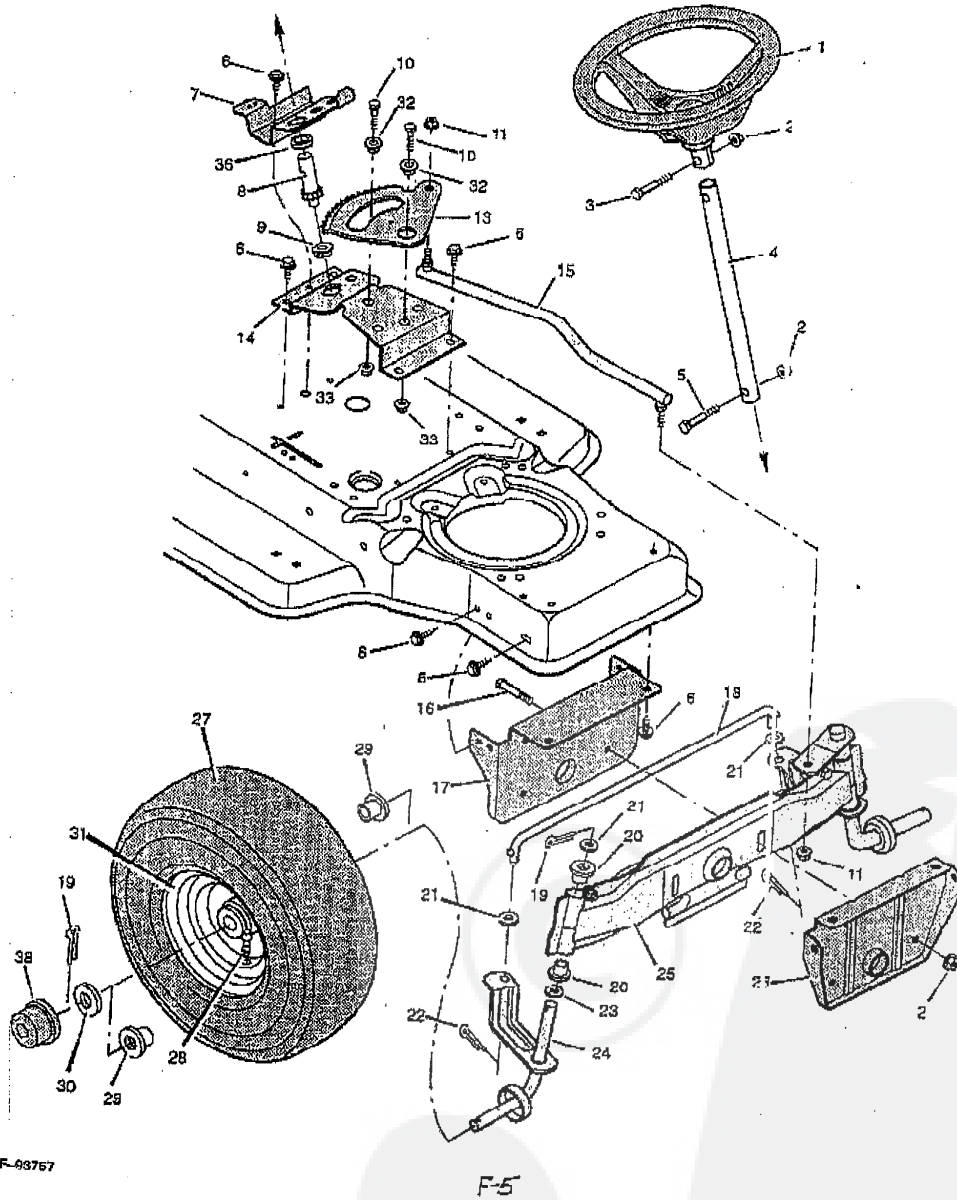

MODEL 38702x8A

REPAIR PARTS
STEERING

Key No.	Description	Part No.
1	Wheel, Steering	92078
2	Nut, Hex	15x118
3	Bolt, Hex	1x66
4	Post, Steering	917142
5	Bolt, Hex	1x74
6	Screw	26x249
7	Bracket, Sector**	91710E700
8	Gear, Pinion	402075
9	Bearing**	91756
10	Bolt, Hex**	1x84
11	Locknut, Flange	15x87
13	Gear, Sector	402075
14	Bracket, Sector**	91708E700
15	Link, Drag	91749E700
16	Bolt, Hex	1x108
17	Support, Rear Axle	91702E700
18	Rod, Tie	90098E700
19	Pin, Cotter	30x49
20	Bearing	90035
21	Washer	17x57
22	Pin, Cotter	30x20
23	Washer	17x113
24	Spindle Assembly, Right	91828E700
25	Spindle Assembly, Axle & Left	91827SE
26	Support, Front Axle	91701E700
27	Tire*	91912
—	Tube	407047
28	Stem, Valve	24373
29	Bearing, Wheel	91394
30	Washer	17x115
31	Wheel & Tire Assembly	92287-601
32	Bearing**	92097
33	Locknut, Flange**	15x118
36	Spacer, Pinion Gear**	92280
38	Hub Cap (Optional)	24582


*When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.
 **These parts are included when you order part number 402075 (Key Number 8 or 13).

F-93767

F-6

MODEL 38702x8A

**REPAIR PARTS
ENGINE MOUNT**

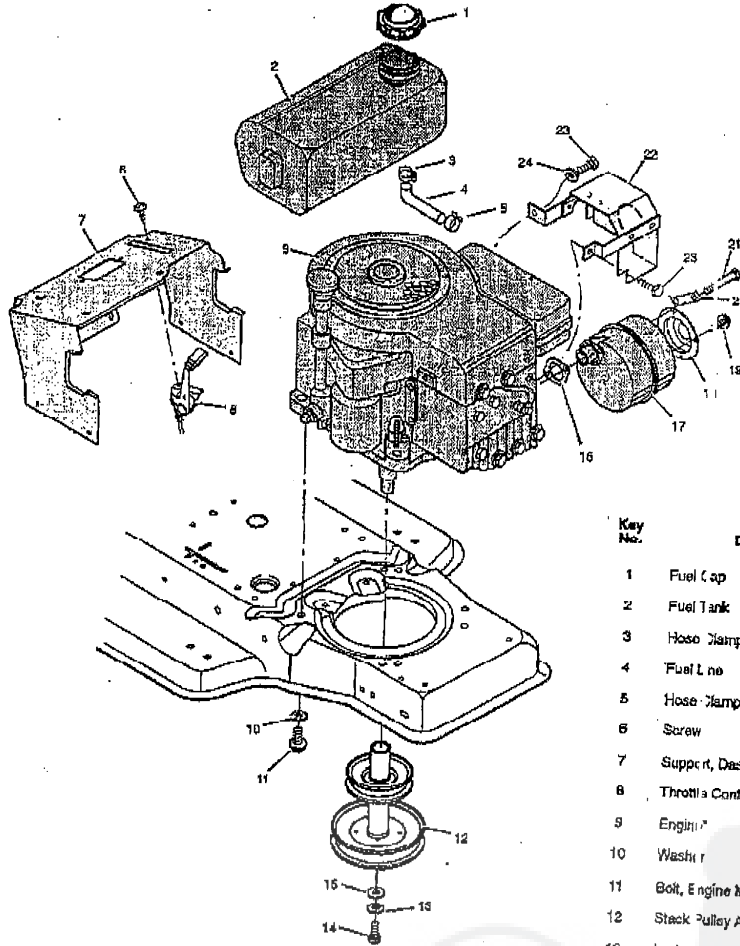


Key No.	Description	Part No.
1	Fuel Cap	92317
2	Fuel Tank	92342
3	Hose Clamp	91174
4	Fuel Line	23717
5	Hose Clamp	23713
6	Screw	26x201
7	Support, Dash	92331E700
8	Throttle Control	92371
9	Engine	282702-0122-01
10	Washer	19x8
11	Bolt, Engine Mount	25x7
12	Stack Pulley Assembly	92318
13	Lock Washer	19x35
14	Bolt, Hex	1x140
15	Washer	17x170
16	Gasket	91309
17	Muffler	91271
18	Deflector, Muffler	23740Z
19	Screw	26x200
20	Lock Screw	92378
21	Bolt	1x134
22	Shield Heat	92381SE
23	Bolt	1x38
24	Washer	18x32

P-7

MODEL 38702x8A

**REPAIR PARTS
ELECTRICAL SYSTEM**

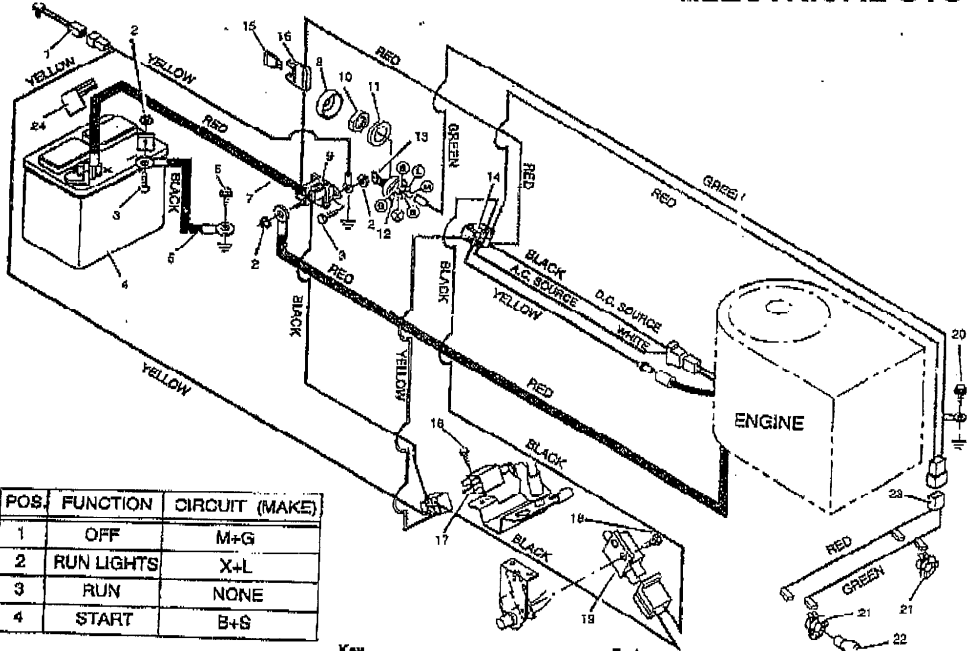


POS.	FUNCTION	CIRCUIT (MAKE)
1	OFF	M+G
2	RUN LIGHTS	X+L
3	RUN	NONE
4	START	B+S

Key No.	Description	Part No.
1	Switch, Seat Sensor	91091
2	Locknut	15x66
3	Bolt, Hex	1x38Z
4	Battery	91414
—	Acid, Battery (Electrolyte)	55702
5	Cable, Battery Ground	24x9
6	Screw	28x249
7	Cable, Red Battery	24x12
8	Cap. Ignition	91499
9	Solenoid	24285
10	Nut, Hex	91489
11	Washer, Shakeproof	15x40
12	Switch, Ignition	92377
13	Key, Ignition	20725
14	Harness, Chassis Wire	250x43
15	Fuse	54212
16	Holder, Fuse	407078
17	Switch, PTO	91299
18	Screw	25x233
19	Switch, Clutch	24273
20	Screw	25x2
21	Socket, Light	92372
22	Bulb, Light	90084
23	Harness, Light Wire	250x40
24	Cover, Terminal	54148

MODEL 38702x8A

**REPAIR PARTS
MOTION DRIVE**

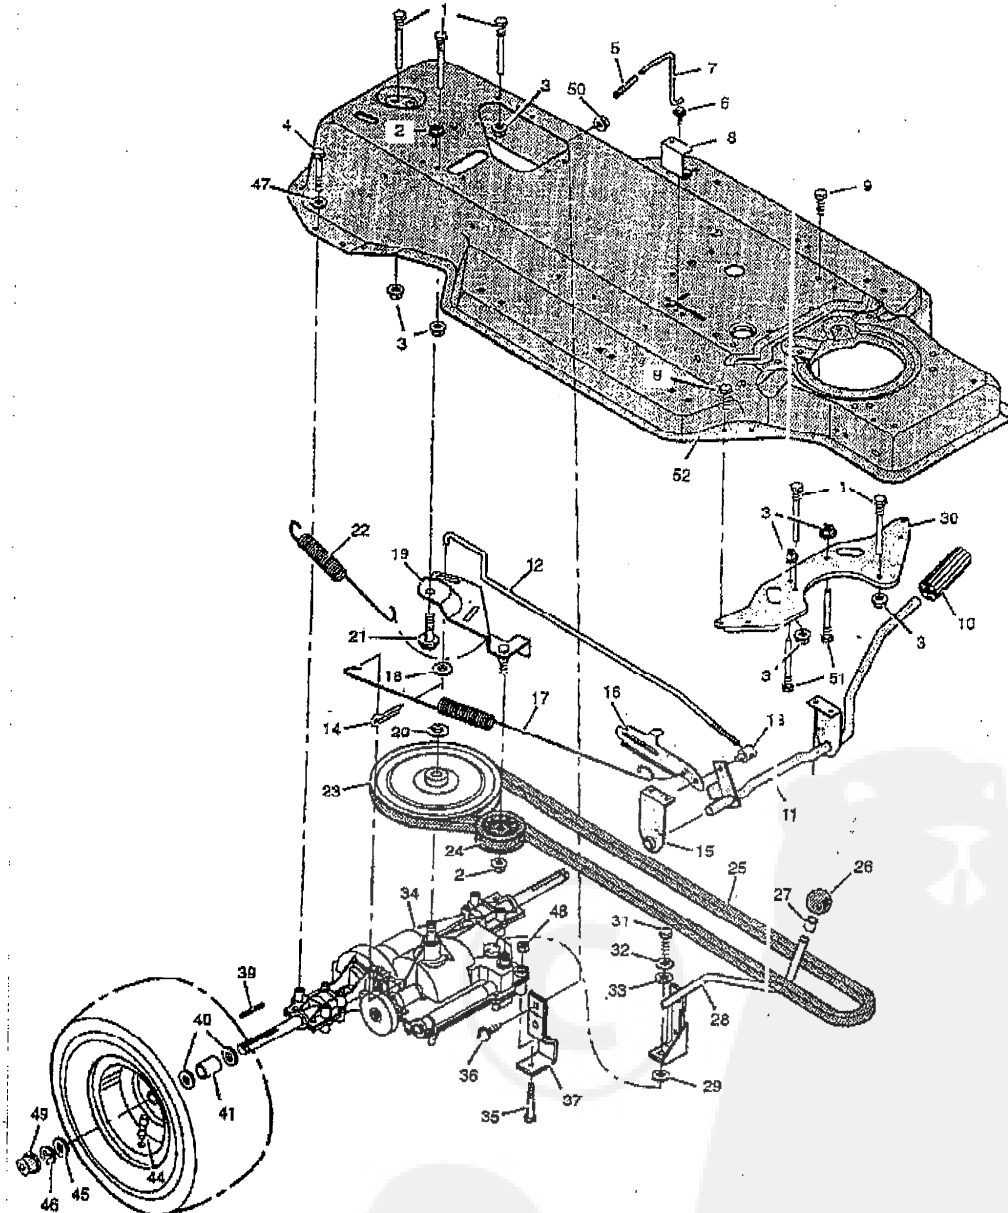

F-83767

F-9

MODEL 38702x8A**REPAIR PARTS
MOTION DRIVE**

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Guide, Belt	917547	28	Shift Lever & Yoke Assembly	92315Z
2	Locknut, Flange	15x84	29	Washer	17x148
3	Nut, Flange	15x79Z	30	Plate, Belt Guide	92501E700
4	Bolt, Hex	1x124	31	Bolt, Hex	1x82
5	Grip	91079	32	Lockwasher	18x32
6	Screw	26x214	33	Washer	17x180
7	Rod, Control	91727E700	34	Transaxle -- DANA 3000**	2000-10
8	Guide, Bracket	91825E700	—	Woodruff Key No. 5	20697
9	Screw	26x249	35	Bolt, Hex	1x99
10	Clutch and Brake Pedal	21544	36	Bolt, Carriage	2x64
11	Lever Assembly	91862E700	37	Bracket, Transaxle Torque	92329E700
12	Rod, Clutch	91808Z	38	Screw	26x216
13	Nut, Adjustable	21920	39	Key, Square	21553
14	Pin, Cotter	30x20	40	Washer	17x160
15	Bracket, Support	91713E700	41	Spacer, Transaxle	87x100Z
16	Latch, Park Brake	91712Z	42	Tire*	91914
17	Spring, Brake Extension	165x82	—	Tube	407049
18	Washer	17x47Z	43	Wheel & Tire Assembly	92289-601
19	Bracket Assembly, Idler	92029Z	44	Stem, Valve	24373
20	Ring, Retainer	11x7	45	Washer	17x115
21	Bolt, Shoulder	9x39	46	E-Ring	11x3
22	Spring, Drive Extension	185x76	47	Washer	17x146Z
23	Pulley, Motion Drive	91807	48	Locknut, Hex	15x43
24	Pulley, Backside Idler	91179	49	Hub Cap (Optional)	24582
25	Belt, Motion Drive	37x61	50	Nut, Flange	15x88
26	Knob, Shift Lever	91995	51	Guide, Belt	20619
27	Tolerance Ring	92006	52	Frame Assembly	92500F200


*When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.
 **For information on Replacement Parts see the Central Parts Distributor in your area.

R-93787

P-10

MODEL 38702x8A

REPAIR PARTS
MOWER SUSPENSION

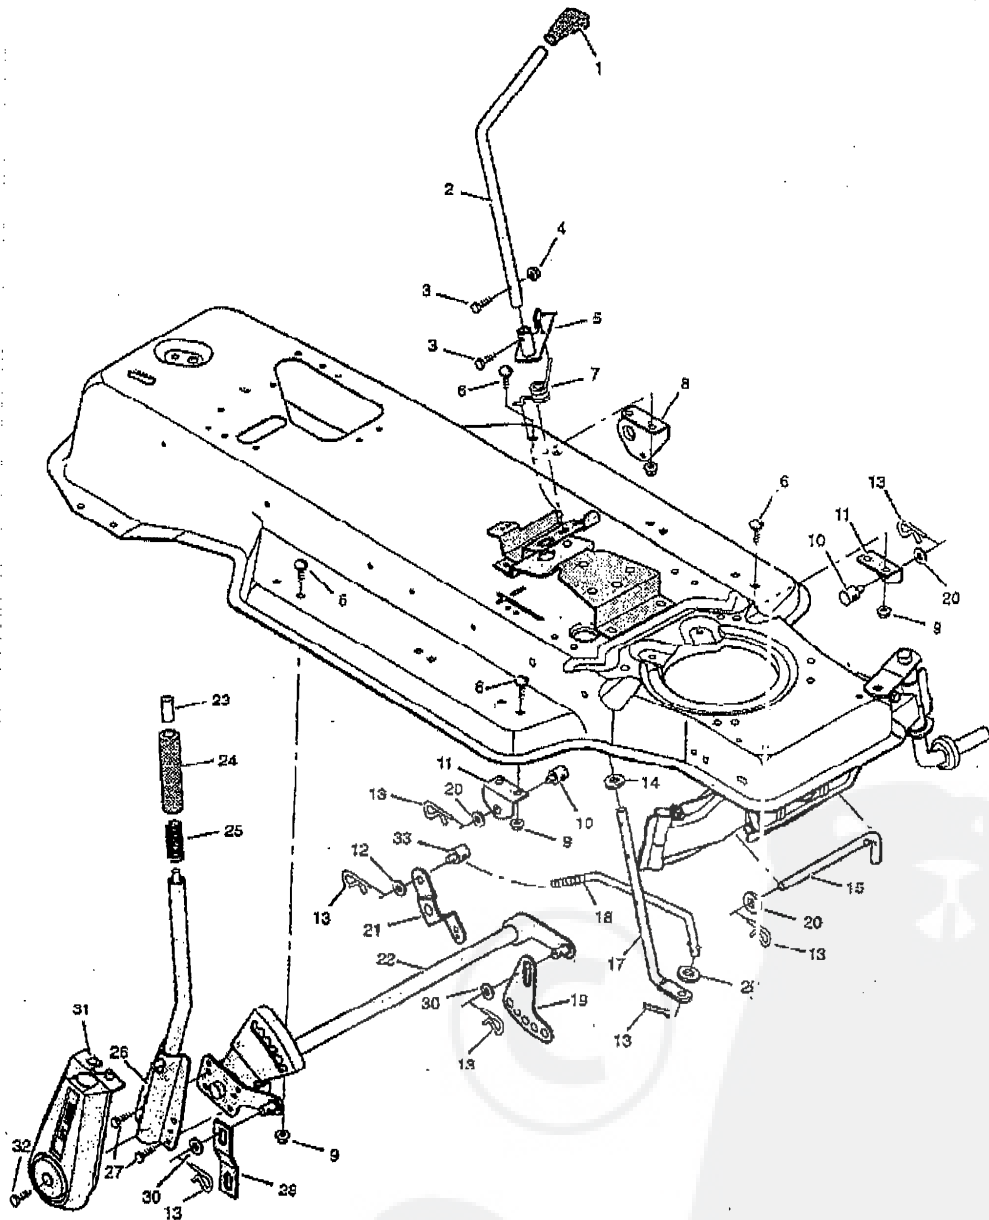

F. 03767

F-11

MODEL 38702x8A**REPAIR PARTS
MOWER SUSPENSION**


Key No.	Description	Part No.
1	Grip	55449
2	Control, Blade Rotation	91781Z
3	Bolt, Hex	25x3
4	Locknut, Hex	15x67
5	Lever Assembly, Switch	91917E700
6	Bolt, Carriage	2x53
7	Spring, Torsion	166x32
8	Bracket, Adjuster Rod	92068E700
9	Nut, Flange	15x79
10	Nut, Adjusting	92131
11	Bracket, Adjuster Rod	92133E700
12	Washer	17x124
13	Pin, Hair	31x4
14	Washer	17x67
15	Pin, Pull	90827Z
17	Lever, Lower Blade Control	91787E700
18	Rod, Blade Control	91795Z
19	Plate, Adjuster	91741E700
20	Washer	17x103
21	Bracket, Pivot	92033E700
22	Lifter Assembly	92065E700
23	Knob, Steel	91261
24	Grip	91398
25	Spring, Compression	164x21
26	Handle Assembly	91823E700
27	Screw	26x49
28	Link, Suspension	92064E700
29	Washer	17x47Z
30	Washer	17x91Z
31	Cover, Lift Lever (Optional)	92157
32	Screw	26x263
33	Nut, Adjusting	21920

F-83767

F-12

MODEL 38702x8A

REPAIR PARTS MOWER HOUSING

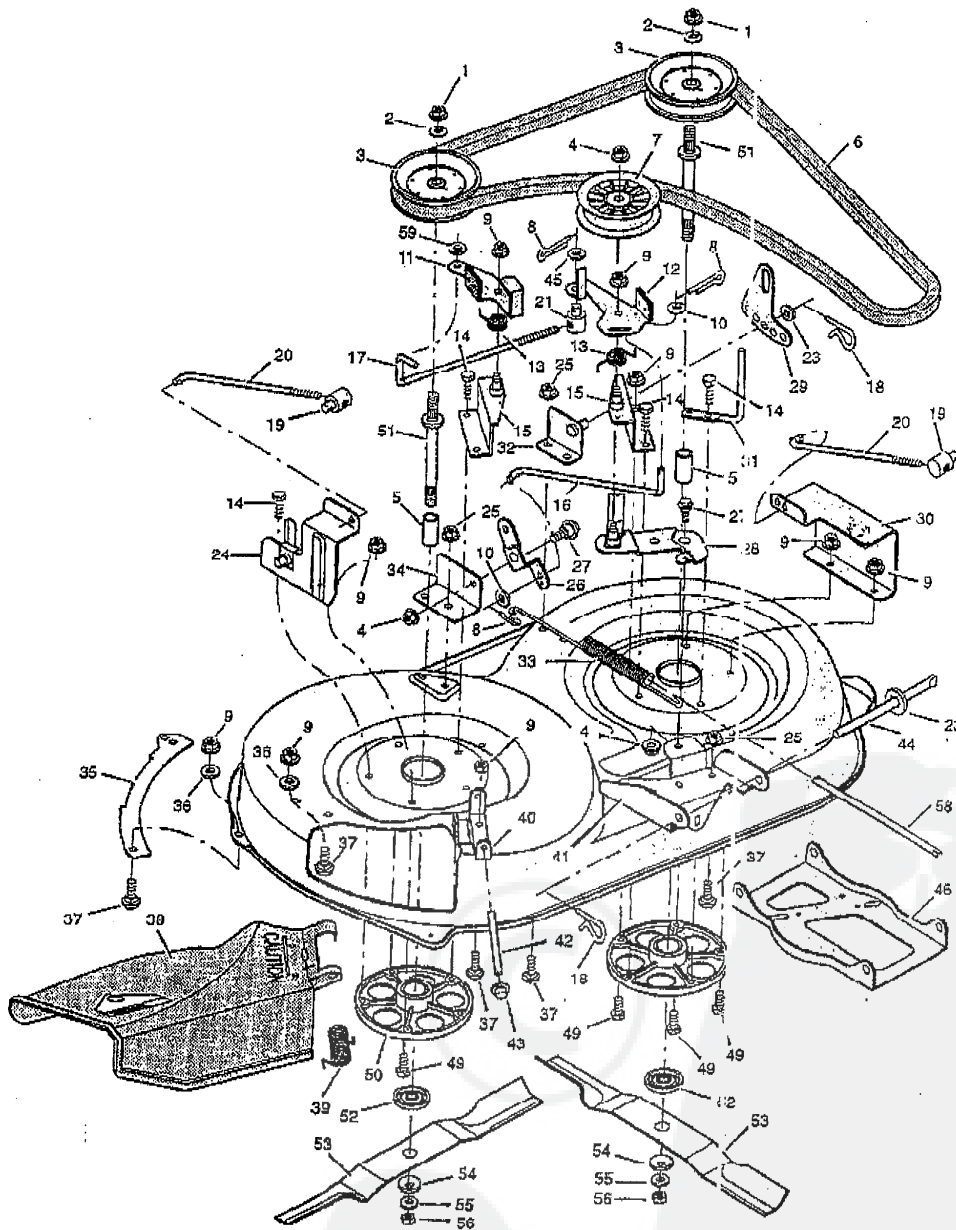

F-83767

F-13

MODEL 38702x8A**REPAIR PARTS
MOWER HOUSING**

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Nut, Hex	15x100	30	Cover, Pulley	91792E700
2	Lockwasher	18x33	31	Belt, Guide	91797E700
3	Pulley, Jackshaft	91769	32	Bracket Assembly, Left Lifter	91818E700
4	Locknut, Flange	15x84	33	Spring, Extension	165x72
5	Spacer	91903	34	Bracket, Pivot	91743E700
6	Belt, Blade Drive	37x63	35	Plate	91770E700
7	Pulley, Idler	91801	36	Washer	17x57
8	Pin, Cotter	30x20	37	Bolt, Carriage	2x53
9	Locknut, Flange	15x88	38	Deflector Assembly, Chute	92465
10	Washer	17x46Z	39	Spring, Torsion	166x4
11	Brake Assembly, Right	92186E700	40	Bracket, Hinge	91765E700
12	Brake Assembly, Left	92187E700	41	Bracket, Front Hanger	91793E700
13	Spring, Torsion	166x27	42	Rod, Deflector	91767Z
14	Bolt, Hex	25x6	43	Cap, Push On	28x23
15	Bracket Assembly, Brake	92072E700	44	Rod, Hanger	91739Z
16	Rod, Brake	91745Z	45	Washer	17x124
17	Rod, Cross Link	92163Z	46	Hanger, Front	92119E700
18	Pin, Hair	31x4	49	Bolt, Hex	1x84
19	Nut, Adjustable	92131	50	Housing, Jackshaft	90905
20	Rod, Adjuster	91748Z	51	Jackshaft	91922
21	Nut, Adjustable	21920	52	Adapter, Blade	91926
22	Link, Suspension	92064E700	53	Blade, 38" (2 required)	91742E700
23	Washer	17x103	54	Washer, Belleville	17x166
24	Bracket Assembly, Right Lifter	92194E700	55	Washer	17x165
25	Nut, Flange	15x79	56	Nut, Hex	15x100
26	Bracket, Pivot	92033E700	58	Indicator, Plastic	92163
27	Bolt, Carriage	9x39	59	Washer	17x48
28	Arm Assembly, Idler	92032E700	60	Housing, Blade	91906E700
29	Plate, Adjuster	91741E700	1-60	Complete Mower Housing Assembly	403228

F-93767

F-14