


MODEL 405004x50B

REPAIR PARTS CHASSIS & HOOD

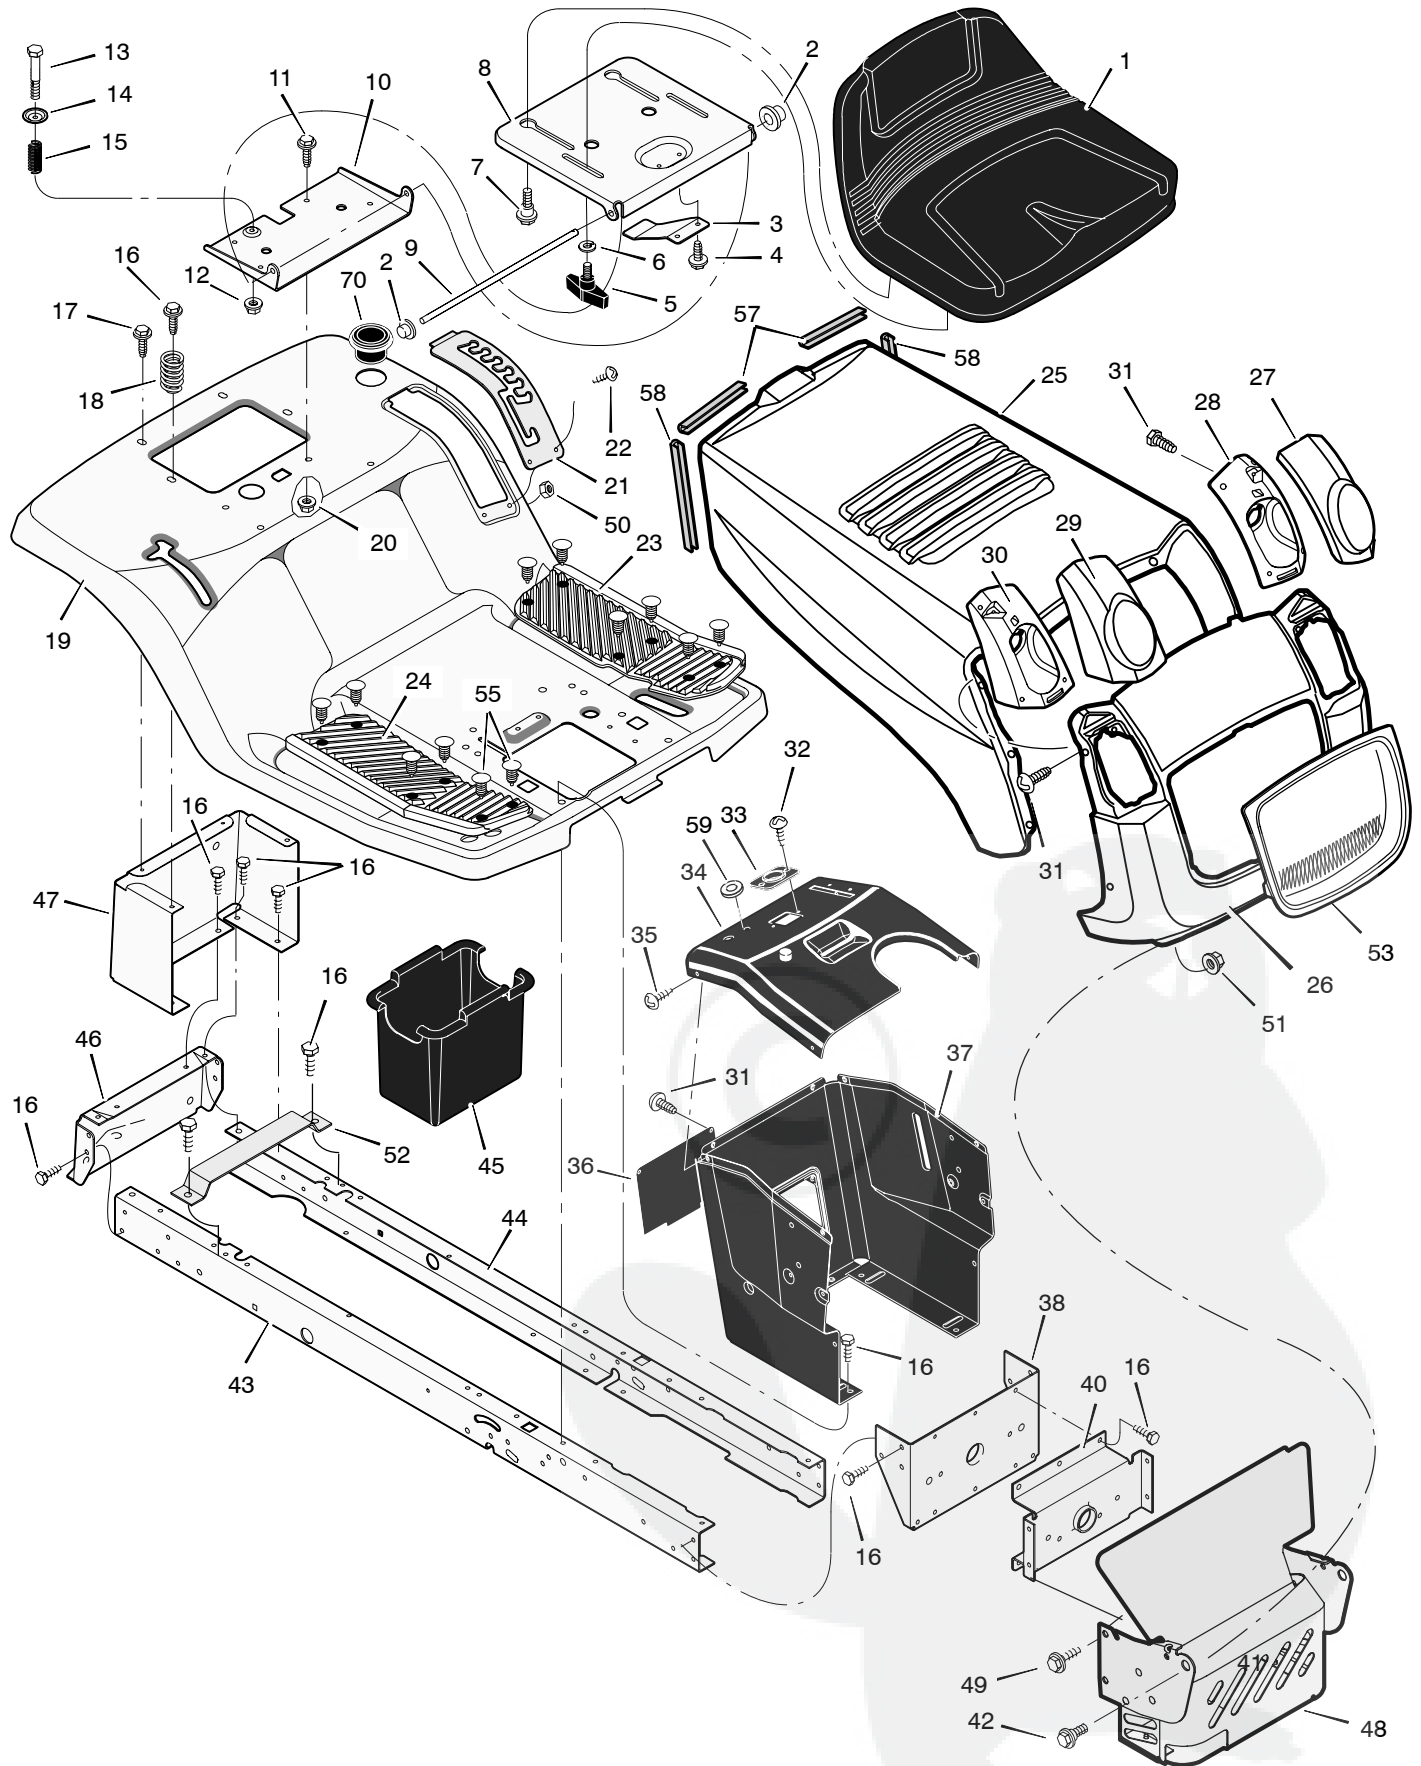


MODEL 405004x50B

REPAIR PARTS CHASSIS & HOOD

Key No.	Part No.	Description
1	690567	Seat
2	028x23	Cap, Push On
3	094057	Spring
4	26x229	Screw
5	1001054	Bolt, Wing
6	017x47	Washer
7	009x56	Bolt, Shoulder
8	094154E245	Support, Seat
9	094156 Z	Rod, Pivot
10	1001648E245	Bracket, Pivot
11	001x45	Bolt
12	015x89	Nut
13	009x55	Bolt, Shoulder
14	094155 Z	Washer
15	164x31	Spring
16	26x249	Screw
17	26x263	Screw
18	164x30	Spring
19	1001558E245	Deck, Seat
20	15x123	Nut
21	094829E701	Plate, Index
23	1001583	Mat, Left
24	1001580	Mat, Right
25	1001538E245	Hood
26	1001531E717	Grille
27	1001546	Lens, Left
28	1001544	Housing, Left Headlamp
29	1001545	Lens, Right
30	1001543	Housing, Right Headlamp

Key No.	Part No.	Description
31	26x270	Screw
32	26x238	Screw
33	1001491	Bearing, Steering
34	1001584E717	Dash
35	26x201	Screw
36	093007E717	Panel, Access
37	095318E717	Support, Dash
38	1001270E701	Bracket, Rear Hanger
40	094007E700	Axle, Hanger
42	009x58	Bolt
43	1001928E701	Frame, Right
44	1001927E701	Frame, Left
45	690424	Container, Battery
46	1001002E701	Plate, Hitch
47	690434E701	Panel, Rear
48	1001627-717	Shield, Heat
—	1001620-717	Guard, Heat Shield *
49	26x277	Screw
50	015x81	Nut
51	15x124	Nut
52	690482E701	Support, Battery
53	1001541	Insert, Grille
55	0193x3	Fastener, Panel
57	1001652	Trim, Hood (3.75")
58	1001653	Trim, Hood (6.5")
59	1001755	Grommet, Parking Brake
70	1001542	Holder, Cup
—	690650	Bag Assembly, Parts
—	F-040722L	Instruction Book & Parts List

* Not Illustrated

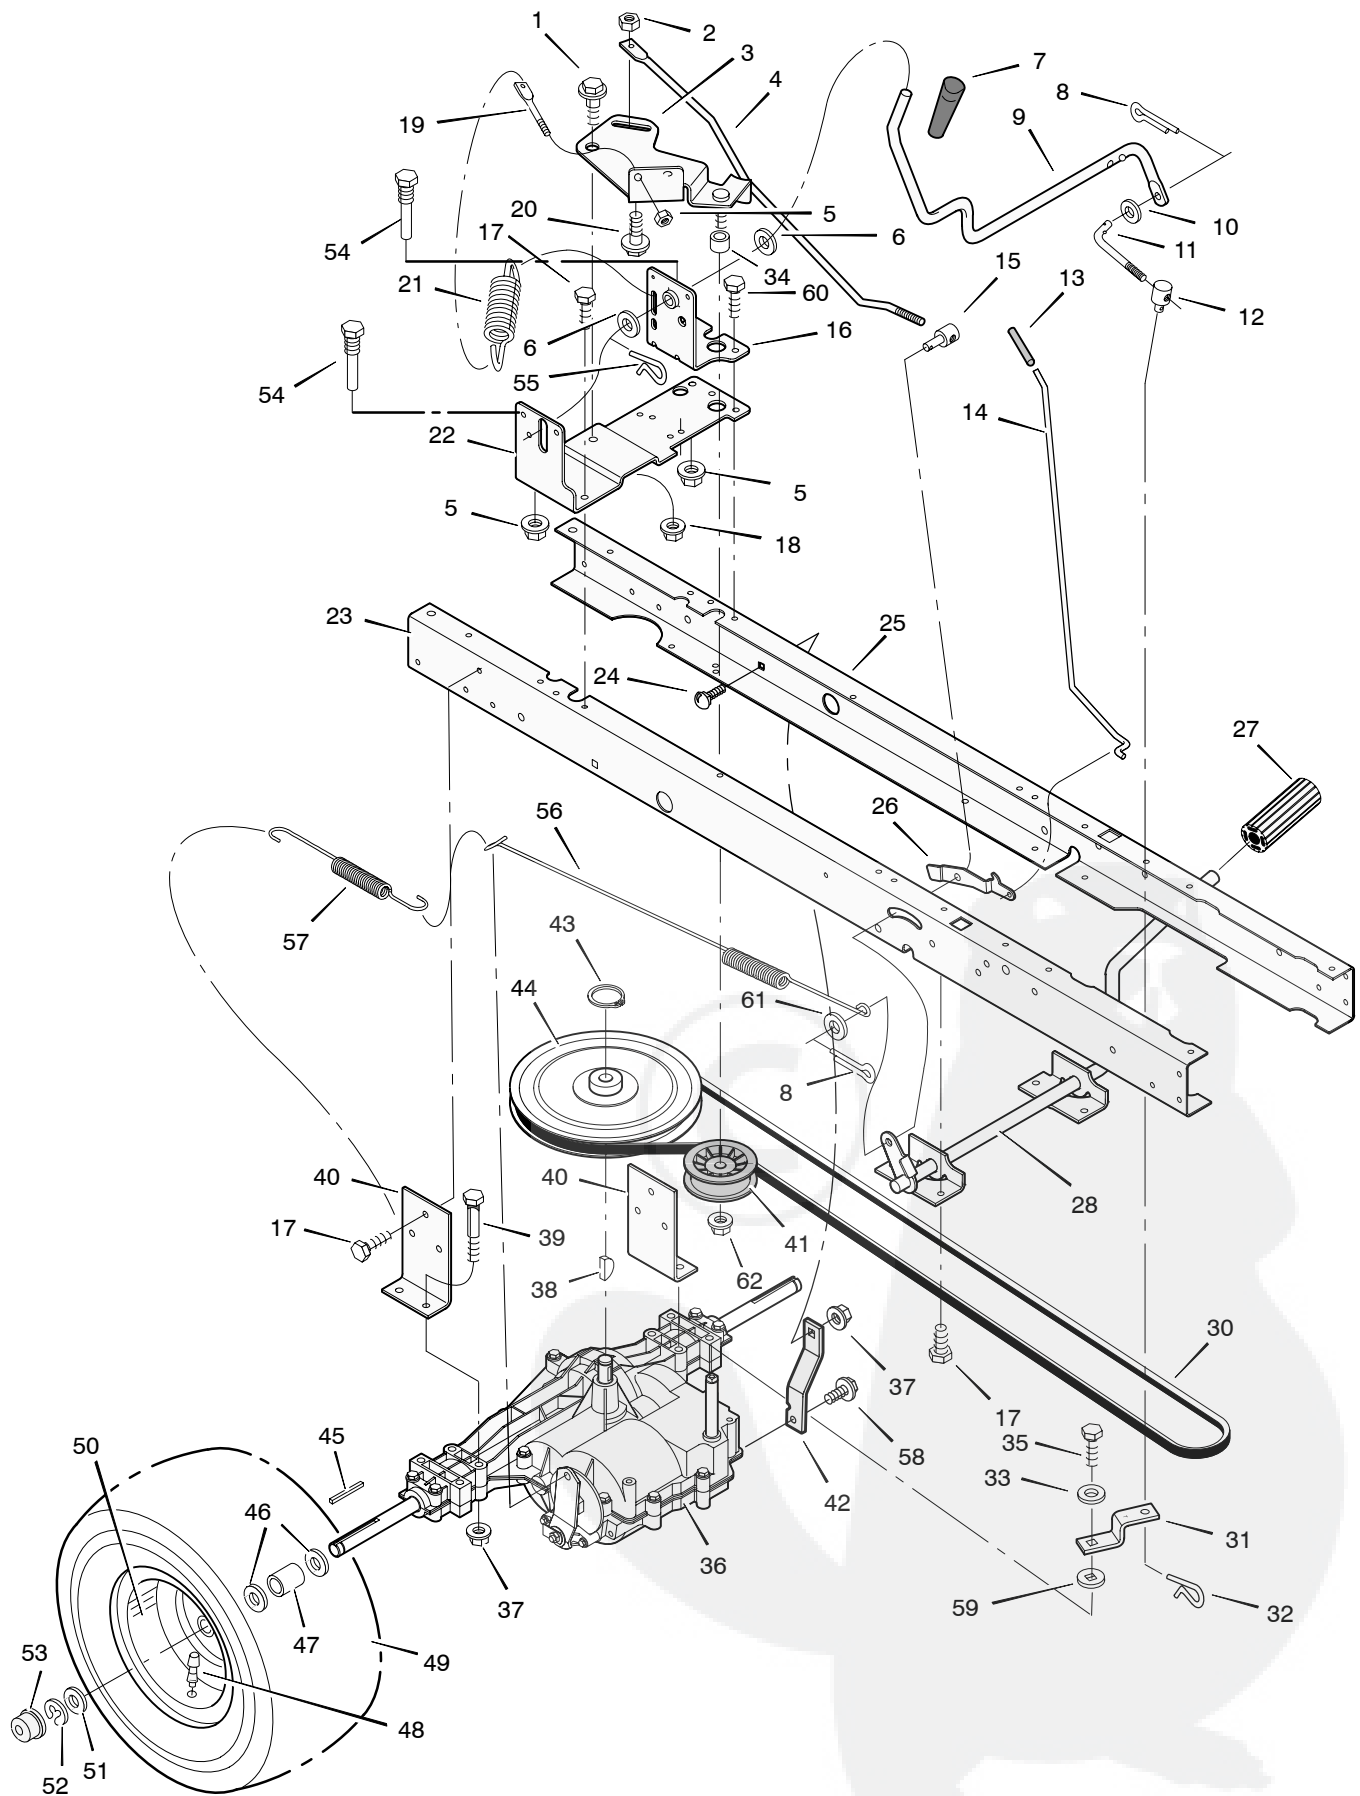


MODEL 405004x50B

REPAIR PARTS MOTION DRIVE

Key No.	Part No.	Description	Key No.	Part No.	Description
1	009x39	Bolt, Shoulder	33	017x38	Washer
2	015x89	Nut, Hex	34	690369	Spacer
3	690273	Arm, Idler	35	06x105	Bolt
4	094041 Z	Rod, Clutch	36	— ** —	Transaxle, Peerless
5	015x79	Nut	37	015x88	Nut
6	17x102	Washer	38	020697	Key, Woodruff
7	092697	Grip	39	01x155	Bolt
8	030x20	Pin, Cotter	40	094008E701	Bracket, Transaxle
9	094043 Z	Lever, Shift	41	690409	Pulley
10	017x47	Washer	42	094433E700	Bracket, Transaxle Support
11	094044 Z	Link, Shift	43	0011x7	Ring Retainer
12	021920 Z	Nut, Adjuster	44	095094	Pulley, Drive
13	091079	Grip	45	021553	Key, Square
14	1001245 Z	Rod, Parking Brake	46	17x160	Washer
15	094815 Z	Nut, Adjuster	47	690554 Z	Spacer, Transaxle
16	1001303 Z	Bracket, Shift Pivot	48	024373	Stem, Valve
17	26x249	Screw	49	024375	Tire *
18	015x84	Nut	—	407049	Tube
19	094042 Z	Mount, Stud Spring	50	092294—601	Wheel & Tire Assembly
20	009x54	Bolt, Shoulder	51	17x195	Washer
21	165x116	Spring, Extension	52	0011x3	E-Ring
22	1001302E701	Bracket, Right Shifter	53	094618	Hub Cap
23	1001928E701	Frame, Right	54	093349	Guide, Belt
24	002x53	Bolt, Carriage	55	0031x4	Pin, Hair
25	1001927E701	Frame, Left	56	165x115	Spring, Extension
26	094045 Z	Latch, Parking Brake	57	165x92	Spring, Extension
27	021544	Pedal	58	26x216	Screw
28	094038E700	Lever, Brake/Clutch	59	17x148	Washer
30	037x87	Belt, Motion Drive	60	26x267	Screw
31	094031 Z	Yoke, Shift	61	17x169	Washer
32	0031x6	Pin, Hair	62	015x98	Nut

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

** For Replacement Parts see the Transaxle manufacturer.

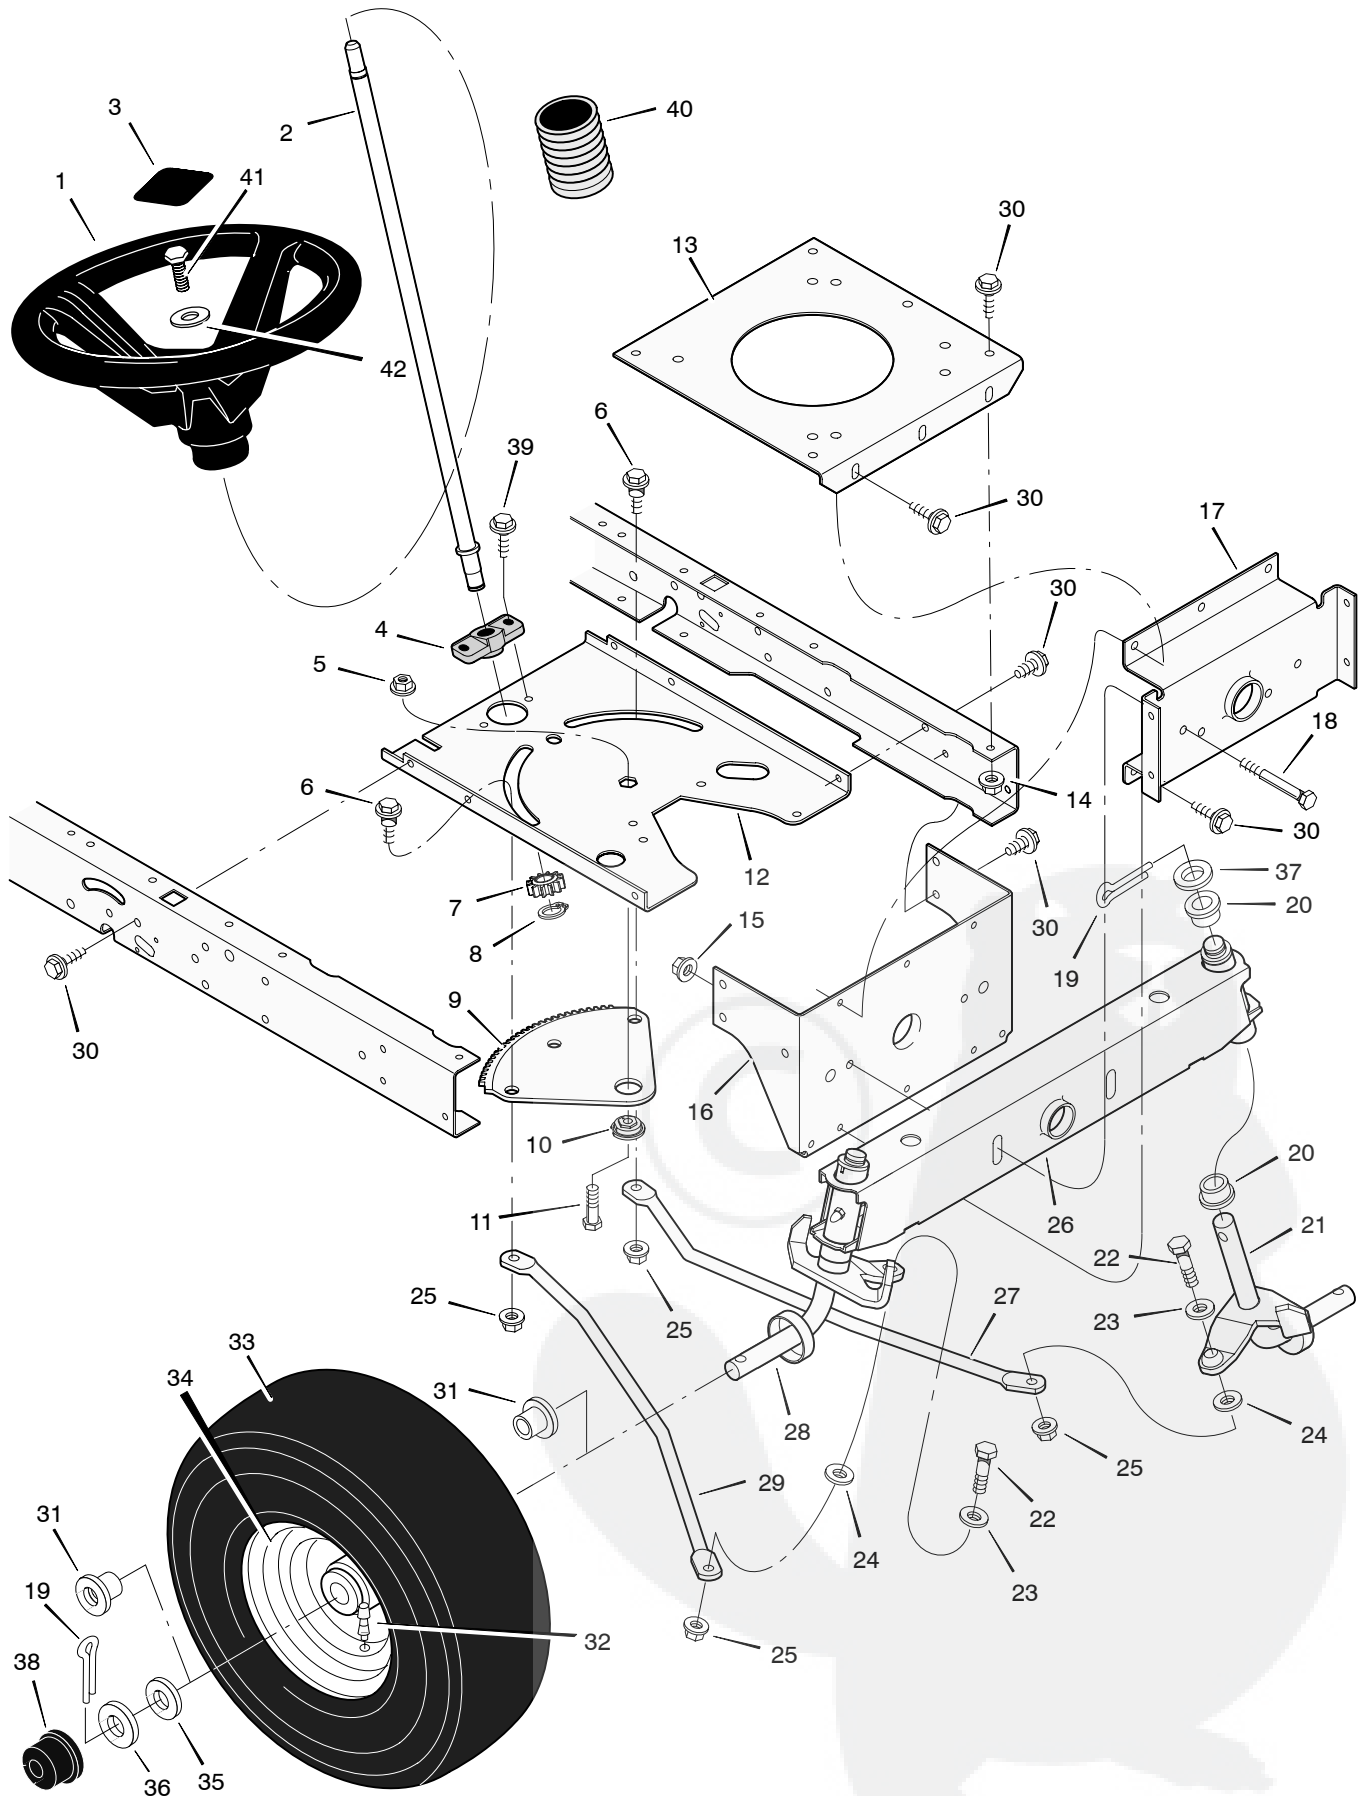


MODEL 405004x50B

REPAIR PARTS STEERING

Key No.	Part No.	Description	Key No.	Part No.	Description
1	095184	Wheel, Steering	23	17x104	Washer
2	690625	Post, Steering	24	017x53 Z	Washer
3	711325	Insert, Steering Wheel	25	015x84	Nut, Flange
4	094124	Bearing	26	690210	Axle Assembly
5	15x111	Nut, Flange	27	095329E701	Drag Link, Left
6	009x57	Bolt, Shoulder	28	094575E701	Spindle Assembly, Right
7	690183	Gear, Pinion	29	095328E701	Drag Link, Right
8	011x25	Ring, Snap	30	26x249	Screw
9	094121	Gear, Sector	31	091334	Bearing, Wheel
10	094123	Bearing	32	024373	Stem, Valve
11	001x84	Bolt	33	024380	Tire *
12	1001121E701	Plate, Steering	—	407046	Tube
13	094006E700	Plate, Engine	34	094581—601	Wheel and Tire Assembly
14	015x88	Nut, Flange	35	17x195	Washer
15	15x118	Nut, Flange	36	17x192	Washer
16	1001270E701	Bracket, Hanger	37	17x113	Washer
17	094007E717	Axle, Hanger	38	094618	Hub Cap
18	01x146	Bolt	39	26x267	Screw
19	030x49	Pin, Cotter	40	054789	Bellows
20	690150	Bearing	41	0025x3	Bolt
21	094576E701	Spindle Assembly, Left	42	17x146	Washer
22	01x111	Bolt			

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

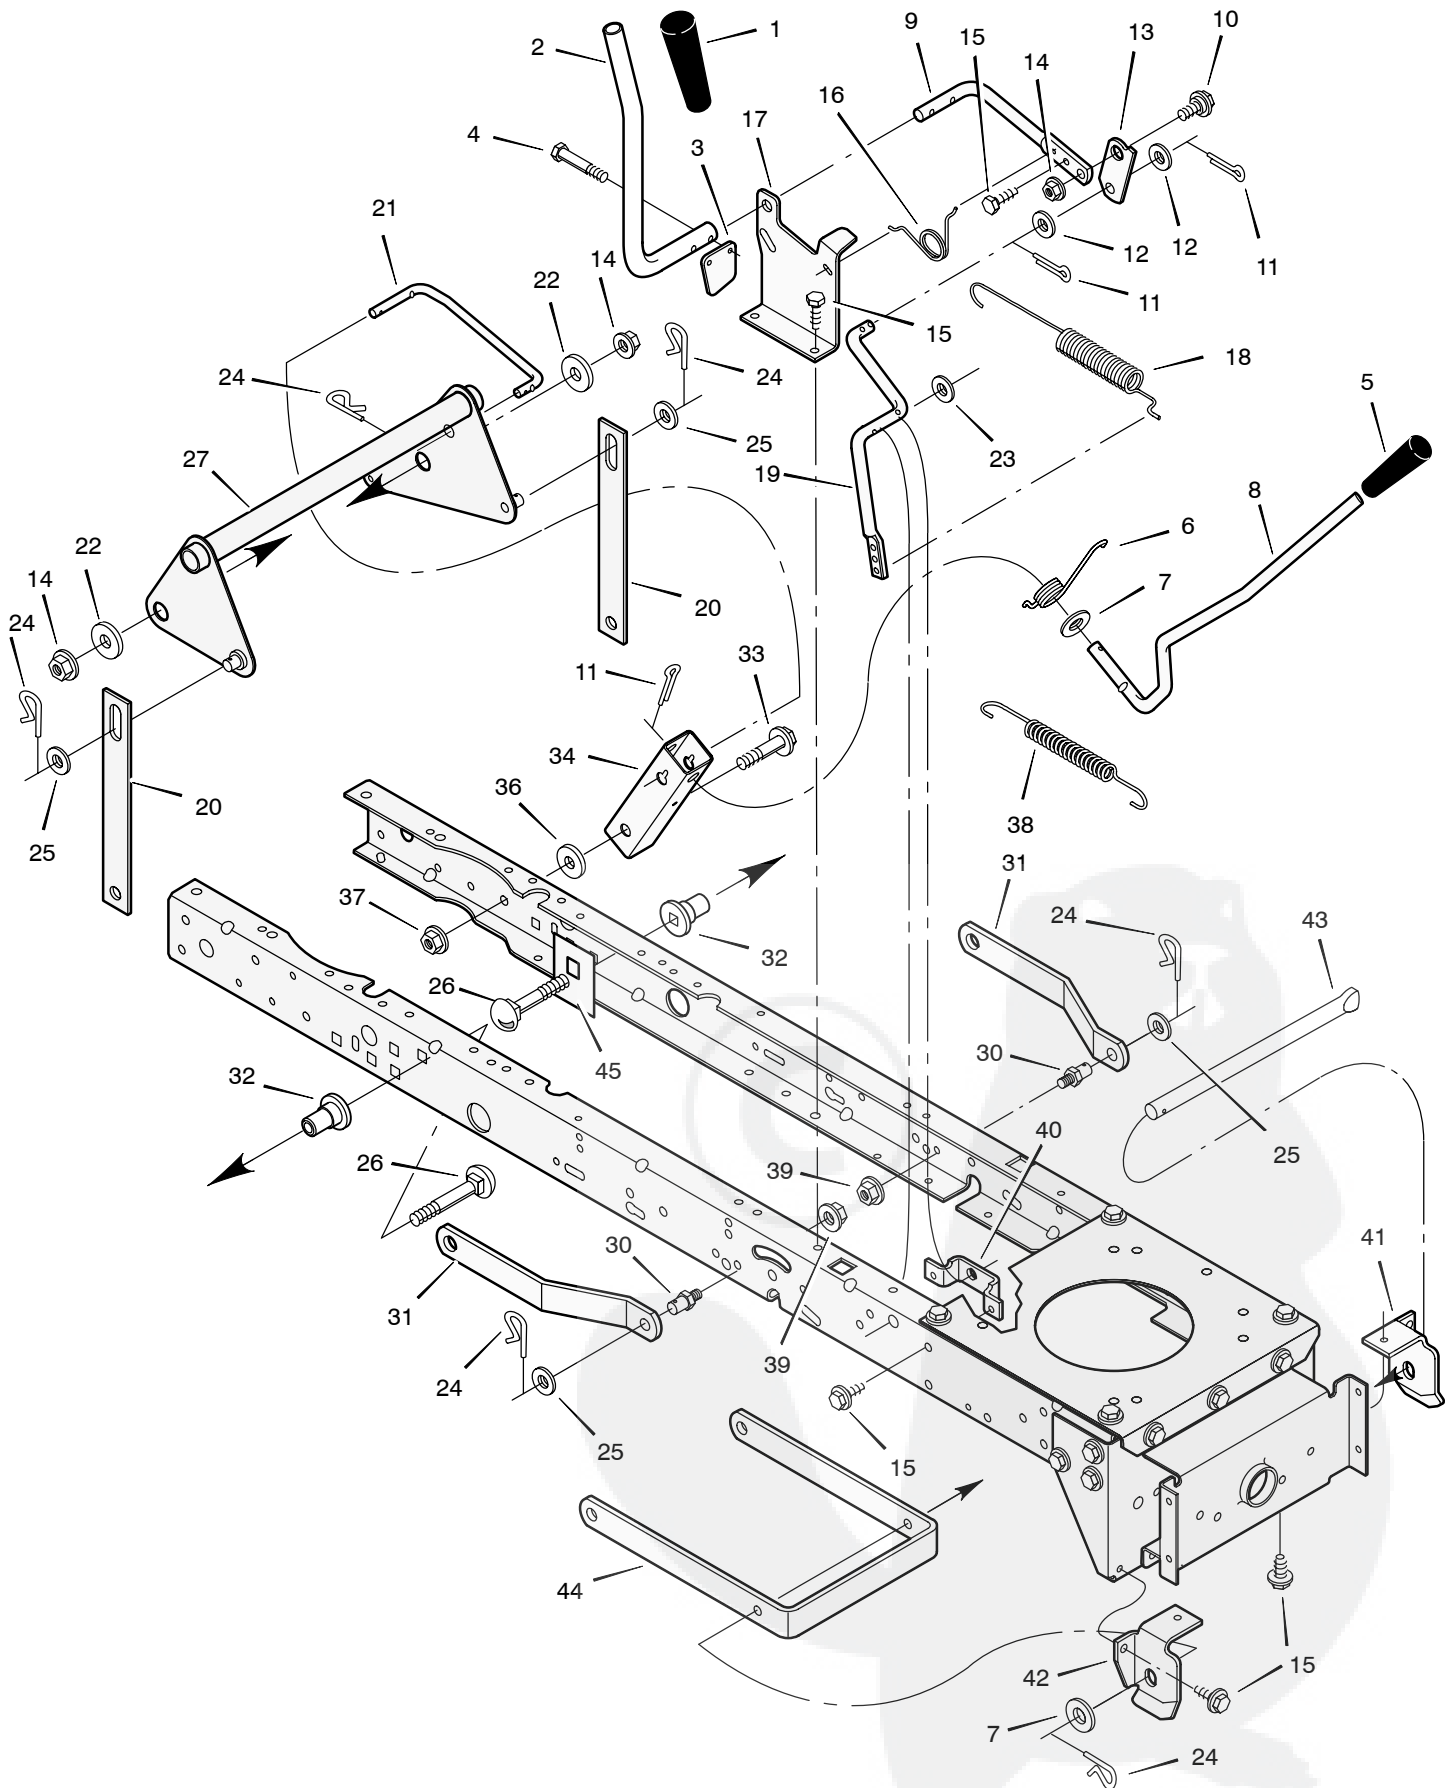


MODEL 405004x50B

REPAIR PARTS MOWER HOUSING SUSPENSION

Key No.	Part No.	Description
1	092698	Grip
2	094157 Z	Handle, PTO
3	094022 Z	Pad, Switch
4	0025x3	Bolt
5	092697	Grip
6	166x40	Spring
7	17x103	Washer
8	690533	Handle, Lift
9	094017 Z	Lever, PTO
10	009x39	Bolt, Shoulder
11	030x20	Pin, Cotter
12	017x57	Washer
13	094004 Z	Link, PTO
14	015x84	Nut, Flange
15	26x249	Screw
16	166x39	Spring
17	094018E701	Bracket, PTO
18	165x119	Spring
19	690394E701	Crank, PTO
20	690212E701	Link, Lift
21	690122E701	Link, Lift Handle

Key No.	Part No.	Description
22	17x168	Washer
23	017x57	Washer
24	0031x4	Pin, Hair
25	017x91	Washer
26	002x85	Bolt, Carriage
27	1001111E701	Lever Assembly, Lift
30	094067	Pin
31	094055E701	Bracket, Rear Suspension
32	690151	Spacer, Lifter
33	009x53	Bolt, Shoulder
34	094015E701	Bracket, Pivot
36	17x191	Washer
37	015x84	Nut, Flange
38	165x131	Spring
39	015x68	Nut, Flange
40	094005E701	Bracket, PTO
41	094027E701	Hanger, Left Deck
42	094026E701	Hanger, Right Deck
43	094158 Z	Rod, Hanger
44	690539E701	Bracket, Suspension
45	1001098E701	Plate, Stiffening

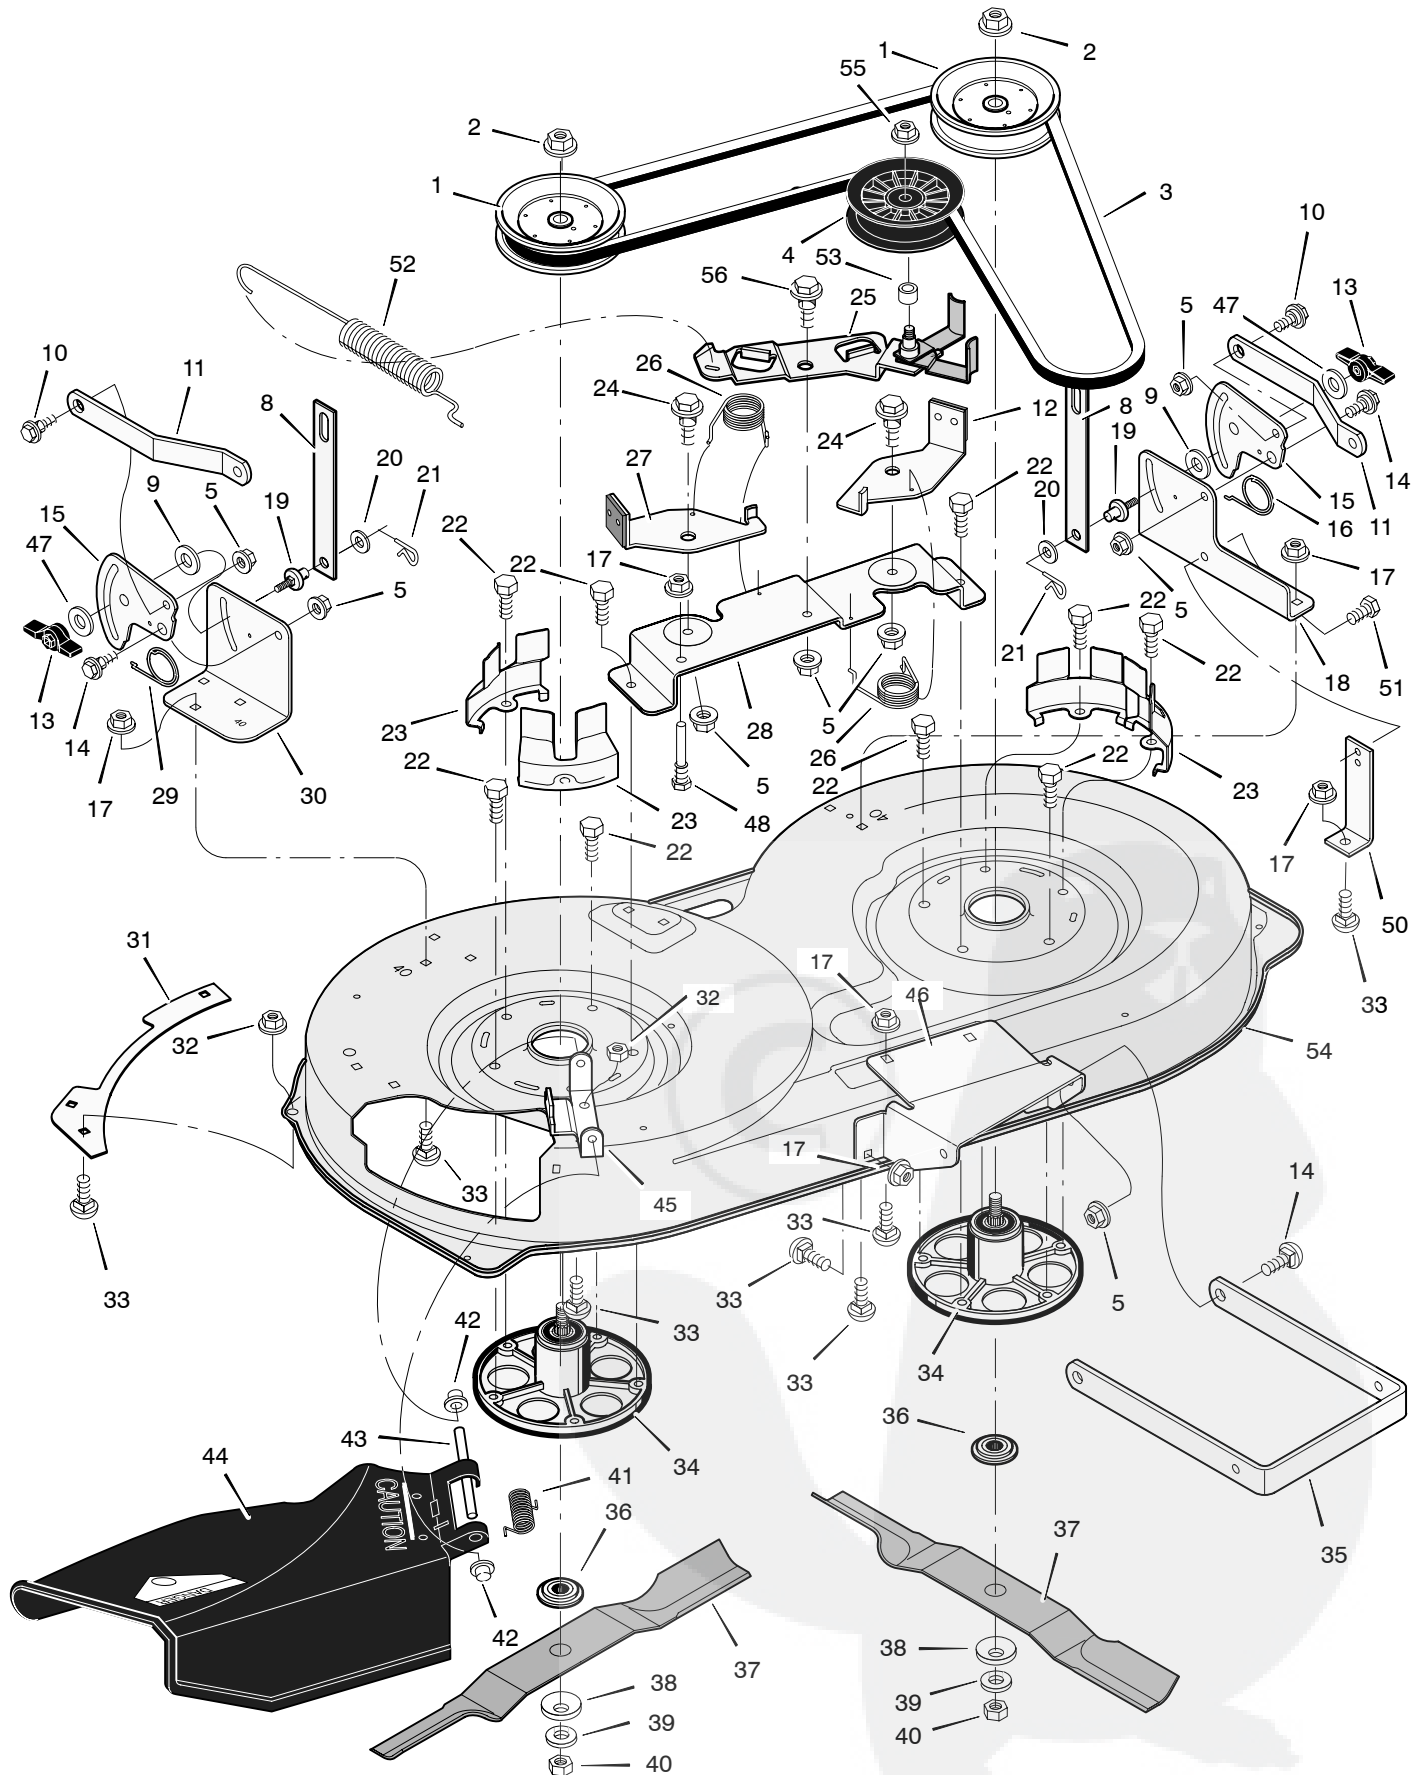

MODEL 405004x50B


REPAIR PARTS MOWER HOUSING

Key No.	Part No.	Description	Key No.	Part No.	Description
1	092851	Pulley, Jackshaft	30	094142E701	Bracket, Suspension
2	15x140	Nut, Hex	31	091770E700	Plate
3	037x62	Belt, Mower Drive	32	015x88	Nut, Flange
4	690387	Pulley, Idler	33	002x53	Bolt, Carriage
5	015x84	Nut, Flange	34	1001200	Mandrell
8	690212E701	Link, Lift	35	690539E701	Bracket, Suspension
9	094137	Pad, Friction	36	690411	Adapter, Blade
10	009x52	Bolt, Shoulder	37	1001428E701	Blade
11	094055E717	Bracket, Suspension	38	17x166	Washer
12	094049E701	Pad Assembly, Left Brake	39	17x165	Washer
13	094068	Knob	40	15x100	Nut
14	009x51	Bolt, Shoulder	41	0166x4	Spring
15	094128E717	Plate, Suspension	42	028x23	Cap, Push On
16	166x43	Spring	43	094957 Z	Rod, Pivot
17	015x79	Nut, Flange	44	094707	Deflector Assembly
18	094143E700	Bracket, Suspension	45	094956E701	Bracket, Deflector
19	095194	Pin, Hanger	46	094144E700	Bracket, Front Hanger
20	017x91	Washer	47	017x45	Washer
21	0031x4	Pin, Cotter	48	094781	Guide, Belt
22	0025x7	Bolt	50	094681E700	Bracket, Support
23	094051E701	Cover, Pulley	51	26x249	Screw
24	009x39	Bolt, Shoulder	52	165x119	Spring, Extension
25	690408E701	Arm, Idler	54	094141E701	Housing, Blade *
26	166x41	Spring	55	015x98	Nut, Flange
27	094047E701	Pad Assembly, Right Brake	56	009x72	Bolt, Shoulder
28	094145E700	Bracket Assembly, Brake	1-56	7601044	Complete Housing Assembly
29	166x42	Spring			

* Includes Key No. 17, 18, 30, 31, 32, 33, 45, 46, 47 and 51.

MODEL 405004x50B

REPAIR PARTS ENGINE MOUNT

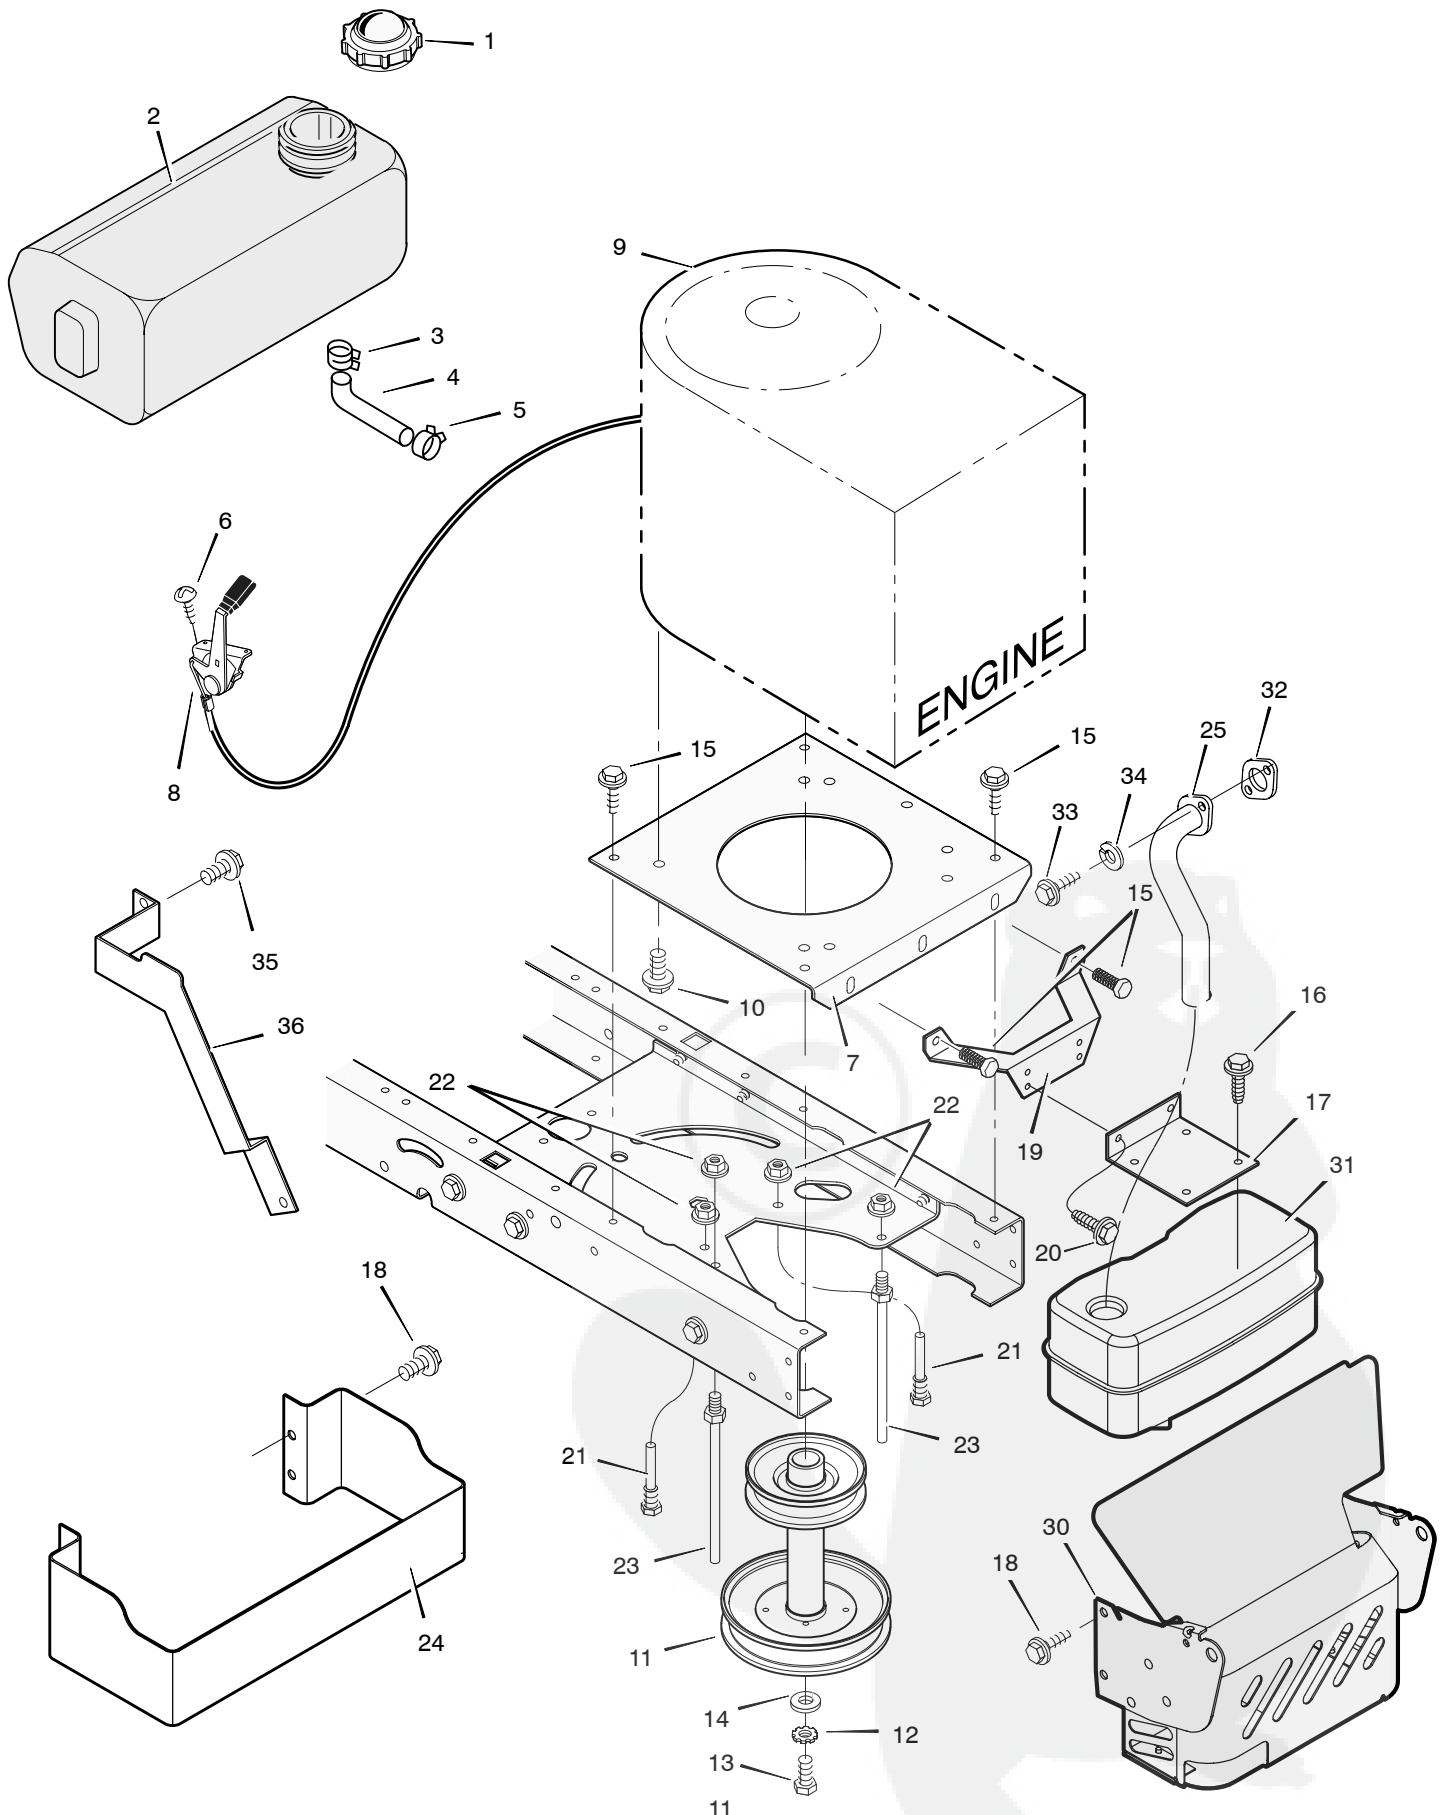


MODEL 405004x50B

REPAIR PARTS ENGINE MOUNT

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Fuel Cap **	092317	17	Bracket, Muffler	690538E700
2	Fuel Tank	690280	18	Screw	26x277
3	Hose Clamp **	095197	19	Bracket, Muffler Mount	690537E701
4	Fuel Line (Must cut to length) **	7601033	20	Screw	026x263
5	Hose Clamp **	095197	21	Guide, Belt	094384
6	Screw	26x201	22	Nut, Flange	015x79 Z
7	Plate, Engine	094006E701	23	Guide, Belt	094066
8	Throttle Control	092371	24	Guard, Heat Shield	1001620E717
9	Engine, Briggs & Stratton	— * —	25	Exhaust Tube, Single	1001747
10	Bolt, Engine Mount	0025x7	30	Shield, Heat	1001619E717
11	Stack Pulley Assembly	690439 Z	31	Muffler	094654
12	Lockwasher	019x35	32	Gasket	091309
13	Bolt, Hex	01x140	33	Screw	06x103
14	Washer	17x170	34	Washer	018x15
15	Screw	26x249	35	Bolt, Washer Hex Head	06x104
16	Screw	26x229	36	Guard, Exhaust Pipe	1001880

* For information on Replacement Parts for this engine contact the manufacturer.

** These parts are included with Key No. 2

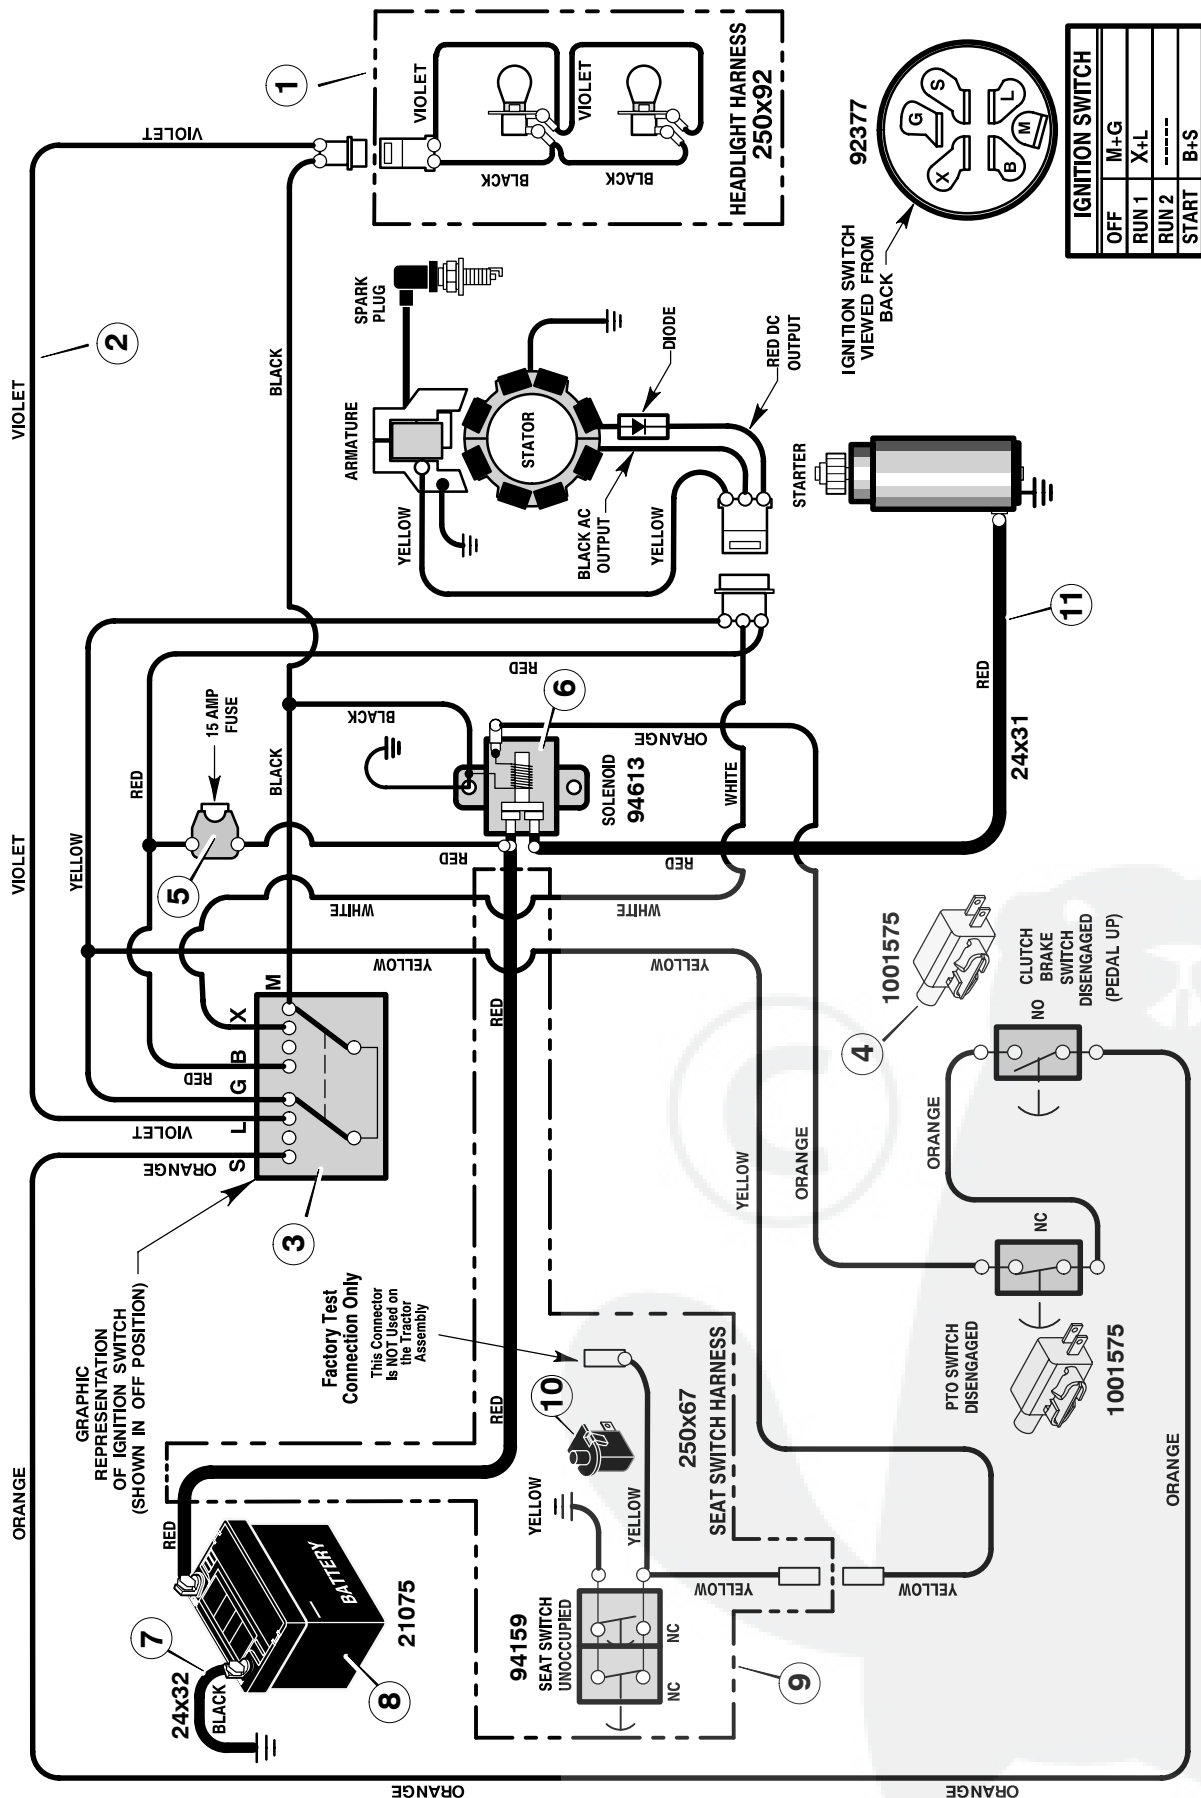

MAIN HARNESS: 250X113
REAR HARNESS: 250X67
LIGHT HARNESS: 250X92

Key No.	Part No.	Description
1	250x92	Harness, Light Wire
	1001716	Socket, Light
	090084	Bulb, Light
2	250x113	Harness, Chassis Wire
3	092377	Switch, Ignition
	020729	Key, Ignition
	091489	Nut, Hex
	091488	Cap, Ignition
4	1001575	Switch, Limit
5	302031	Fuse
	407078	Holder, Fuse
6	094613	Solenoid
	26x229	Screw, Mounting
	15x116	Locknut
7	024x32	Cable, Battery Ground
	26x229	Screw, Ground Cable
8	021075	Battery
	002x82	Bolt, Carriage
	014x79	Wingnut
	690604	Boot, Battery –Positive
9	250x67	Harness, Seat Switch Wire
10	094159	Switch, Seat Sensor
11	024x31	Cable