


MODEL 40707x20A

REPAIR PARTS CHASSIS & HOOD

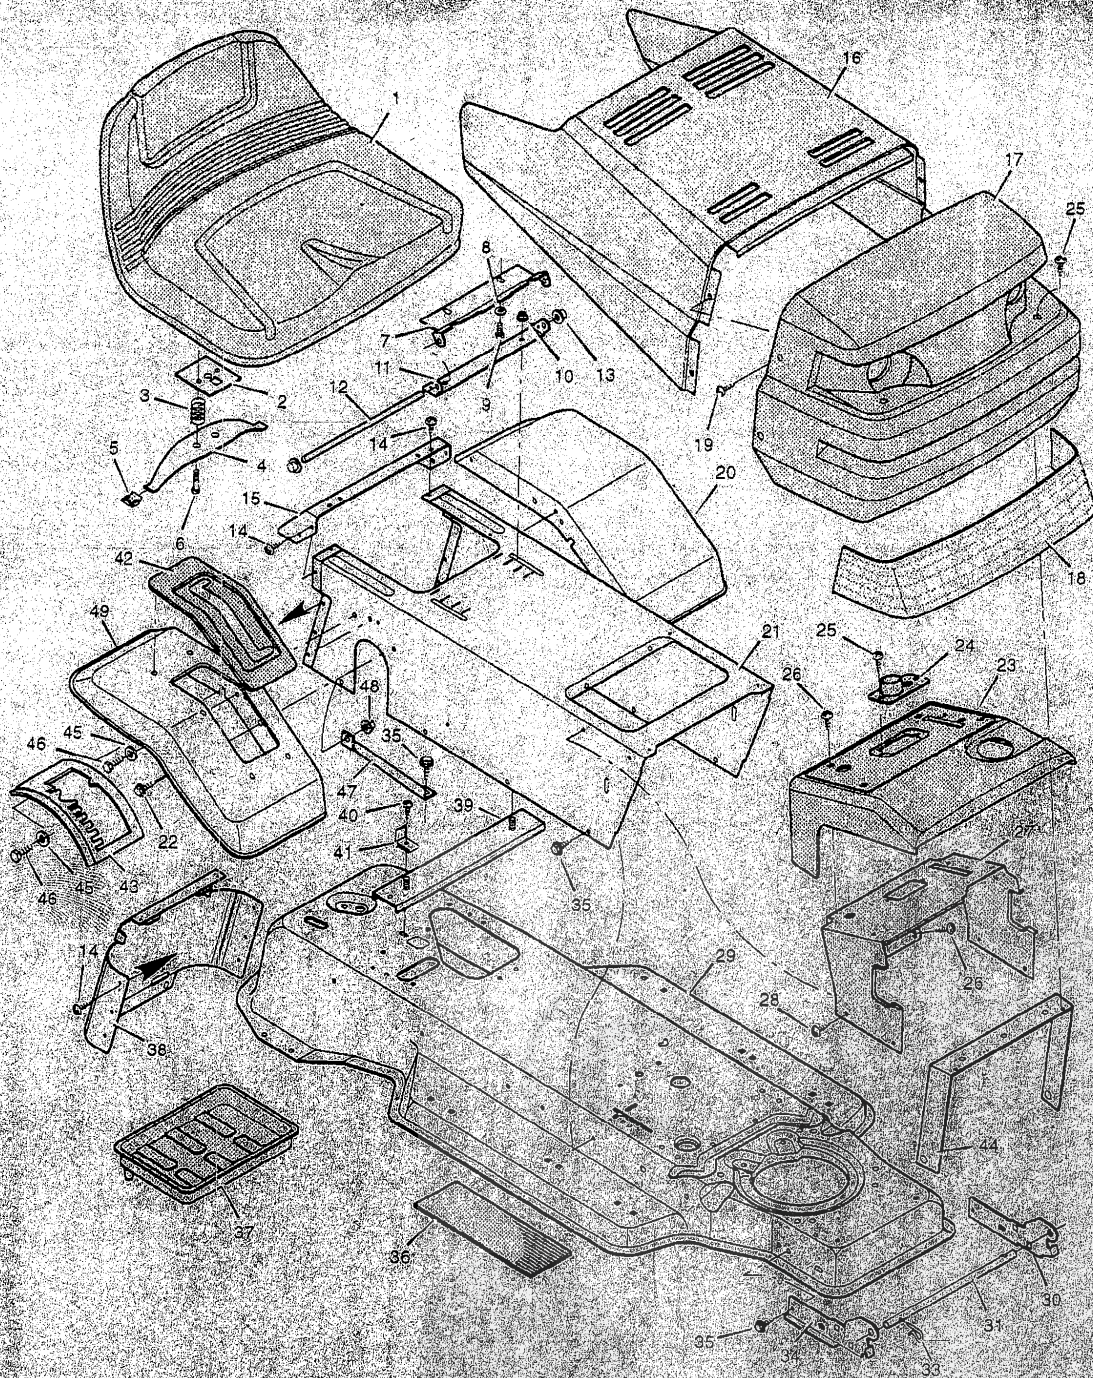


MODEL 40707x20A

REPAIR PARTS CHASSIS & HOOD

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Seat	91965	30	Bracket, Left Grille	92347
2	Plate Assembly, Switch	91963Z	31	Rod, Pivot	92332Z
3	Spring, Compression	164x26	33	Pin, Hair	31x4
4	Spring, Seat	91964	34	Bracket, Right Grille	92346
5	Glide, Spring	91822	35	Screw	26x249
6	Bolt, Shoulder	9x38	36	Mat	91900
7	Support, Seat	92334E700	37	Tray, Battery	91895
8	Lockwasher	18x16	38	Cap, Console *	92443E700
9	Bolt, Hex	1x45	39	Channel Assembly	91857E700
10	Locknut, Flange	15x88	40	Screw	26x184
11	Bracket, Pivot	91729E700	41	Clip, Battery	91941
12	Rod, Pivot	91730E700	42	Cover, Shift	91905
13	Cap, Push On	28x23	43	Gate, Shift	91892
14	Screw, Tap	26x250	44	Brace, Grille	92448Z
15	Fender, Apron	91724E700	45	Washer	17x36Z
16	Hood	92333F200	46	Bolt, Hex	1x38
17	Grille	92343	47	Strut, Shifter	91910E700
18	Lens	92344	48	Locknut	15x66
19	Screw	9x47	49	Fender, SQG	92379F200
20	Fender	92328F200	—	Instruction Book	F-93719
21	Console Assembly	92439F200	—	Repair Parts Book	F-93720
22	Screw	26x263	—	Decal, Left Hood	44x3043
23	Dash Panel	92345F200	—	Decal, Right Hood	44x3042
24	Bearing, Steering	92348	—	Decal, Console	44x3046
25	Screw	26x239	—	Decal, Parking Brake	44x760
26	Screw	26x270	—	Decal, Top Console - Warning	44x1947
27	Support, Dash	92331E700	—	Decal, Fender	44x119
28	Screw	26x250	—	Plaque, Name (Hood)	280x56
29	Frame	92500F200	—	Plaque, Name (Grille)	280x57

MODEL 40707x20A

REPAIR PARTS
MOTION DRIVE

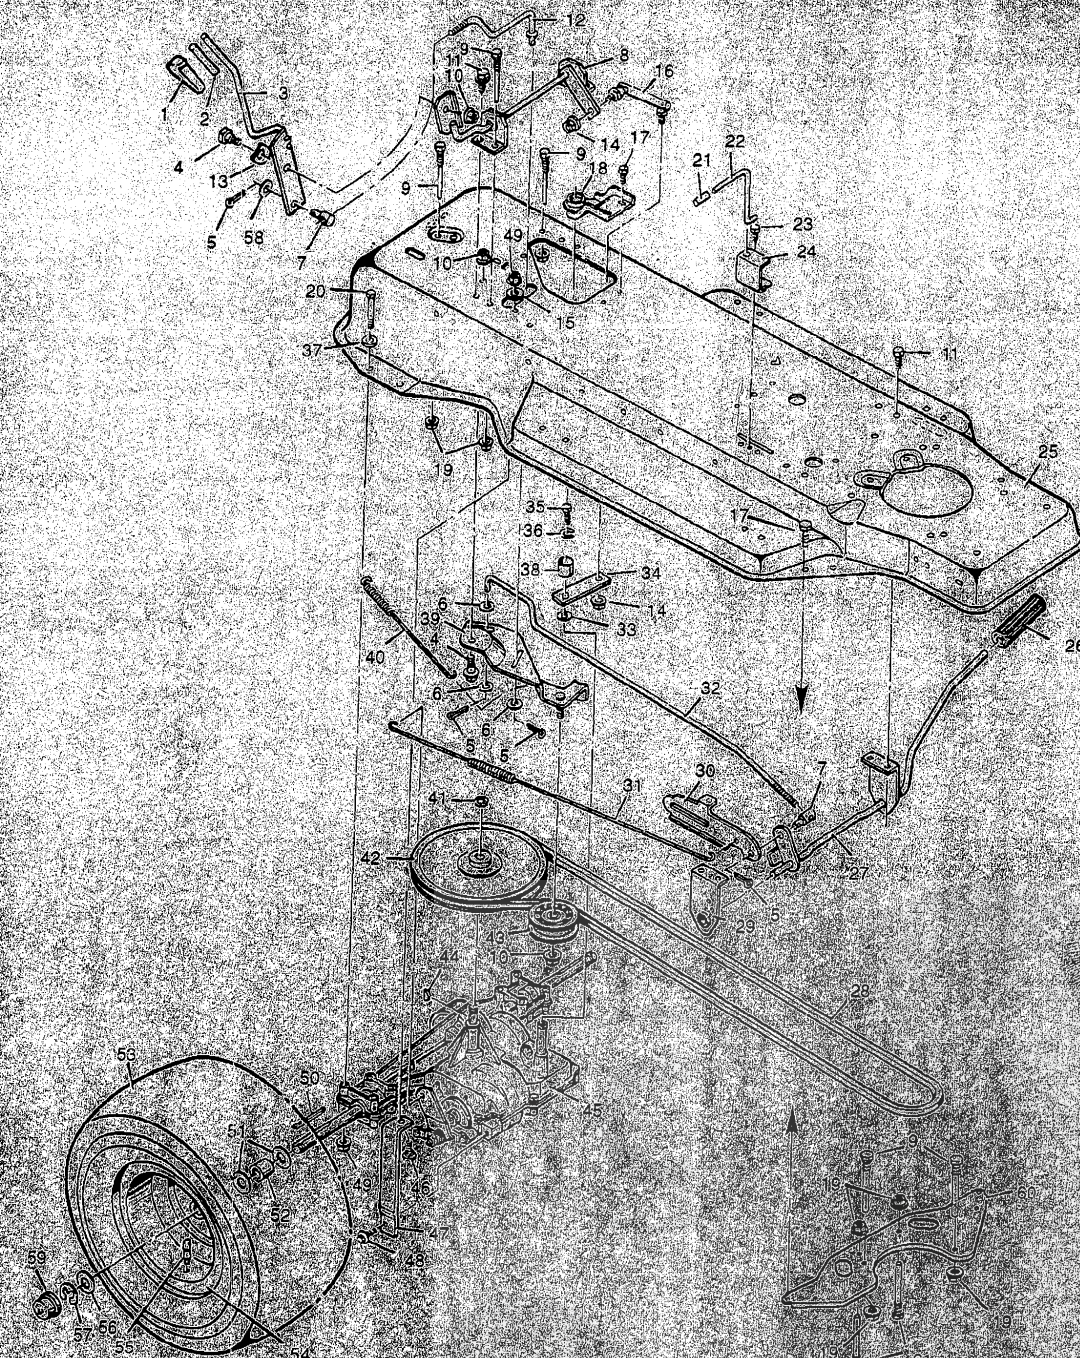

P-93720

MODEL 40707x20A

REPAIR PARTS MOTION DRIVE


Key No.	Description	Part No.	Key No.	Description	Part No.
1	Grip	55449	33	Washer	17x148
2	Grip, Inner	20476	34	Yoke, Shift	92041Z
3	Handle, Shift	92031Z	35	Bolt, Hex	1x82
4	Bolt, Shoulder	9x39	36	Lockwasher	18x32
5	Pin, Cotter	30x20	37	Washer	17x146Z
6	Washer	17x47Z	38	Pilot, Support	91889
7	Nut, Adjustable	21920	39	Bracket Assembly, Idler	92029Z
8	Shifter Assembly	92043E700	40	Spring, Motion Drive	165x76
9	Guide, Belt	91754	41	Ring, Retainer	11x7
10	Locknut, Flange	15x84	42	Pulley, Motion Drive	91807
11	Screw	26x249	43	Pulley, Backside Idler	91179
12	Link, Clutch	91877	44	Key, Woodruff	20697
13	Washer, Curved	20x1	45	Transaxle, Complete Peerless Model No. 930-011**	
14	Locknut, Flange	15x87	46	Bolt, Carriage	2x64
15	Washer	17x45	47	Support, Transaxle	91804E700
16	Link Assembly, Shifter	92085	48	Screw	26x216
17	Screw	26x249	49	Locknut, Flange	15x88
18	Bracket, Support	91899Z	50	Key, Square	21553
19	Nut, Flange	15x79	51	Washer	17x160
20	Bolt, Hex	1x124	52	Spacer, Transaxle	87x100Z
21	Grip	91079	53	Tire (Included with Key No. 54) *	91914
22	Rod, Control	91727E700	—	Tube (Included with Key No. 54)	407049
23	Screw	26x214	54	Wheel and Tire Assembly	92289-601
24	Guide, Bracket	91825E700	55	Valve Stem	24373
25	Frame Assembly	92500F200	56	Washer	17x115
26	Pedal, Clutch/Brake	21544	57	E-Ring	11x3
27	Lever Assembly	91862E700	58	Washer	17x53Z
28	Belt, Motion Drive	37x61	59	Hub Cap (Optional)	24582
29	Bracket, Lever Support	91713E700	60	Plate, Belt Guide	92501E700
30	Latch, Park Brake	91712Z	61	Guide, Belt	20619
31	Spring, Brake Extension	165x82			
32	Rod, Clutch	91808Z			

*When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

†Parts are available from a Tecumseh Authorized Service Center. See the telephone directory.

MODEL 40707x20A

REPAIR PARTS STEERING

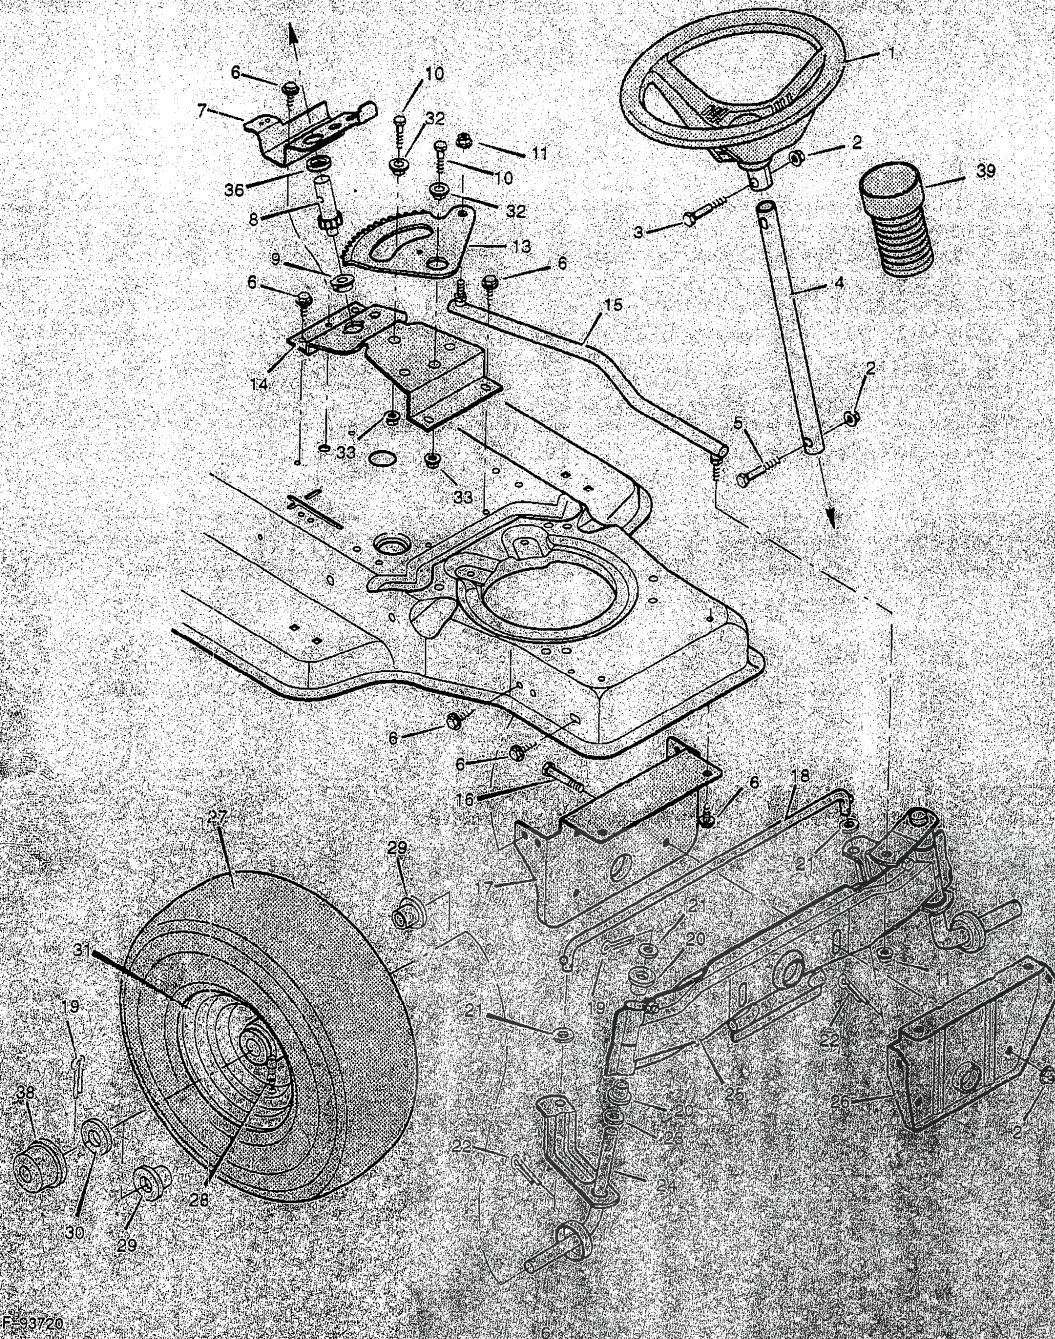

F-93720

MODEL 40707x20A

REPAIR PARTS STEERING

Key No.	Description	Part No.
1	Wheel, Steering	92078
2	Nut, Hex	15x90Z
3	Bolt, Hex	1x66
4	Post, Steering	91714Z
5	Bolt, Hex	1x74
6	Screw	26x249
7	Bracket, Sector**	91716E700
8	Gear, Pinion	402075
9	Bearing**	91756
10	Bolt, Hex**	1x84
11	Locknut, Flange	15x87
13	Gear, Sector	402075
14	Bracket, Sector**	91708E700
15	Link, Drag	91749E700
16	Bolt, Hex	1x138
17	Support, Rear Axle	91702E700
18	Rod, Tie	90038E700
19	Pin, Cotter	30x49
20	Bearing	90035
21	Washer	17x57
22	Pin, Cotter	30x20
23	Washer	17x113
24	Spindle Assembly, Right	91828E700
25	Spindle Assembly, Axle & Left	91827SE
26	Support, Front Axle	91701E700
27	Tire	91912
—	Tube	407047
28	Stem, Valve	24373
29	Bearing, Wheel	91334
30	Washer	17x115
31	Wheel & Tire Assembly	92287-601
32	Bearing**	92097
33	Locknut, Flange**	15x113
36	Spacer, Pinion Gear	92086
38	Hub Cap (Optional)	24582
39	Belows, Steering Post (Optional)	92059


When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

**These parts are included when you order Key Number 8 or 13.

IF-93720

MODEL 40707x20A

REPAIR PARTS MOWER SUSPENSION

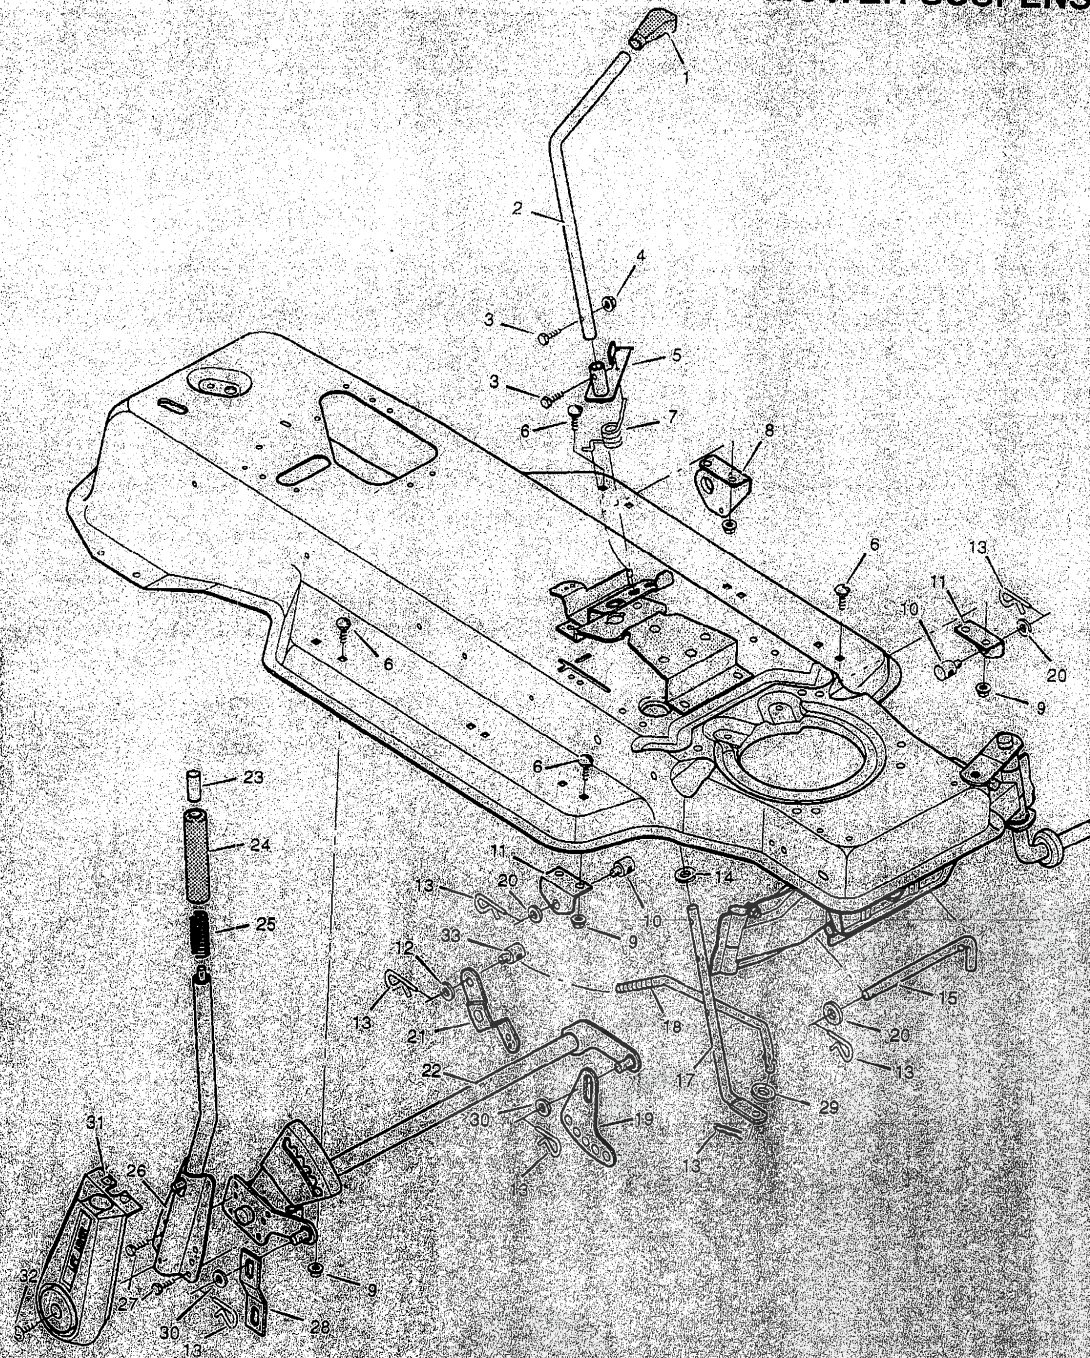


F-95720

MODEL 40707x20A**REPAIR PARTS
MOWER SUSPENSION**

Key No.	Description	Part No.
1	Grip	55449
2	Lever, Blade Control	91781Z
3	Bolt, Hex	25x3
4	Locknut, Hex	15x67
5	Lever Assembly, Switch	91917E700
6	Bolt, Carriage	2x53
7	Spring, Torsion	166x32
8	Bracket, Adjuster Rod	92066E700
9	Nut, Flange	15x79
10	Nut, Adjusting	92131
11	Bracket, Adjuster Rod	92133E700
12	Washer	17x124
13	Pin, Hair	31x4
14	Washer	17x67
15	Pin, Pull	90827Z
17	Lever, Lower Blade Control	91787E700
18	Rod, Blade Control	91795Z
19	Plate, Adjuster	91741E700
20	Washer	17x103
21	Bracket, Pivot	92033E700
22	Lifter Assembly	92065E700
23	Knob, Steel	91261
24	Grip	91398
25	Spring, Compression	164x21
26	Handle Assembly	91823E700
27	Screw	26x49
28	Link, Suspension	92064E700
29	Washer	17x47Z
30	Washer	17x91Z
31	Cover, Lift Lever (Optional)	92157
32	Screw	26x238
33	Nut, Adjusting	21920

MODEL 40707x20A


**REPAIR PARTS
MOWER HOUSING**

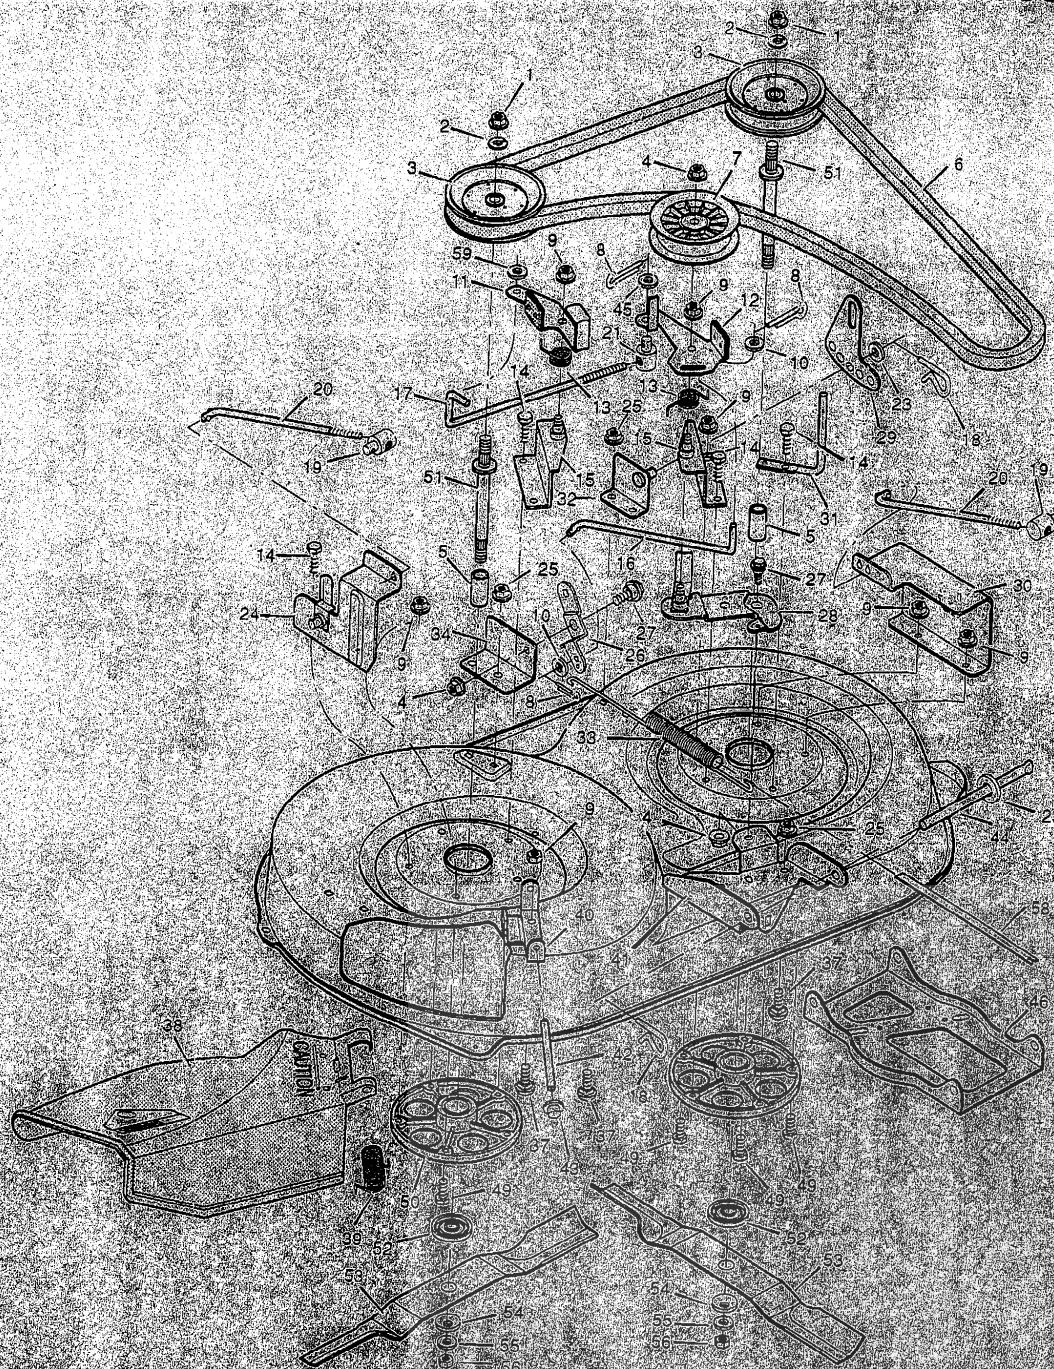

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Nut, Hex	15x100	30	Cover, Pulley	91792E700
2	Lockwasher	18x33	31	Guide, Belt	91797E700
3	Pulley, Jackshaft	91943	32	Bracket Assembly, Left Lifter	91813E700
4	Locknut, Flange	15x84	33	Spring, Extension	165x72
5	Spacer	91903	34	Bracket, Pivot	91743E700
6	Belt, Blade Drive	37x62	35	Plate	91770E700
7	Pulley, Idler	91801	36	Washer	17x57
8	Pin, Cotter	30x20	37	Bolt, Carriage	2x53
9	Locknut, Flange	15x88	38	Deflector Assembly, Chute	91982SE
10	Washer	17x46Z	39	Spring, Torsion	166x4
11	Brake Assembly, Right	92186E700	40	Bracket, Hinge	91765E700
12	Brake Assembly, Left	92187E700	41	Bracket, Front Hanger	91793E700
13	Spring, Torsion	166x27	42	Rod, Deflector	91767Z
14	Bolt, Hex	25x6	43	Cap, Push On	26x23
15	Bracket Assembly, Brake	92072E700	44	Rod, Hanger	91799Z
16	Rod, Brake	91745Z	45	Washer	17x124
17	Rod, Cross Link	92183Z	46	Hanger, Front	92119E700
18	Pin, Hair	31x4	49	Bolt, Hex	1x84
19	Nut, Adjustable	92131	50	Housing, Jackshaft	90905
20	Rod, Adjuster	91872Z	51	Jackshaft	91922
21	Nut, Adjustable	21920	52	Adapter, Blade	91926
22	Link, Suspension	92064E700	53	Blade, 40" (2 required)	92002E700
23	Washer	17x103	54	Washer, Belleville	17x166
24	Bracket Assembly, Right Lifter	92194E700	55	Washer	17x165
25	Nut, Flange	15x79	56	Nut, Hex	15x100
26	Bracket, Pivot	92033E700	58	Indicator, Plastic	92163
27	Bolt, Carriage	9x39	59	Washer	17x48
28	Arm Assembly, Idler	92032E700	60	Housing, Blade	91898E700
29	Plate, Adjuster	91741E700	1-60	Complete Mower Housing Assembly	408229

MODEL 40707x20A

REPAIR PARTS ELECTRICAL SYSTEM

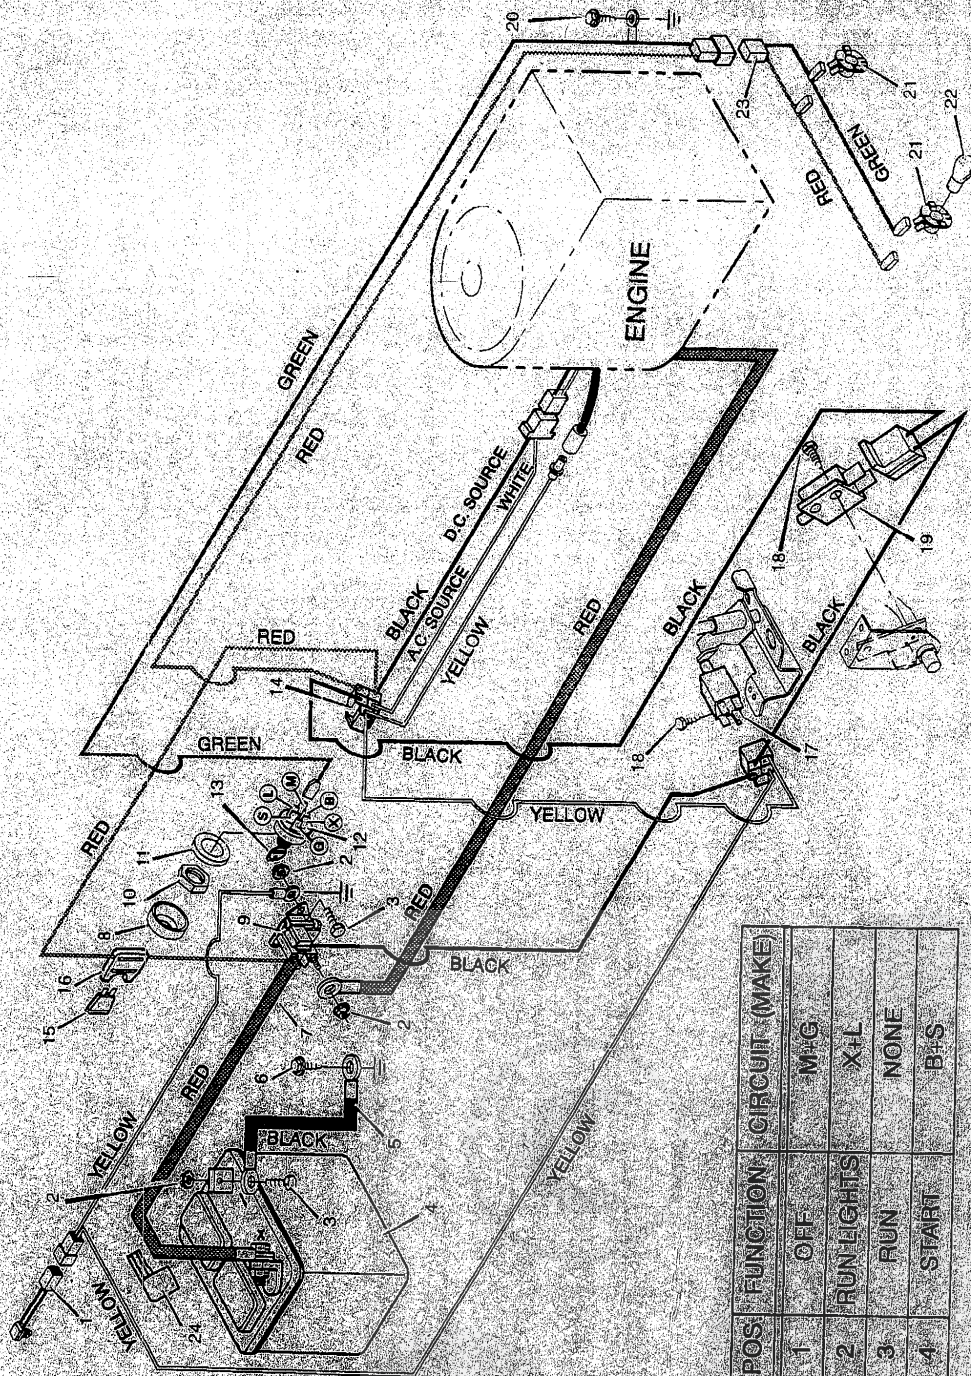

POS.	FUNCTION	CIRCUIT (MAKE)
1	OFF	M+G
2	RUN/LIGHTS	X+L
3	RUN	NONE
4	START	B+S


MODEL 40707x20A

REPAIR PARTS ELECTRICAL SYSTEM

Key No.	Description	Part No.
1	Switch, Seat Sensor	91031
2	Locknut	15x66
3	Bolt, Hex	1x38Z
4	Battery	91414
—	Acid, Battery (Electrolyte)	55702
5	Cable, Battery Ground	24x9
6	Screw	26x249
7	Cable, Red Battery	24x12
8	Cap, Ignition	91488
9	Solenoid	24285
10	Nut, Hex	91489
11	Washer, Shakeproof	19x40
12	Switch, Ignition	92377
13	Key, Ignition	20729
14	Harness, Chassis Wire	250x43
15	Fuse	54212
16	Holder, Fuse	407078
17	Switch, PTO	91299
18	Screw	26x233
19	Switch, Clutch	24273
20	Screw	25x2
21	Socket, Light	92372
22	Bulb, Light	90084
23	Harness, Light Wire	250x40
24	Cover, Terminal	24196

MODEL 40707x20A

REPAIR PARTS ENGINE MOUNT

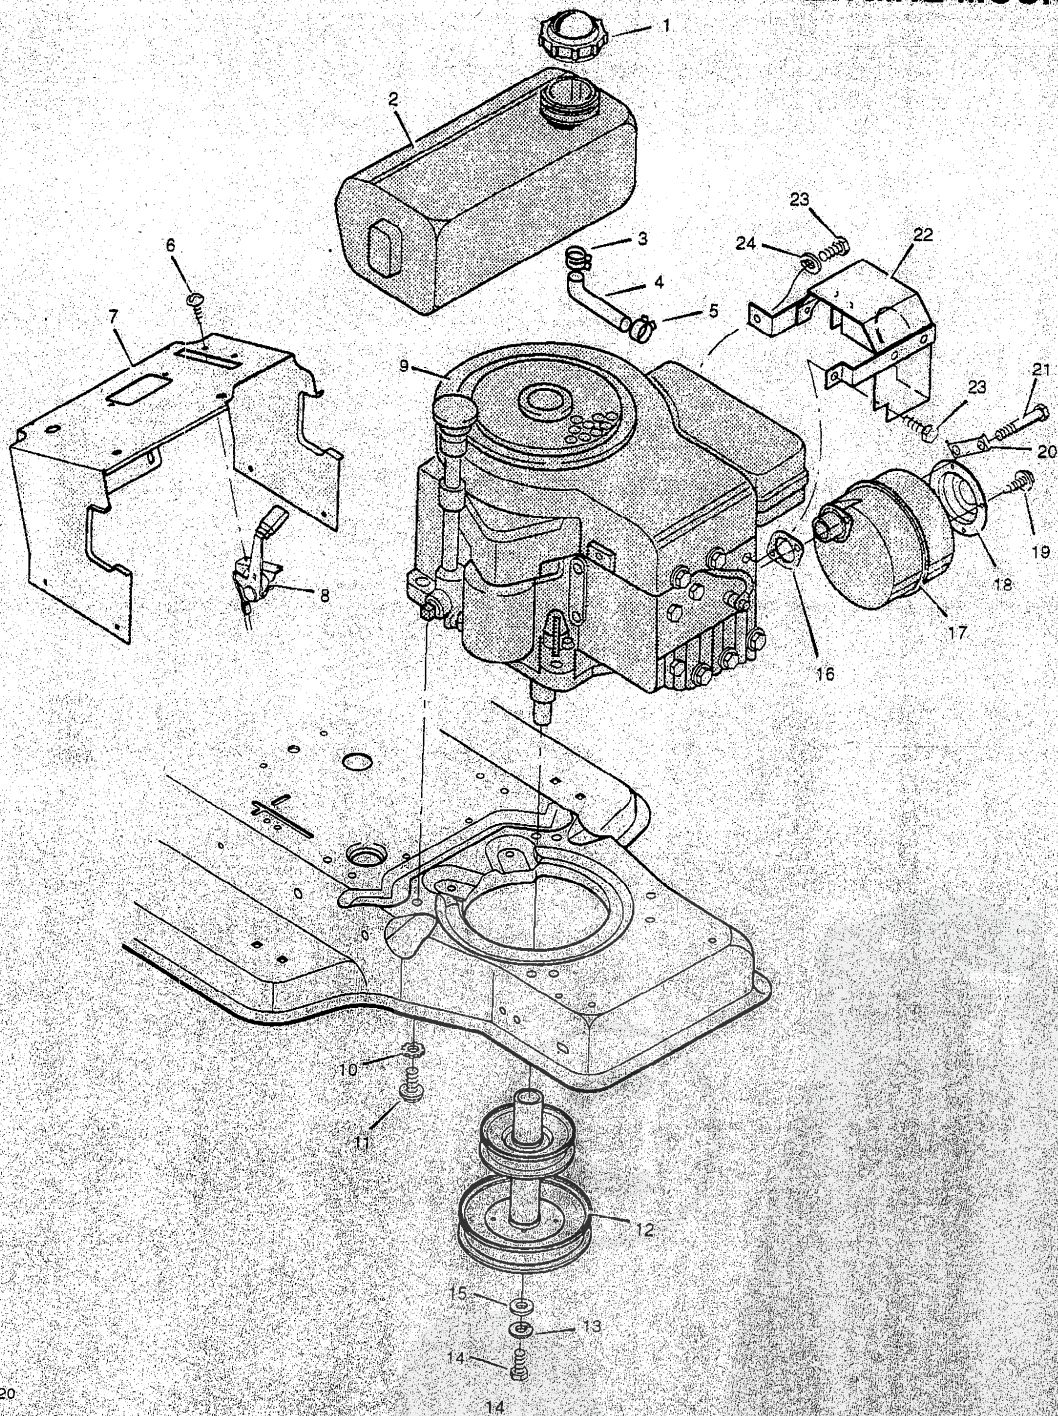

MODEL 40707x20A**REPAIR PARTS
ENGINE MOUNT**

Key No.	Description	Part No.
1	Fuel Cap	92317
2	Fuel Tank	92342
3	Hose Clamp	91174
4	Fuel Line	23717
5	Hose Clamp	23713
6	Screw	26x201
7	Support, Dash	92331E700
8	Throttle Control	92371
9	Engine*	
10	Washer	19x8
11	Bolt, Engine Mount	25x7
12	Stack Pulley Assembly	92318Z
13	Lockwasher	19x35
14	Bolt, Hex	1x140
15	Washer	17x170
16	Gasket	91309
17	Muffler	91271
18	Deflector, Muffler	23740
19	Screw	26x208
20	Lock, Screw	92378
21	Bolt	1x134
22	Shield, Heat	92381 SE
23	Bolt	1x38
24	Washer	18x32

* All parts are available from a Briggs & Stratton service center as indicated in the commerce pages of the telephone directory.

F-93720