


TRACTOR REPAIR PARTS

40" TRACTOR MODEL A4012-110

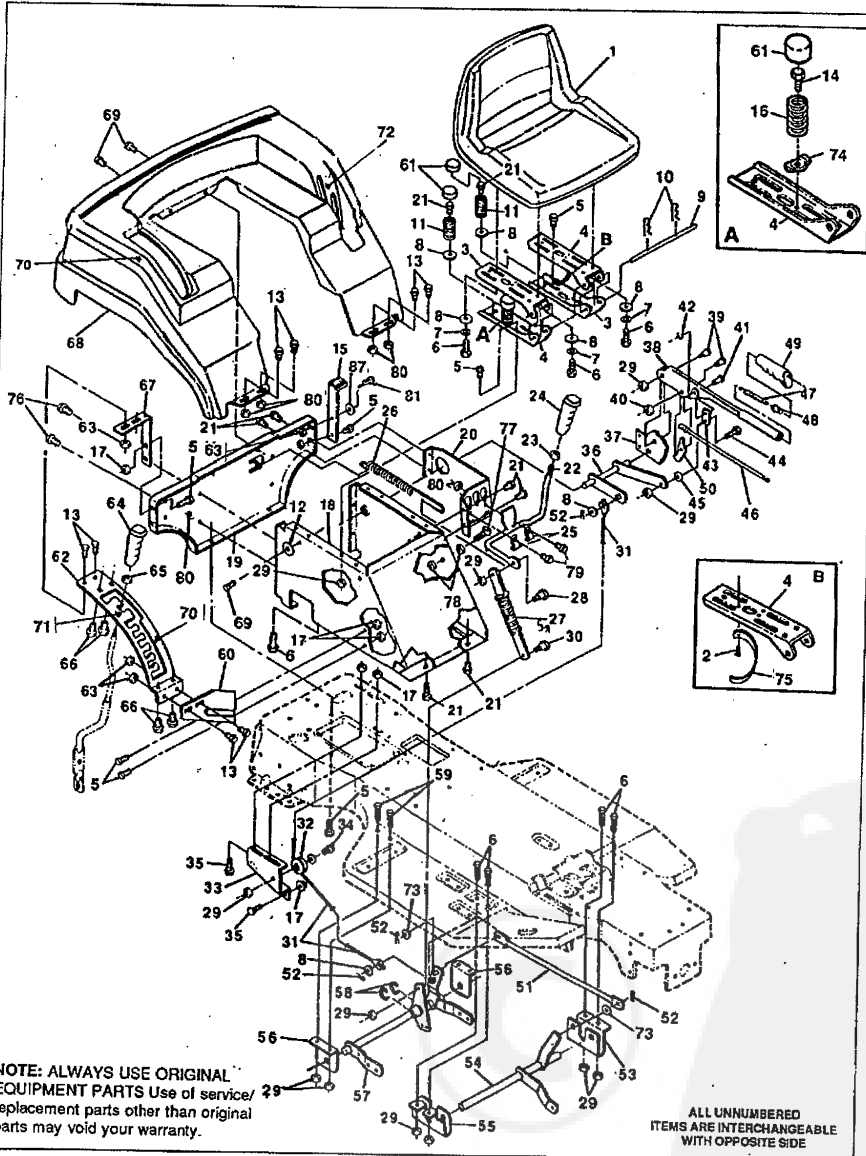

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE

192


## TRACTOR REPAIR PARTS

### 40" TRACTOR MODEL A4012-110

Key No.	Part No.	Description	Key No.	Part No.	Description
1	306667	Seat	45	45602	Washer
2	46763	Rivet, Pop	46	58330	Actuator Rod
3	305991	Channel, Seat L. H.	47	58326	Spring, Height Adjust
4	304480	Channel, Seat R. H.	48	58325	Knob, Height Adjust
5	56030	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	49	304730	Handle, Lift
6	122007	Screw, Hx Hd, 5/16-18 x 3/4 In.	50	301239	Pawl, Height Adjust
7	120638	Washer, Lock 5/16 In.	51	302380	Tie Rod
8	120393	Washer, Flat, 11/32 In.	52	121222	Cotter Pin
9	304481	Rod, Seat Support	53	308339	Bracket, L. H. Front Hanger
10	36368	Hair Pin, .073 Dia. x 1.13 In.	54	308345	Assembly, Front Lift Shaft
11	305520	Seat Spring	55	308340	Bracket, R. H. Front Hanger
12	1084	Washer, Flat, 9/32 In.	56	308343	Bracket, Hanger
13	180018	Screw, Hx Hd, 1/4-20 x 5/8 In.	57	308342	Assembly, Rear Lift Shaft
14	995346	Screw, Hx Hd, 1/4-20 x 1/2 In.	58	36625	E-Ring
15	305379	Fender Support, L. H.	59	120228	Screw, Hx Hd, 5/16-18 x 5/8 In.
16	58278	Spring, Seat	60	305381	Support, Shift Plate
17	55273	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.	61	56907	Cover, Seat Spring
18	304475	Seat Support	62	306294	Quadrant
19	304476	Support, Fender & Seat	63	51335	Nut, Hx, Wd Fl Lk, 1/4-20 Thd.
20	302208	Bracket, Support Engage	64	304728	Handle
21	35497	Screw, Hx Wshr Hd Tap, 5/16-18 x 1/2 In.	65	120377	Nut, Hx 3/8-16 Thd.
22	302411	Assembly, Engagement Rod	66	300302	Screw, Hx Hd, Tap #10 x 1/2 In.
23	1500	Nut, Hx Ctrk, 1/2-13 Thd.	67	305380	Fender Support, R. H.
24	304729	Handle, Lift	68	306516	Fender
25	302197	Clip	69	995338	Screw, Hx, Wshr Hd, Tap 1/4-20 x 5/8 In.
26	305306	Spring, Tension	70	307763	Decal, Gear Shift, 6 Speed
27	304448	Assembly, Spring Cartridge	71	307764	Decal, Gear Shift, Neutral
28	305989	Shoulder Bolt, 7/16 In.	72	307770	Decal, Mower Deck Clutch ON/OFF /Deck Cutting Height
29	1498	Nut, Hx Ctrk, 5/16-18 Thd.	73	274517	Washer, Flat, 13/32 In.
30	20507	Shoulder Bolt, 5/16-18 Thd.	74	1341	Spring Clamp
31	303227	Cable, Deck Lift	75	305518	Spring, Switch Actuator
32	48306	Pulley	76	50634	Screw, Tap, 5/16-18 x 7/8 In.
33	303230	Assembly, Pulley Bracket	77	122188	Screw, Hx, 3/8-16 x 2-1/4 In.
34	305522	Shoulder Bolt, 5/16-18 Thd.	78	271190	Nut, Hx Keps. 3/8-16 Thd.
35	126211	Bolt, Carriage, 5/16-18 x 5/8 In.	79	180016	Screw, 1/4-20 x 1/2 In.
36	302205	Assembly, Upper Shaft	80	1502	Nut, Lock, 1/4-20 Thd.
37	302383	Quadrant	81	180020	Screw, 1/4-20 x 3/4 In.
38	9143	Lift Lever	82	311535	Operator's Manual (Not Illustrated)
39	300171	Shoulder Bolt, 5/16-18 Thd.	83	311366	Parts Manual, (Not Illustrated)
40	44108	Nut, Hx Wd Fl Lk 5/16-18 Thd.			
41	300310	Clevis Pin			
42	300311	E-Ring			
43	302357	Link			
44	36149	Shoulder Bolt, 5/16-18 Thd.			

# TRACTOR REPAIR PARTS

40" TRACTOR MODEL A4012-110

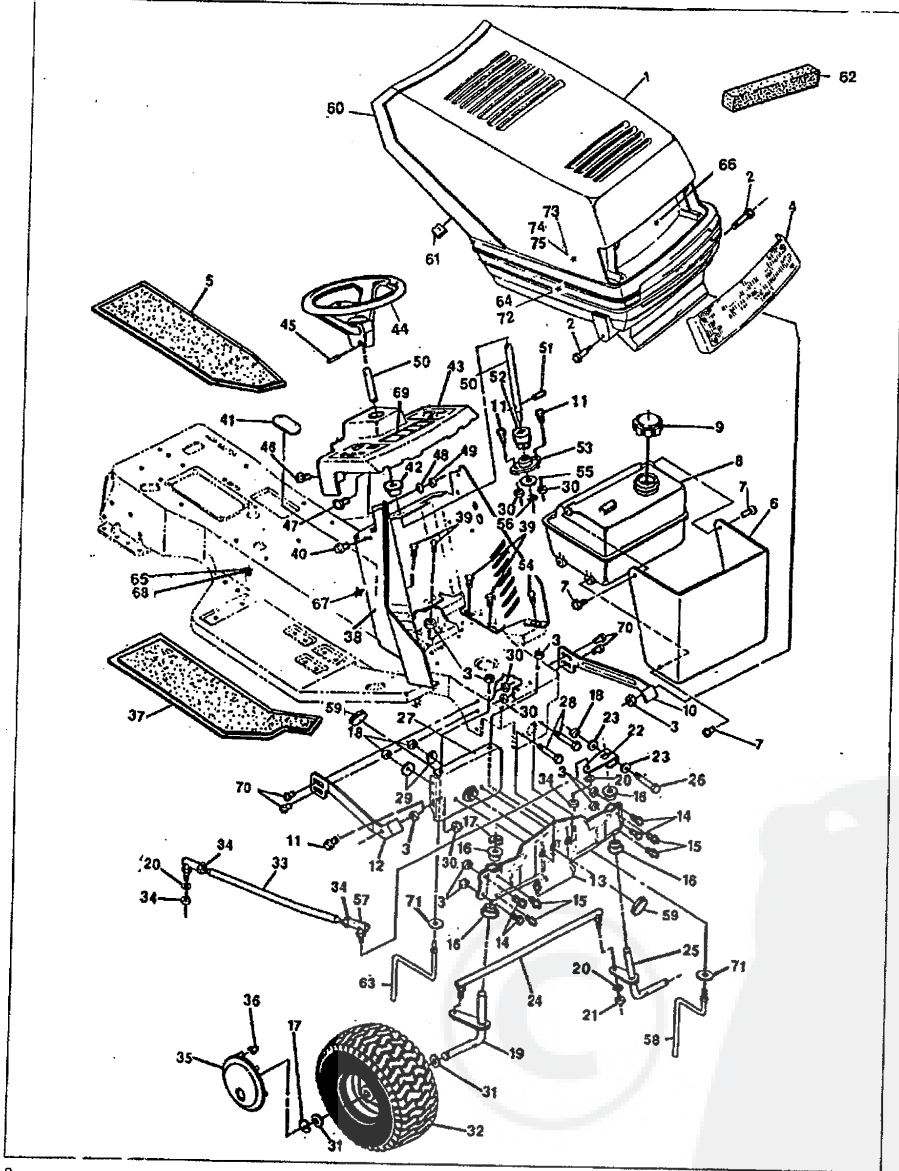


## TRACTOR REPAIR PARTS

### 40" TRACTOR MODEL A4012-110

Key No.	Part No.	Description	Key No.	Part No.	Description
1	306507	Hood	41	305280	Cover
2	300171	Shoulder Bolt, 5/16-18 Thd.	42	303228	Bushing, Upper Steering
3	1498	Nut, Hx, Ctrk, 5/16-18 Thd.	43	304261	Dash, Upper
4	304079	Lens, Headlight	44	303132	Steering Wheel
5	305721	Assembly, Foot Pad L. H.	45	456378	Pin, , Spring, 1/4 x 2 In.
6	310340	Heat Shield	46	305850	Screw, Tap, 1/4-20 x 1/2 In.
7	300303	Screw, Hx Hd, Plastite 1/4 Dia. x 3/4 In.	47	120854	Screw, Hx Hd, 1/4-20 x 5/8 In.
8	309853	Tank, Gas 1.5 Gal W/Sensor	48	120392	Washer, Flat, 9/32 In.
9	12501	Cap, Fuel	49	1502	Nut, Hx, Ctrk, 1/4-20 Thd.
10	304379	Bracket, Hood L. H.	50	302307	Shaft, Steering
11	56030	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	51	302524	Pin, Dowel
12	304378	Bracket, Hood R. H.	52	302314	Pinion, Steering
13	309765	Front Axle W/Bearings	53	302498	Bearing, Flange
14	120228	Screw, Hx Hd, 5/16-18 x 5/8 In.	54	50634	Screw, 5/16-18 Thd.
15	706	Grease Fitting	55	2968	Washer, Flat, 1/2 In.
16	302303	Bearing, Spindle	56	20864	E-Ring
17	36625	E-Ring	57	57158	Ball, Joint, 3/8 Thd.
18	1499	Nut, Hx, Ctrk, 3/8-16 Thd.	58	300634	Belt Guide
19	305340	Spindle, R. H.	59	307112	Plug, Front Axle
20	120382	Washer, Split, Lock 3/8 In.	60	12675	Trim, Hood
21	120369	Nut, Hx, 3/8-24 Thd.	61	306822	Clip, Hood Trim
22	302306	Steering Arm, Upper	62	308115	Hood, Foam Baffle
23	996416	Washer, Flat, 25/64 In.	63	300440	Belt Guide
24	300328	Assembly, Tie Rod	64	304284	Decal, Hood Stripe, R. H.
25	305339	Spindle, L.H.	65	307283	Decal, Console, 15/40 L. H.
26	180134	Screw, Hx Hd, 3/8-16 x 2-1/2 In.	66	308200	Decal, Reflector
27	306103	Support Bracket, Front Axle	67	307772	Decal, Operating Instructions.
28	122207	Screw, Hx Hd, 3/8-16 x 3 In.	68	307282	Decal, Console, 15/40 R. H.
29	2483	Washer, Spring	69	307281	Decal, Dash
30	55273	Nut, Hx, Wd Fl Lk 5/16-18 Thd.	70	53652	Screw, Hex Wd Fl, 5/16-18 x 3/4 In.
31	642	Washer, Flat, 3/4 In.	71	138538	Washer, Internal Tooth
32	305360	Wheel & Tire Assembly, Front Includes the following parts:	72	304285	Decal, Hood Stripe L.H.
	301140	Tire, Rear	73	304821	Agway, Hood Nameplate
	312739	Wheel	74	304822	Right Hood Stripe
	24167	Valve Stem	75	304823	Left Hood Stripe
	39979	Bearing			
33	302907	Drag Link			
34	124925	Nut, Hx, Jam, 3/8-24 Thd.			
35	304444	Hubcap, Front			
36	306669	Clip, Hubcap			
37	305722	Assembly, Foot Pad R. H.			
38	304702	Dash, Lower			
39	42563	Screw, Tap, 5/16-18 x 3/8 In.			
40	995346	Screw, Self-Tap, 1/4-20 x 1/2 In.			

# TRACTOR REPAIR PARTS

40" TRACTOR MODEL A4012-110

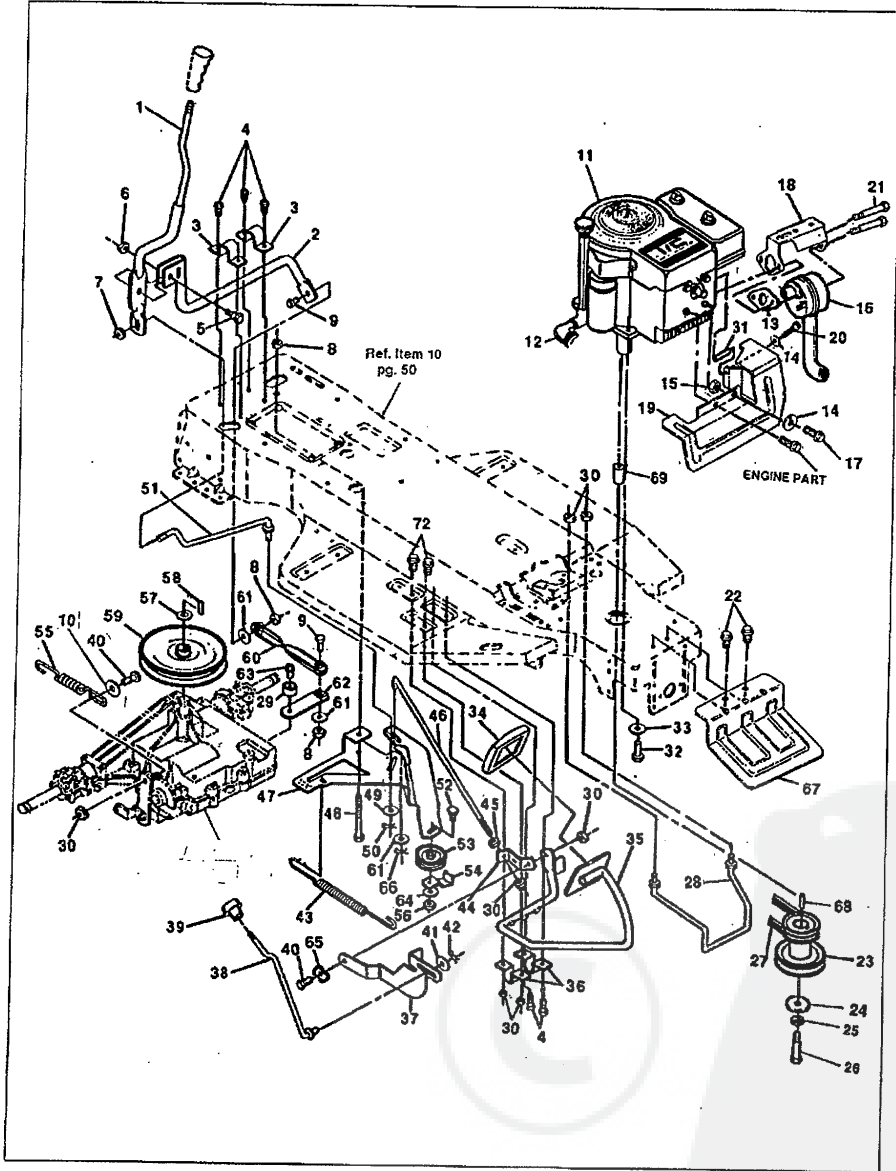

96


## TRACTOR REPAIR PARTS

### 40" TRACTOR MODEL A4012-110

Key No.	Part No.	Description	Key No.	Part No.	Description
1	304406	Tube Assembly, Shift Pivot	38	304217	Rod, Parking Brake
2	304024	Tube Assembly, Shift	39	304367	Knob, Parking Brake
3	302538	Clip, Shift Lever	40	25086	Shoulder Bolt, 5/16-18 Thd.
4	35497	Screw, Hx Hd, Wshr Tap, 5/16-18 x 1/2 In.	41	120385	Washer, 9/16 In.
5	304086	Shoulder Bolt	42	12f223	Cotter Pin
6	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.	43	304209	Spring, Clutch
7	71046	Nut, Hx, Nylon, Lock 3/8-16 Thd.	44	304125	Bracket, Brake Rod
8	1499	Nut, Hx, Ctrlk, 3/8-16 Thd.	45	271184	Nut, Hx, Keps, 5/16-18 Thd.
9	122145	Screw, 3/8-16 x 1-1/4 In.	46	304212	Rod, Clutch
10	310442	Main Frame	47	304049	Arm, Idler
11		Engine 12 Horsepower B&S	48	51189	Shoulder Bolt, 3/8-16 Thd.
12	111316	Elbow, 90°, 3/8 In.	49	274517	Washer, Flat, 13/32 In.
13	46708	Gasket, Muffler	50	36368	Hairpin
14	120380	Washer, Split Lock	51	304083	Rod, Shift-On-The-Go
15	120376	Nut, Hex 5/16-18 Thd.	52	57325	Carriage Bolt, 3/8-16 x 2 In.
16	310284	Muffler, Round 5" Diameter	53	40223	Idler Sheave, Backside
17	300314	Screw, Wa Tap, 1/4-20 x 7/8 In.	54	304105	Belt Retainer
18	305409	Heat Shield, Muffler	55	304130	Spring, Brake
19	310340	Heat Shield, Engine	56	45171	Nut, Flange, 3/8-16 Thd.
20	189293	Screw, Hex Hd, 1/4-20 x 3-1/2 In.	57	22053	Retaining Ring
21	305407	Bolt, Shoulder, 5/16-18 x 4-1/3 In.	58	3021	Key, Woodruff, #606
22	35497	Screw, Wa Tap, 5/16-18 x 1/2 In.	59	303109	Pulley
23	306590	Pulley, Engine	60	309546	Shift Link
24	56431	Washer, Pilot	61	120394	Washer, Flat, 13/32 In.
25	120383	Washer, Split, Lock 7/8 In.	62	302582	Shift Lever, Transaxle
26	428644	Screw, Hx Hd, 7/16-20 X 5 In.	63	56255	Screw, Hx Hd, 1/4-28 X 3/4 In.
27	303241	V-Belt, 90 In. Long	64	308188	Washer
28	310162	Belt Guide, Transaxle	65	30289	Washer, Wave
29	57157	Washer, Special	66	121222	Pin, Cotter
30	1498	Nut, Hex, Ctrlk, 5/16-18 Thd.	67	311530	Deflector, Exhaust
31	310292	Spacer, Heat Shields	68	57791	Key, Square 1/4
32	50947	Screw, Hex Hd Tap, 3/8-16 x 1-1/4 In.	69	304246	Spacer, Engine Pulley
33	138489	Washer, 3/8 In.			
34	302335	Pad, Clutch/Brake, Molded			
35	306083	Assembly, Clutch/Brake Arm			
36	302337	Bracket, Clutch/Brake Arm			
37	304208	Lever, Park Brake			

# TRACTOR REPAIR PARTS

40" TRACTOR MODEL A4012-110

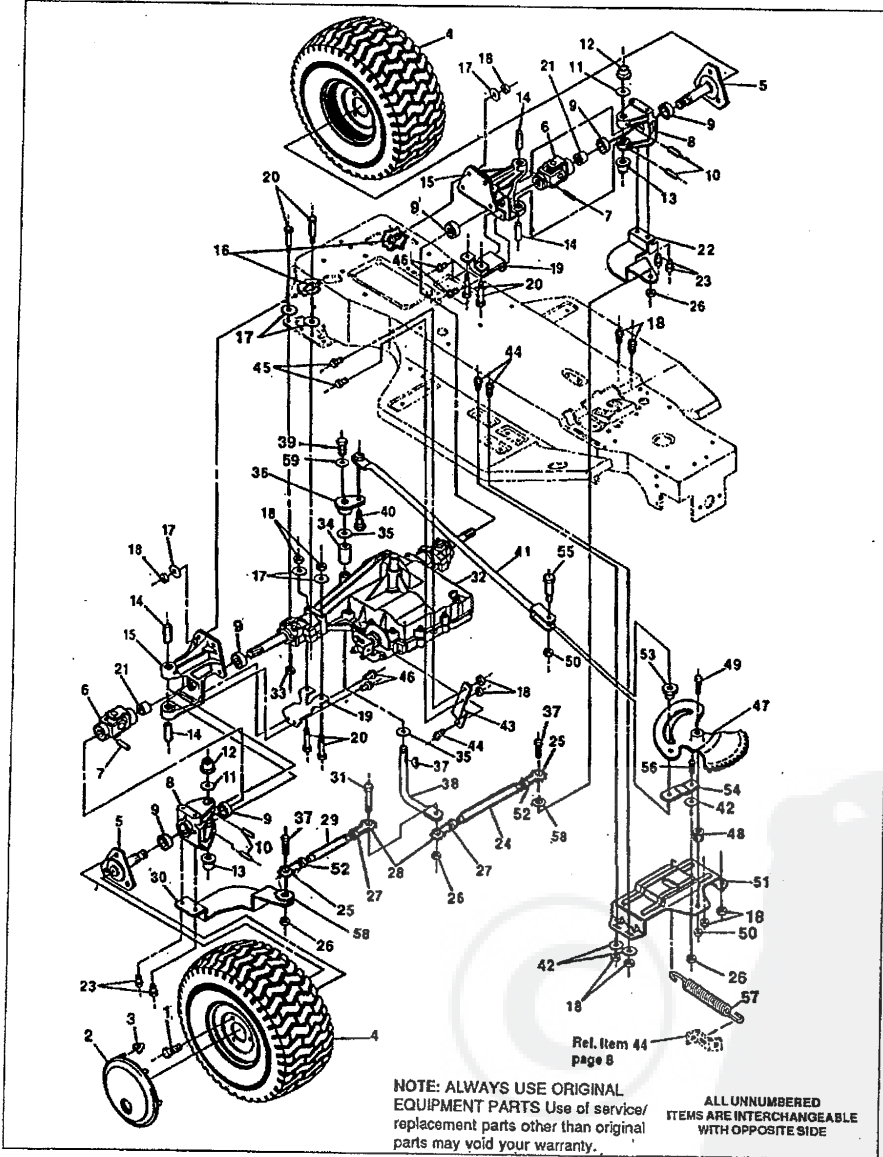

## TRACTOR REPAIR PARTS


### 40" TRACTOR MODEL A4012-110

Key No.	Part No.	Description	Key No.	Part No.	Description
1	123418	Screw, Hx Hd, 1/2-20 x 1/2 In.	31	181846	Screw, Hx Hd, 3/8-24 x 1-3/4 In.
2	304441	Hubcap, 8 In.	32		Transaxle, 6-Speed
3	306669	Clip, Hubcap	33	44108	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.
4	304259	Wheel & Tire Assembly, Rear	34	304115	Spacer
	58276	Tire	35	25177	Washer, Flat, 49/64 In.
	12467	Wheel	36	308719	Steering Pivot
	24167	Valve Stem	37	181639	Screw, 3/8-24 x 1-1/4 In.
5	12280	Hub Assembly	38	308720	Shaft, Steering Pivot
6	12290	U-Joint Assembly	39	421051	Screw, 5/16-24 x 1 In.
7	36311	Pin, Grooved, 1/4 x 1-1/2 In.	40	12319	Bolt, Shoulder, 3/8-24 Thd.
8	12465	Bracket Assembly, Steering Pivot, Outer	41	302593	Rod Assembly, Rear Wheel Steer
9	12325	Bearing	42	446363	Washer, Flat, 3/8 In.
10	456722	Pin, Spring, 1/4 x 1-1/2 In.	43	304127	Bracket, Transaxle Stabilizer
11	21682	Washer, Flat	44	35498	Screw, Hx Hd, Self-Tap, 5/16-18 x 3/4 In.
12	12288	Bushing, Shouldered	45	120228	Screw, Hx Hd, 5/16-18 x 5/8 In.
13	12321	Bushing, Shouldered	46	451814	Screw, Hx Hd, Self-Tap, 5/16-18 x 5/8 In.
14	12289	Pin, Steering Hinge	47	302877	Assembly, Sector Gear
15	12485	Bracket Assembly, Steering Pivot, Inner	48	302878	Bushing, Sector Gear
16	122017	Screw, Hx Hd, 5/16-18 x 1 In.	49	304296	Screw, Hx Hd, 1/2-20 x 2-3/8 In.
17	120393	Washer, Flat, 11/32 In.	50	274654	Nut, Hx, Ctrik, 1/2-20 Thd.
18	1498	Nut, Hx, Ctrik 5/16-18 Thd.	51	308341	Plate, 4-Wheel Steer Pivot
19	306001	Bracket, Transaxle Mounting	52	308399	Nut, Jam, 3/8-24 Thd.
20	180089	Screw, Hx Hd, 5/16-18 x 2-1/4 In.	53	304116	Cam Yoke Roller
21	304123	Spacer	54	302594	Arm, Roller Swing
22	306218	Arm, Rear Wheel Steer, L. H.	55	304122	Shoulder Bolt, Cam Roller
23	39728	Screw, Self-Tap, 3/8-16 x 3/4 In.	56	302588	Shoulder Bolt, Cam Follower Arm Pivot
24	308446	Tie Rod, L. H.	57	35410	Spring, Clutch/Brake Pedal Return
25	308384	Tie Rod End, L. H.	58	120382	Washer, Split Lock
26	412349	Nut, Hex, Ctrik, 3/8-24 Thd.	59	45602	Washer, Flat
27	124925	Nut, Hex, Jam, 3/8-24 Thd.			
28	304260	Rod End			
29	308447	Tie Rod End, R. H.			
30	306217	Arm, Rear Wheel Steer, R. H.			



# TRACTOR REPAIR PARTS

40" TRACTOR MODEL A4012-110

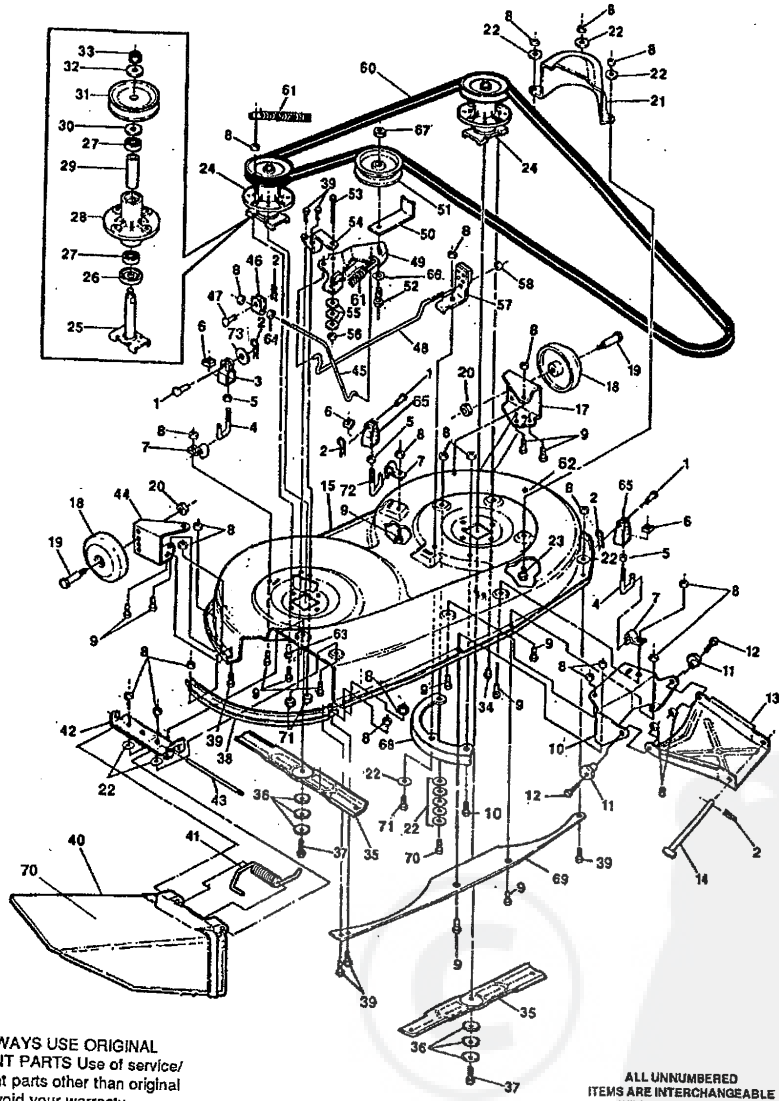

**NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS** Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


## TRACTOR REPAIR PARTS

### 40" TRACTOR MODEL A4012-110

Key No.	Part No.	Description	Key No.	Part No.	Description
1	300317	Pin, Clevis	42	302364	Bracket, Chute Mount
2	56180	Hairpin, Cotter	43	304424	Rod, Chute
3	305283	Clevis	44	304173	Wheel Bracket, R. H.
4	309615	Lift Rod	45	303072	Clutch Rod
5	120238	Nut, Hx Jam 1/2-13 Thd.	46	305284	Clevis, Clutch
6	109527	Nut, Sq. 1/2-13 Thd.	47	49332	Pin, Clevis
7	302197	Clip	48	302714	Rod, Brake
8	1498	Nut, Hx, Lock 5/16-18 Thd.	49	304414	Idler Assembly
9	180075	Screw, Hx Hd, 5/16-18 x 1 In.			Includes the following parts:
10	309316	Bracket, Front		305298	Idler Arm
11	58247	Nut, Adjusting		306973	Brake Pad
12	122017	Screw, Hx Hd, 5/16-18 x 1 In.		41601	Rivet
13	310800	Channel, Draw Bar	50	1346	Belt Retainer
14	302963	Rod, Drawbar	51	310326	Idler Pulley
15	310625	Mower Deck	52	57325	Carriage Bolt, 3/8-16 x 2 In.
16	122007	Screw, Hx, 5/16-18 x 3/4 In.	53	304420	Shoulder Bolt, 3/8-16 x 3/4 In.
17	304426	Wheel Bracket, L. H.	54	302363	Idler Brace
18	302611	Wheel	55	446363	Washer, Flat 3/8 In.
19	23763	Shoulder Bolt, 3/8-16 Thd.	56	45171	Nut, Hx, Wd Fl, 3/8-16 Thd.
20	1499	Nut, Hex, Ctrik, 3/8-16 Thd.	57	304118	Brake Spring Assembly
21	302833	Belt Cover, Left Pulley	58	1502	Nut, Hx, Ctrik, 1/4-20 Thd.
22	120393	Flatwasher, 1 1/32 In.	59	122027	Screw, Hx, 5/16-18 x 1-1/4 In.
23	120228	Screw, Hx Hd, 5/16-18 x 5/8 In.	60	48044	Belt, 82 In. Long
24	56424	Quill Assembly (Incl. Nos. 25-33)	61	35410	Spring
25	56425	Saddle & Shaft Assembly	62	68249	Decal, No Step
26	50616	Dust Shield	63	300345	Screw, Tap, 5/16-18 x 1-3/8 In.
27	49562	Bearing	64	120376	Nut, Hx, 5/16-18 Thd.
28	55547	Quill Housing	65	304443	Clevis
29	50818	Spacer Tube	66	120382	Washer, Split, Lock 3/8 In.
30	51449	Spacer	67	120377	Nut, Hx, 3/8-16 Thd.
31	56390	Pulley	68	304625	Baffle, Deck
32	56365	Washer	69	304871	Baffle, Deck Front
33	1262	Nut, Wd Fl, Lk 7/16-20 Thd.	70	68547	Decal, Danger
34	50634	Screw, Wshr Hd, 5/16-18 x 7/8"	71	44108	Nut, 5/16-18 Thd.
35	303065	Blade	72	312302	Lift Rod
36	2483	Washer, Spring	73	274517	Washer
37	39573	Screw, Hx Hd, 3/8-24 x 1 In.			
38	304102	Toe Guard			
39	122007	Screw, Hx Hd, 5/16-18 x 3/4 In.			
40	304422	Chute Deflector			
41	305124	Spring			

# TRACTOR REPAIR PARTS

40" TRACTOR MODEL A4012-110

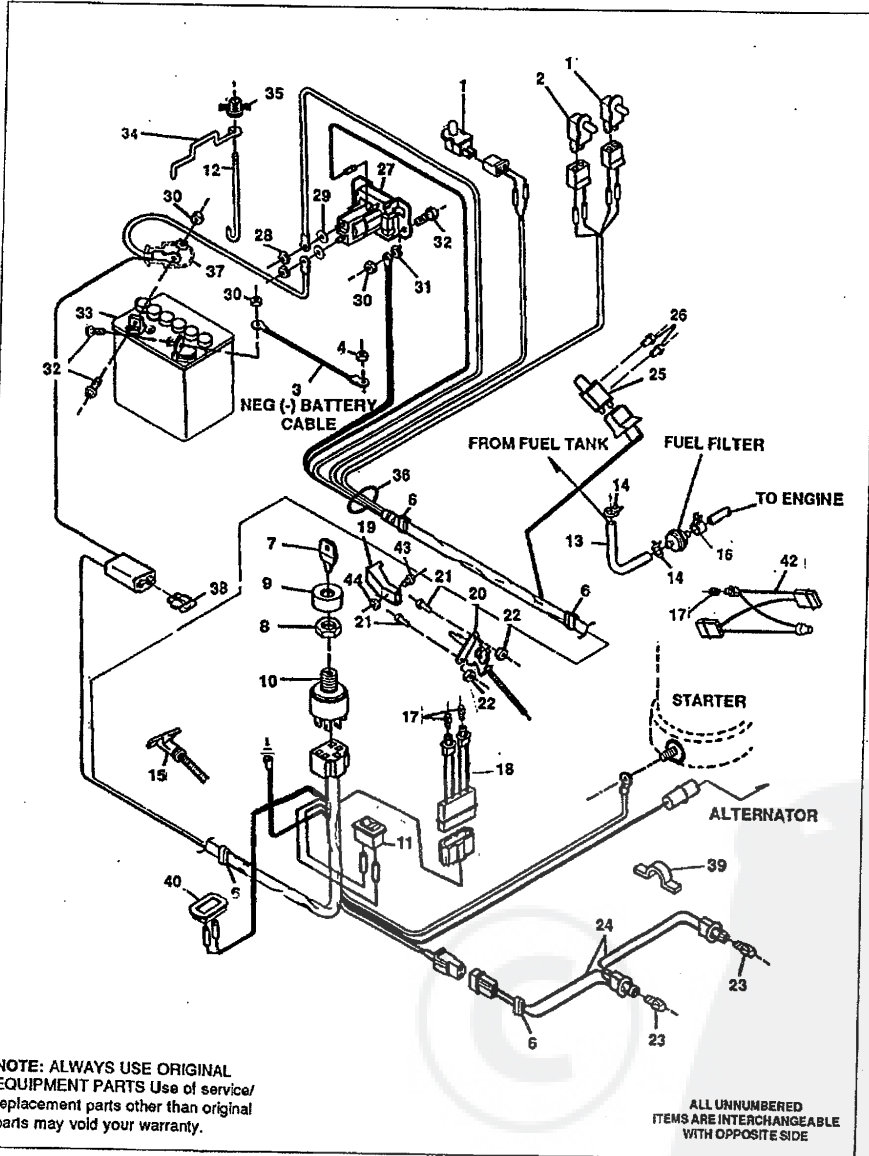

A12

## TRACTOR REPAIR PARTS

### 40" TRACTOR MODEL A4012-110

Key No.	Part No.	Description	Key No.	Part No.	Description
1	308187	Seat Switch	22	308459	Nut, Hx, Nylon Lock, #10-24 Thd.
2	12553	Deck Safety Switch	23	52572	Bulb Headlamp
3	55511	Cable, Battery, Negative	24	303064	Assembly, Light Wire
4	271184	Nut, Hx, Keps, 5/16-18 Thd.	25	57211	Switch
5	307056	Sensor, Low Voltage (if so equipped)	26	57220	Screw, Pn Hd, Tap #12 x 1/2 In.
6	57444	Tie Cable	27	53716	Solenoid
7	300626	Key, Ignition Switch	28	120368	Nut, Hx 5/16-24 Thd.
8	300193	Nut, Switch	29	138485	Washer, Lock 5/16 In.
9	300194	Boot, Switch	30	271172	Nut, Hx, Keps, 1/4-20 Thd.
10	305720	Switch, Ignition	31	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
11	300334	Switch, Light	32	187745	Screw, 1/4-20 X 3/4 In.
12	57551	Rod, Battery Hold-Down	33	302257	Battery
13	47452	Gas Line, 20" (cut to length)	34	302912	Bracket, Battery Hold-Down
14	47345	Clamp, Gas Line	35	310067	Wingnut
			36	305776	Wiring Harness
			37	308201	Boot, Rubber (Battery Cable)
			38	302301	Fuse, 15A-32V
			39	41482	Press Clip
15	307114	Choke Control	40	304739	Miniature Hour Meter (if so equipped)
16	47345	Hose Clamp	41	300302	Screw, Hex Tap, #10 x 1/2 In.
17	57769	Bulb Indicator	42	305778	Lamp Holder, Low Fuel (if so equipped)
18	305702	Lamp Holder, 4-Pin (if so equipped)	43	159585	Screw, Ph Pn, #8-32 x 3/8 In.
19	304439	Knob, Throttle Control	44	120622	Nut, Hex, #8-32 Thd.
20	307363	Throttle Control			
21	159943	Screw, #10-24 X 5/8 In.			