REPAIR PARTS MANUAL 36" - 10 H.P. LAWN TRACTOR MODEL B3554-480

TWO YEAR LIMITED WARRANTY

For two (2) years from date of purchase by the first consumer for residential use (thirty (30) days commercial use), NOMA Outdoor Products Incorporated warrants that it will replace free of charge, including labor, any original part of any NOMA Outdoor Products Incorporated product found to be defective by any authorized Service Dealer or the factory, except the battery which is warranted for ninety (90) days from date of purchase.

This warranty does not cover engine, transmission, transaxle or differential (these items are covered by their manufacturer's own warranty). This warranty does not cover parts that have failed due to normal wear or parts that have failed subject to misuse or abuse. Transportation of the unit or part to and from an authorized Service Dealer or factory is the responsibility of the owner.

A step by step explanation as to what procedure should be followed for this warranty is:

- If a part becomes defective, contact the store where the unit was purchased for the name and address of the authorized Service Dealer nearest to you.
- 2. If you cannot locate an authorized Service Dealer, write Service Department of NOMA Outdoor Products Incorporated for the name and address of the authorized Service Dealer in your area or call the Service Department at 1-901-422-1690.
- 3. Return the defective product, along with proof of purchase to such authorized Service Dealer for replacement of any defective part where covered by this warranty.

There is no other express warranty. Implied warranties, including those of merchantability and fitness for a particular purpose are limited to two (2) years from date of purchase. Liability for incidental or consequential damages are excluded.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

NOMA Outdoor Products Incorporated

Caller 8000

Jackson, TN 38308-8000

UNIT PARTS AND SERVICE

This manual contains instructions for safety, assembly and maintenance. Read this manual carefully and completely so that you will know proper assembly, use and care of your unit. Also fill in and mail the registration card packed with the unit. For service other than covered in this manual, contact an authorized service dealer. A nationwide parts and service organization has been established to provide locally available parts and service. A list of authorized parts distributors has been included in this manual. When ordering repair parts, always give the following information: 1. The Part Name; 2. The Part Number; 3. The Quantity desired; 4. The Full (eight digit) Model Number of the unit. The model number will be found on a plate attached to the unit.

Look for this symbol. It means - ATTENTION! BECOME ALERT! A HAZARD TO OPERATOR, BYSTANDER, PROPERTY OR EQUIPMENT MAY EXIST.

NOMA Outdoor Products Incorporated Caller 8000 Jackson, TN 38308-8000

Part No. 317913

 
4990

Price \$2.00

Printed in U.S.A

A

OPERATIONAL PRECAUTIONS





- Know the controls and how to stop quickly. READ THIS OPERATOR'S MANUAL and instructions furnished with attachments.
- Wear safety glasses or eye shields when assembling or operating riding mower.
- Do not allow children to operate the machine. Do not allow adults to operate it without proper instruction.
- Do not carry passengers. Do not mow when children and others are around. Disengage power to blades(s) or attachment(s) and stop the engine while others are in the vicinity of the mower.
- 5 Battery fluid (electrolyte) is an ACID and is extremely dangerous. Do not smoke while servicing the battery. Do not service the battery near a open flame or spark.
- 6. Handle gasoline with care, it is highly flammable.
 - A. Use approved gasoline container.
 - B. Never remove the fuel cap of, or add gasoline to, a running or hot engine, or an engine that has not been allowed to cool for several minutes after running. Never fill the tank indoors and always clean up spilled fuel immediately.
 - C. Do not smoke while filling fuel tank.
 - D. Do not run the engine indoors. Open doors if engine must be run in garage. Exhaust fumes contain CARBON MONOXIDE, an ODORLESS and DEADLY GAS.
- Check fuel supply before each use allowing space for expansion as the heat of the engine and/ or sun can cause gasoline to expand.
- Do not operate mower when barefooted. Always wear substantial footwear, preferably steel-toed shoes. Do not wear loose fitting clothing that could get caught in moving parts.
- Clear the work area of objects (wire, rocks, etc.) which might be picked up and thrown. Check all controls for proper function.
- 10. Disengage all attachment clutches, shift to neutral, and set parking brake before attempting to start the engine (motor). When starting engine equipped with a pull starter, stand firm and make sure your feet are well away from the blade(s).
- Disengage power to blade(s) or other attachments(s) and stop the engine (motor) before leaving the operator's position. Always dismount from the left side.
- Disengage power to blade(s) or other attachment(s) and stop the engine (motor) before making any repairs or adjustments.
- Disengage power to blade(s) or other attachment(s) when transporting or not in use.
- 14. Take all possible precautions when leaving the vehicle unattended, such as disengaging power to blade(s) or attachment(s), lower the attachment(s), setting the parking brake, stopping the engine (motor), and removing the key.
- Do not stop or start suddenly when going uphill or downhill. Mow up and down the face of steep slopes; never across the face.
- Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing direction on slopes.

- 17. Stay alert for holes, rocks, and roots in the terrain and other hidden hazards. Keep away from drop-off. Never operate your riding mower on wet or slippery grass or at a speed which could cause a skid. Exercise care when mowing around a fixed object to prevent the blade(s) from striking it. Never deliberately run over any foreign object.
- Always disengage blade control lever before attempting to remove the mower from a hole or other obstruction.
- Use care when pulling loads or using heavy equipment.
 - A. Use only approved drawbar hitch points.
 - B. Limit loads to those that you can safely control.
 - C. Do not turn sharply. Use care when backing.
 - Use counterweight(s), wheel weights or tire chains when suggested in attachment(s) instructions.
- 20. Watch for traffic when crossing or near roadways.
- When using attachment(s), never direct discharge of material toward bystanders nor allow anyone near the vehicle while in operation.
- 22. Keep the vehicle and attachments in good operating condition, and keep safety devices in place and in working condition.
- Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
- 24. Never store the equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
- To reduce fire hazard, keep the engine free of grass, leaves or excessive grease.
- 26. The vehicle and attachments should be stopped and inspected for damage after striking a foreign object, and the damage should be repaired before restarting and operating the equipment.
- Do not change the engine governor settings or overspeed engine.
- 28. When using the vehicle with mower, proceed as follows:
 - A. Mow only in daylight or in good artificial light.
 - B. Never make a cutting height adjustment while the engine (motor) is running if the operator must dismount to do so.
 - C. Shut the engine (motor) off when removing the grass catcher or unclogging chute.
 - Check the blade mounting bolts for proper tightness at frequent intervals.
- 29. Under normal usage, the grass catcher bag material is subject to deterioration and wear. Check the bag frequently for deterioration and wear and replace worn bags. Check that replacement bags comply with the original manufacturer's recommendations or specifications.
- Disengage power to mower before backing up. Do not mow in reverse unless absolutely necessary and then only after careful observation of the entire area behind the mower.

OWNER'S INFORMATION
Record the following information about your unit so that you will be able to provide it in case of loss or theft. MODEL NUMBER: (Enter complete 8 digit number from model plate on unit)
PURCHASE DATE: / / CODE NO.: SERIAL NO.:
DEALER'S NAME AND ADDRESS: TELEPHONE:


CONTENTS OF SHIPPING CARTON

- Lawn Tractor with 36 inch Mower Deck
- Operator's Manual
- Repair Parts Manual
- Engine Manual
- Steering Wheel (see Note)
- 1 Seat (see Note)
- 1 Bag of Assembly Parts Containing (see Note):
- 1 Oil Drain Trough4 5/16 x 3/4 inch Hex Head Screws
- 4 5/16 inch Split Lockwashers
- 4 11/32 inch Flatwashers
- 1 Steering Shaft Cover
- 1 Roll Pin

NOTE: Refer to page 20 (Customer Assembly Parts) for more detailed description.

TOOLS REQUIRED FOR ASSEMBLY

- 2 7/16 inch Wrenches (or adjustable wrench)
- 1/2 inch Wrench (or adjustable wrench)
- Small Phillips Screwdriver with a 1/4 inch shank

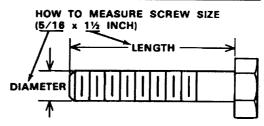



DANGER



This lawn tractor can be dangerous if carelessly used.

Read your Operator's Manual thoroughly before operating your lawn tractor.

Always wear safety glasses or eye shields while assembling or operating your lawn tractor.

DO NOT carry passengers at any time.

Keep your hands, feet, hair and loose clothing away from the discharge area, the underside of the mower deck or any moving parts while the engine is running.

DO NOT allow children or young teenagers to operate or be near your lawn tractor while it is

ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS:

1. The PART NUMBER; 2. The PART NAME; 3. QUANTITY DESIRED; 4. The MODEL NUMBER (As shown on Model Plate).

SEND PART ORDERS AS PER INSTRUCTIONS ON THE FRONT PAGE.


DO NOT USE KEY NUMBERS WHEN ORDERING REPAIR PARTS, ALWAYS USE PART NUMBERS.

All replacement parts will be supplied in current production colors or in a neutral color.

A handling fee is applicable to small parts orders.


YOUR LINIT IS PIGHT HAND (PM) OR LEST HANDLY AS YOUR STAND REVINING. YOUR UNIT IS RIGHT HAND (RH) OR LEFT HAND(LH) AS YOUR STAND BEHIND IT.

Part No. 317913

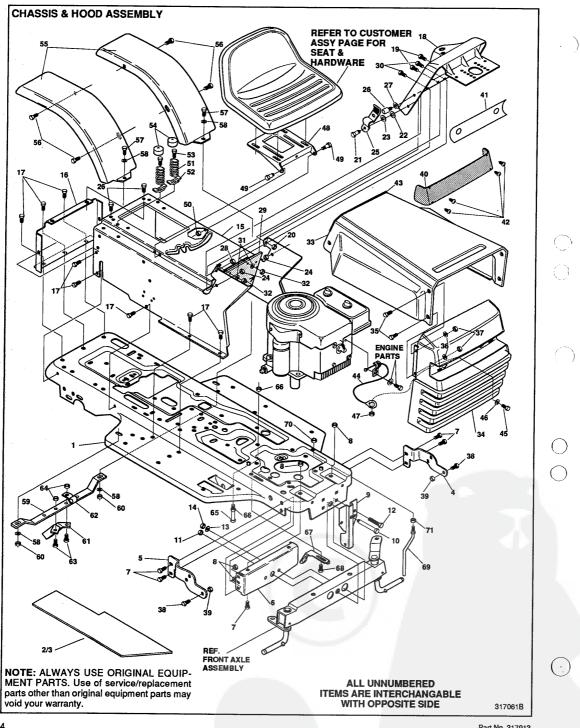


	key#	part#	description	qty.
	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21	315066 302917 302916 316199 316200 313437 \$556030 \$55273 308870 50720 \$274654 \$122201 2483 \$1499 309751 8521 \$995346 316113 \$995346 316113 \$995338 \$50352 8482 \$120394	FRAME, MAIN FOOTPAD, LH FOOTPAD, LH BRACKET, GRILLE L.H. BRACKET, GRILLE R.H. BRACKET, GRILLE R.H. BRKT, SUPT FRT AXLE- SCREW, 5/16-18 X/5WDFLLK NUT, 5/16-18 HXWDFLLK HANGER BRKT BOLT, 625X2.875 SPSH 1/2-20 NUT, 1/2-20 REGHXCTRLK SCREW, 3/8-16X2.75 HPL WASHER, 39IDX1.25DX.07 BELLVIL NUT, 3/8-16 REGHXCTRLK CONSOLE, SF DYNA STYLE TOPSH CONSOLE, FEAR COVER SCREW, 1/4-20X.50 WAHHTAP DASH SCREW, 1/4-20X.63 HHWATAP NUT 1/4-20 WDFLLK TOP LOCK BOLT, 3/5X, 156 HHSH 5/16-18	1 1 1 1 1 1 6 6 1 1 1 1 4 4 4 4 4 1 1 1 2 2 2 2 2 2 2 2
	22 23 24 25 26 27 28 29 30 31 32 33 33	\$120393 \$1498 57159 53446 \$138538 \$45174 312306 \$300314 \$1502 316489 314476	WASHER, FLAT 406X .81X.065 WASHER, FLAT 344X .69X.065 NUT, 5/16-18 REGHEXCTRLK LATCH, .94WDX.047 ASSY HOOD PIN, 5/16-18 HOOD LATCH WASHER, REGINTLK.320X.61X.03 NUT, 5/16-18 HEXWDFLLK WHIZ BAFFLE CONSOLE SOUND EXPORT SCREW, 1/4-20X .88WAHTAP WASHER, FLAT .344X .69X.065 NUT, 1/4-20 REGHEXCTRLK HOOD GRILLE	2 2 2 1 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1
\bigcirc	35 36 37 38 39 40 41 42 43 44 45 46	\$274672 \$120392 \$1502 36149 \$1498 302333 314948 \$57796 47453 310748 121887 120392 1502	SCREW, 1/4-20 X. 63 WAHHC WASHER, FLAT. 281X. 63X.065 NUT, 1/4-20 REGHEXCTRLK BOLT, .375X.500 HHSH 5/16-18 NUT, 5/16-18 REGHEXCTRLK LENS HEADLAMP FOIL, LENS DYNA-PRO REFLECTOR SCREW, #6 X. 50 PLASTITE EDGING, WIDE BLK LANYARD, HOOD SCREW 1/4-20 X. 75 HHC WASHER FLAT. 281 X. 63 X. 065 NUT 1/4-20 REG HEXCTRLK	4 4 4 2 2 1 1 4 25" 1 1 1
0	47 48 49 50 51 52 53 54 55 56 57 58 60 61 62 63 64 66 67	1302 305857 20507 \$1498 56220 1341 \$995346 302099 3606 \$995346 \$122017 \$446363 43964 \$1498 \$44500 57569 122017 1498 \$4993 \$12953	PLATE, SEAT BOLT, 437X, 156 HHSH 5/16-18 NUT, 5/16-18 REGHEXCTRLK SPRING, 1-438Z-38X, 162 COM SEAT CLAMP, SPRING, 1-17'ID SCREW, 1/4-20X, 50 WAHHTAP SPRING COVER SF SEAT SPG FENDER SCREW, 1/4-20X, 50 WAHHTAP SCREW, 1/4-20X, 50 WAHHTAP SCREW, 5/16-18X1.00 HHC WASHER, FLAT 3/5X, 88X.082 SUPPORT, GUIDE NUT, 5/16-18 REGHEXCTRLK BRACKET, DECK GUIDE RETAINER, 3/1ID X.62 X, 03 WIRE SCREW 5/16-18 X 1.00 HHC NUT, 5/16-18 REGHEXCTRLK SCREW, 3/8-16X7.50 HHC NUT, 3/8-16 REGHEXCTRLK SCREW, 3/8-16X7.50 HHC NUT, 3/8-16 REGHEXCTRLK SRACKET, SWITCH MOUNT	1 2 2 2 2 2 2 4 4 1 1 2 1 1 2 2 1
	68 69 70 71 72 73	0995346 50653 041529 0271190 12563C 317913	SCREW, 1/4-20X .50 WAHHTAP GUIDE, BELT NUT, 3/8-16 HXCTRLKJAM NUT, 3/8-16 HEXKEPS OPERATOR'S MANUAL (NOT ILLUSTRATED) PARTS MANUAL (NOT ILLUSTRATED)	1 1 1 1 1

Part No. 317913

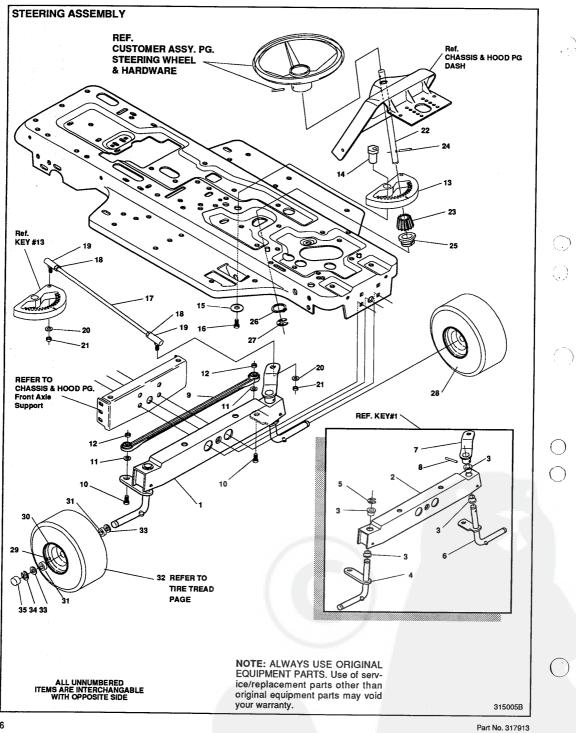


key# part#	description	qty.
1 *	FRONT AXLE ASSEMBLY SF	1
2 56400	AXLE, FRONT	1
3 50546	BEARING, FLANGE	4
4 310368	SPINDLE, RH	1
5 36625	RING, RETEX	1
6 310367	SPINDLE, LH	1
7 49447	ARM, STEERING LH	1
8 454565	PIN, SPRING	1
9 302691	TIE ROD	1
10	SCREW, 3/8-16X1.25 HHC	2
11 ♦ 120382	WASHER, .393X.68X.10 REGSPTLK	2
12 ♦ 1499	NUT, 3/8-16 REGHCTRLK	2
13 304245	SECTOR, GEAR	- ī
14 44011	BOLT, .750X1.40 SPSH	i
15 2483	WASHER, .39IDX1.25ODX.07	1
16 39573	SCREW, 3/8-24X1.00 NYL	
	DRAG LINK	1
		•
18 ♦ 124925	NUT, 3/8-24 REGHEXJAM	2
19 21275	BALL JOINT	2
20 ♦ 120382	WASHER, REGSPTLK	2
21 ♦ 120369	NUT, 3/8-24 REGHEX	2
22 314109	STEERING SHAFT	1
23 44009	PINION, STEERING SHAFT	1
24 454565	PIN, SPRING	1
25 54902	BEARING, 1.370X.50 FLANGE STÉERING	1
26 39492	RING, RETEX 1.27X.05	- 1
27 36625	RING, RETEX .57X.05	1
28 *	ASSEMBLY, TIRE & RIM	2
29 24167	VALVE STEM	1
30 39937	WHEEL W/BEARING	1
31 39979	BEARING, 1.38ODX.753ID FLANGE	2
32	REFER TO TIRE TREAD PAGE	
33 642	WASHER, FLAT .755X1.31X.075	4
34 36625	RING, RETEX .57X.05	2
35 40394	HUB CAP	2
* ORDER INDIVID		
◊ Indicates STAND	ARD HARDWARE ITEMS.	

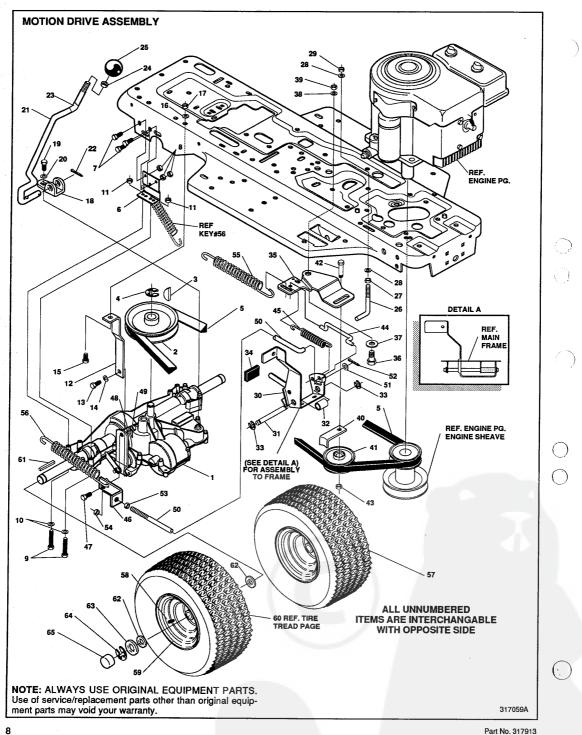


key#	part#	description	qty.
1	TRANSAXLE	CONTACT NEAREST DEALER	1
2	302745	PULLEY,V 4L 6.60 OD	i
3	3021	KEY, WDRF 606 .750X.187X.312	1
4	22053	RING, RETEX .58X.04TRU5100-62	1
5	54758	BELT, V 4L 82.00 SF DRIVE	1
6	7707	BRACKET, TRANSAXLE BLK 853	2
7	◊120228	SCREW, 5/16-18X .63 HHC GR2	6
8	◊1498	NUT, 5/16-18 REGHEXCTRLK	6
9	◊180089	SCREW, 5/16-18X2.25 HHC GR5	4
10	120393	WASHER, FLAT .344X .69X.065	4
11	◊1498	NUT, 5/16-18 REGHEXCTRLK	4
12	54713	BRKT,STABILIZER P900-3SP	
13	◊35498	SCREW, 5/16-18X .75 WAHHTAP	i
14	120638	WASHER, HVSPTLK .328X.60X.09	i
15	♦122017	SCREW, 5/16-18X1.00 HHC GR2	i
16	138485	WASHER, EXLK .320X.61X.03	4
17	♦1498		1
18		NUT, 5/16-18 REGHEXCTRLK	1
	12616	BRKT,SHIFT P920-3SP	1
19	◊56255	SCREW, 1/4-28X .75 NYLHHCGR8	1
20	57157	WASHER, .750X.250 SP-TRANSAXLE	1
21	302283	SHIFT LEVER Z-PL	1
22	137185	PIN, COTTER .125 DIAX1.00LG	1
23	302445	TUBE CLEAR PLASTIC	1
24	♦120238	NUT, 1/2-13 HEXJAM	1
25	304438	KNOB, SHIFT NOMA 1/2-13 BLK	1
26	49896	BELT GUIDE	1
27	◊271184	NUT, 5/16-18 HEXKEPS	1 .
28	120393	WASHER, FLAT .344X .69X.065	2
29	◊1498	NUT, 5/16-18 REGHEXCTRLK	1
30	302603	ASSY,BRAKE PEDAL	i
31	302600	ROD,PIVOT	i
32	302601	SPACER, 53IDX.62DX1.406 SLEEVE	i
33	20864	RING, RET E .39X.04TRU5133-50	2
34	48761	PAD,CLUTCH/BRAKE PEDAL	4
35	1306		1
36		IDLER ARM BRKT TRACTION	1
	41890	BOLT, .625X .218 HHSH 5/16-18	1
37	4107	WASHER, FLAT .635X1.31X.07	1
38	45602	WASHER, FLAT .333X .87X.119	1
39	◊1498	NUT, 5/16-18 REGHEXCTRLK	1
40	39659	RETAINER, STRAP BELT	1
41	35374	PULLEY, IDLER V4L 3.06X .62	1
42	45892	BOLT, 3/8-16X1.50 CARR GR2	1
43	1499	NUT, 3/8-16 REGHXCTRLK	1
44	43980	ROD, .268 DIA CLUTCH	1
45	50562	SPRING,3/80DX1.625X.055	1
46	54723	BRACKET, BRAKE ROD	
47	20507	BOLT, .437X .156 HHSH 5/16-18	1
48	120393	WASHER, FLAT .344X .69X.065	
49	♦1498	NUT, 5/16-18 REGHEXCTRLK	1
50	310189	BRAKE ROD RIDER	
51	120393	WASHER, FLAT .344X .69X.065	
52	121222		
		PIN, COTTER .090/.086X.75LG	
53	◊271184	NUT, 5/16-18 HEXKEPS	1
54	◊1498	NUT, 5/16-18 REGHEXCTRLK	1
55	49276	SPRING,3/4 ODX6.75X.091	1
56	35410	SPRING .071 X .62 X 4.37	1
57	*	TIRE & RIM, PU 18X9.5X8	2
58	24167	VALVE STEM	1
59	36182	WHEEL	1
60		REFER TO TIRE TREAD PAGE.	
61	39628	KEY, SQUARE .187SQX2.50LG	2
62	642	WASHER, FLAT .755X1.31X.075	4
63	42815	WASHER, FLAT .755X1.53X.07	T
64	36625	RING, RETEX .57X.05TRU5133-75	2
			2
65	40394	CAP, 1.500ID X 7/8LG HUB	2
* Orde	r Individual Parts.		
		RDWARE ITEMS.	
V indica			

Part No. 317913

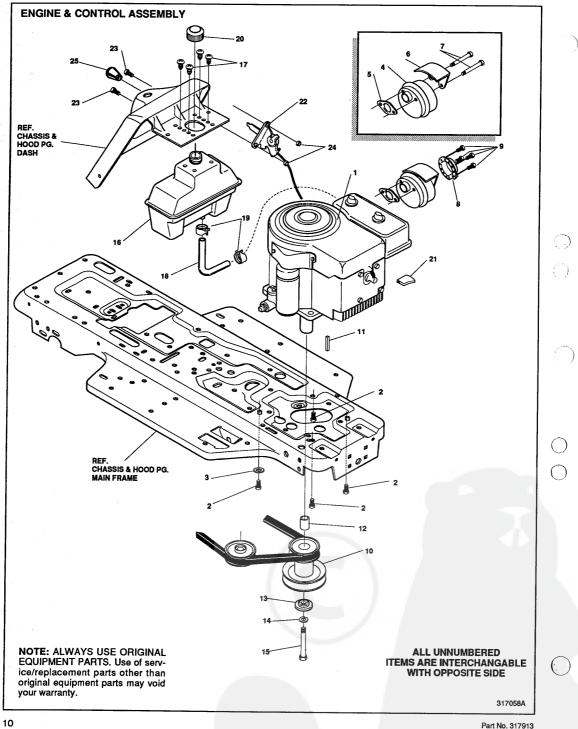

key#	part#	description	qty.	
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	ENGINE 50947 138489 305367 46708 54767 173063 306274 35287 315317 304246 56431 120383 433146 314989 49050 47452 48672 46704 302967 303275	10B&S VER ELEC (SEE ENGINE MANUAL) SCREW, 3/8-16X1.25 WAHHTAP WASHER, EXLK. 384X.69X.04 MUFFLER-LO TONE NELSON EXPORT GASKET, MUFFLER SHIELD, HEAT, FOR ROUND MUFFLER SCREW, 5/16-18X3.50 HHC DEFLECTOR, EXHAUST, LOUVERED B&S SCREW, #8-32X. 38 HHWATAP PULLEY, ENG 3.0D X 4.0LG X 5.0D KEY, SQUARE. 249SQX4.50LG SPACER, 1.01X1.484 ENGIN PULLEY WASHER, 980IDX1.380DX.437PILOT WASHER, 980IDX1.380DX.437PILOT WASHER, FLESPTILK.459X.78X.12 SCREW, 7/16-20X4.25 HHC BLK PH TANK, FUEL 1 GAL SCREW, 1/4-10X.75PHPNTAPGR2BK GAS LINE. 25ID BULK LENGTH CLAMP, FUEL LINE GAS CAP 1-1/2-7 THD BLK ENGINE SPEED REDUCER THROTTLE CONTROL	1 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
23 24	35291 271166	SCREW, 10-24X .50 SLHHMA NUT, #10-24 HEXKEPS	1	
25 * Order	50607 Individual Parts.	KNOB,ROUND THROTTLE	1	
		HARDWARE ITEMS		
				77

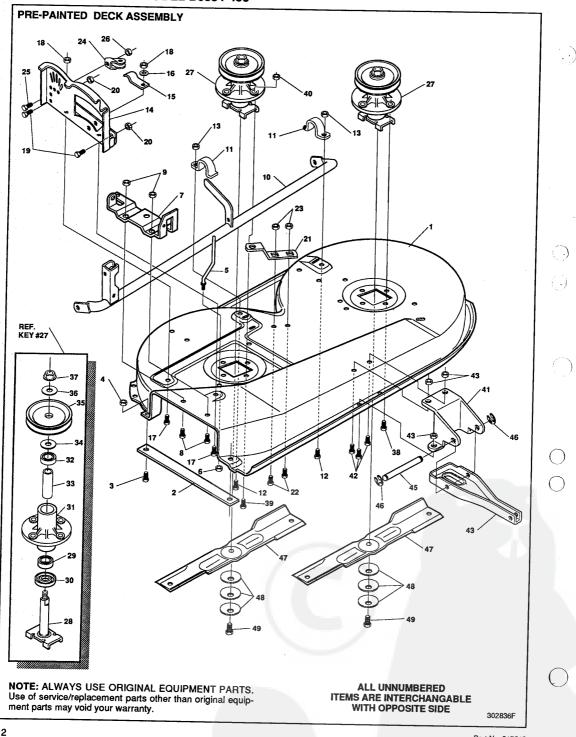


key#	part#	description	qty.	
1	310243	Deck	1	
2	57314	Bar, Skid	i	
3	◊ 126216	Bolt, 5/16-18 x .75 Carr. GR2	2	
4	◊ 271184	Nut, 5/16-18 Hex Keps	2	
5	57318	Guide, Belt 5/16-18 Thd.	1	
6	◊ 1498	Nut, 5/16-18 Reg Hex Ctr Lk	i	
7	57360	Bracket, Chute	ì	
8	◊ 120834	Screw, 5/16-18 x .50 H HC GR2	2	
9	◊ 1498	Nut, 5/16-18 Reg Hex Ctr Lk	2	
10	306881	Tube, 36" Assy Torgue	1	
11	51985	Support, Pivot Tube	•	
12	♦ 120228	Screw, 5/16-18 x .63 H HC GR2	<u> </u>	
13	◊ 1498	Nut, 5/16-18 Reg Hex Ctr Lk	1	
14	57337	Quadrant, Height Adj.	<u>'</u>	
15	57321	Spring, Clutch Handle Retain] 1	
16	120386		•	
17	122007	Washer, Flat .312 x .73 x .065	1	
18	↑ 1498	Screw, 5/16-18 x .75 H HC GR2	2	
19	♦ 122040	Nut, 5/16-18 Reg Hex Ctr Lk	2	
		Screw, 5/16-18 x 1.50 H HC GR2	2	
	♦ 1498 ♦ 200470	Nut, 5/16-18 Reg Hex Ctr Lk	2	
	♦ 300179 ♦ 480077	Bracket, Idler Support	1	
	♦ 180077	Screw, 5/16-18 x .75 H HC GR5	. 2	
23	44108	Nut, 5/16-18 Hwd FI Lk Whiz	2	
	♦ 49320 • 49320	Cable, Pulley Support	1	
	◊ 120228	Screw, 5/16-18 x .63 H HC GR2	1	
26	1498	Nut, 5/16-18 Reg Hex Ctr Lk	1	
	◊ 56424	Quill Assy, 36", 38", 39", & 40"	2	
	◊ 56425	Shaft/Saddle 36"	ī	
29	49562	Ball Bearing	. 1	
30	50616	Dust Shield	i	
31	55547	Quill Casting (1046)	i	
32	49562	Ball Bearing	i	
33	50818	Spacer, 3.797 LG x .669 ID x .88 OD	1	
34	51449	Spacer, .438 LG x .932 OD x .672 ID-PM	1	
35	56390	Pulley, 26/36" Quill V5L	1	
36	56365	Special Washer		1
37	1282		1	ļ
38	50634	Nut, 7/16-20 Wd Fl Lk	1	
		Screw, 5/16-18 x .88 Wa H H Tap	7	J
39	300345	Screw, 5/16-18 x 1.38 Wa Tap GR2	1	I
40	1498	Nut, 5/16-18 Reg Hex Ctr Lk	1	
41	57327	Bracket, Front	1	l
	120228	Screw, 5/16-18 x .63 H HC GR2	4	
43	1498	Nut, 5/16-18 Reg Hex Ctr Lk	4	
	57340	Bracket, Front Lift	1	ĺ
	57196	Rod, Pivot	1	
46	20864	Ring, Ret E39 x .04 Trus 5133-50	2	
47	58212	Blade,	2	
48	2483	Washer, .39ID x 1.25D x .07 Bellvil	6	
49	39573	Screw, 3/8-24 x 1.00 Nyl H HC GR5	2	
=			-	
♦ Indicat	es STANDARD HA	RDWARE ITEMS.		
				Ì

Part No. 317913


	key# part	description	qty.
	1 *	PAINTED DECK NOTE: SEE DWG	: #216020
	•	FOR PARTS ASSEMBLY	1 #3 10000
	2 4781		1
1	3 5618		i
1	4 3114		i
İ	5 3114		i
	6 3069		i
į.	7 4160		2
1	8 4751		1 .
	9 ♦ 9964		1
ł	10 ◊ 1499		1
1	11 7354	RETAINER BELT	1 ·
	12 3030	28 PULLEY, IDLER BFF 3.13 DIA	1
	13 3068	93 BRACKET,L-SHAPED	1
	14 ◊ 1221	68 SCREW, 3/8-16X1.75 HHC	1
	15 ◊ 4463	63 WASHER, FLAT .375X .88X.082	1
-	16 ◊ 1499	NUT, 3/8-16 REGHXCTRLK	1
	17 3541	0 SPRING .071 X .62 X 4.37	1
1	18 5263	6 SPRING	1
1	19 4656	3 BOLT, .375X .250 SHWA 1/4-20	1
1	20 ♦ 1203	92 WASHER, FLAT .281X .63X.065	2
	21 ♦ 1502	NUT, 1/4-20 REGHEXCTRLK	1
İ	22 3087	01 BELT, V 5L 80.00 DECK 36RD EX	? 1
	23 3075	49 COVER QUILL LH	1
	24 3075	48 COVER, QUILL RH	1
	25 ♦ 1202	28 SCREW, 5/16-18X1.00 HHC	4
1	26 ♦ 1203	93 WASHER, FLAT .344X .69X.065	4
	27 ◊ 1498		4
ł	28 5258	4 WHEEL, SD 6.00ODX1.38WD	2
	29 2376	3 BOLT, .500X1.390 HHSH 3/8-16	2
1	30 ◊ 1499		2
	31 3070		1
l	32 ◊ 1206	96 SCREW, 5/16-18X2.25 HHC	1
1	33 5324		1
	34 ◊ 1498		1
İ	35 2025	0 GRIP,HAND .75X4.87	1
	36 3053	83 LEVER, BLADE ENGAGE 32RD&3	6RD 1
1	37 1289		1
	38 4656		1
ŧ	39 ♦ 1502		1
	40 5369		1 .
	41 4647		1
1	42 3003		1
1	43 9405		1
1	44 ◊ 1203		1
	45 3952		1
İ	46 5618	•	1
	47 ◊ 1202		1
	48 ♦ 1498		1 -
1	49 5099		
1	50 1201	PIN, COTTER .125 DIAX1.25LG	2
1			
İ	* Order Individ	ual Parts	
į.		ANDARD HARDWARE ITEMS.	
1			
1			
1			
1			
1			

Part No. 317913

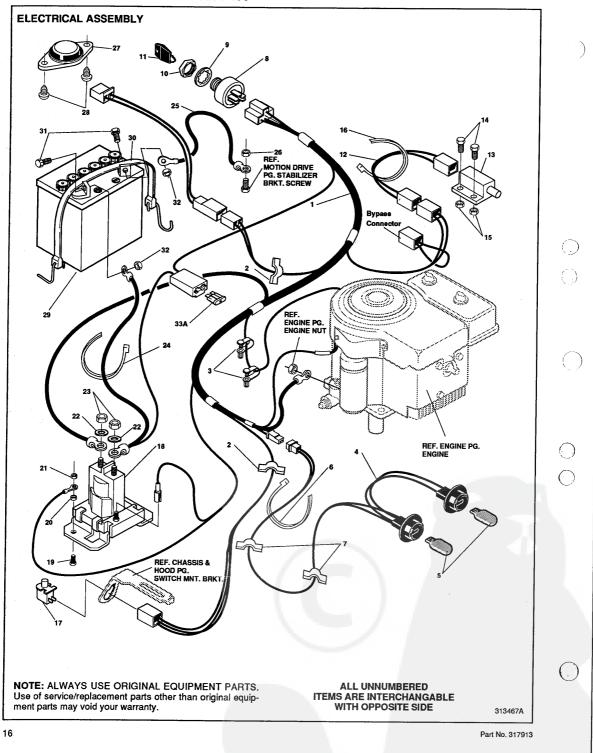


key#		part#	description	qty.
1		57642	WIRE HARNESS	1
2		41482	CLIP, PRESS WIRE	2
3		54888	RETAINER, WIRE	2
4		303064	ASSY., LIGHT WIRE	1
5		52572	BULB, HEADLAMP	2
6		57444	TIE, CABLE	1
7		41482	CLIP, PRESS WIRE	2
8		300687	SWITCH, IGNITION & LIGHTS	1
9	\$	138557	WASHER, REGINTLK	1
10		48140	NUT, 5/8-32 HXHD IGN SWIT	1
11		300626	KEY, IGNITION SWITCH	1
12		57588	HARNESS, DECK WIRE SHORT 4 WIRE	1
13		57476	SWITCH	1
14	\Diamond	159943	SCREW, 10-24 X .63 PHPNMA	2
15	\$	271166	NUT, #10-24 HEXKEPS	
16		57444	TIE, CABLE BLACK NYLON	1
17		300220	SWITCH, SNAPMNT NO .055/.116	1
18		53716	SOLENOID, NEW CLUM	1
19		187745	SCREW, 1/4-20 X .75 HXSEMMA	2 2 1
20	\Diamond	1502	NUT, 1/4-20 REGHEXCTRLK	2
21	\Diamond	271172	NUT, 1/4-20 HEXKEPS	
22	\Diamond	138485	WASHER, EXLK .320 X .61 X .03	2
23	\Diamond	120368	NUT, 5/16-24 REGHEX	2 2 1
24		57444	TIE, CABLE	
25		55511	WIRE, GROUND	1
26	\Diamond	271184	NUT, 5/16 - 18 HEXKEPS	1
27		57547	SWITCH, SEAT	1
28	\Diamond	160505	SCREW, 1/4-20 PNPNHM	2
29		57486	BATTERY, 12V 5 PLATE	1
30		309862	STRAP, RUBBER	1
31	\Diamond	120854	SCREW, 1/4-20 X .63 HHC	2 2 1
32	\Diamond	271172	NUT, 1/4-20 H KEPS	2
33A	*	*302031	FUSE, 15 AMP SHADE TYPE	1
33B	*	*49211	FUSE, 15 AMP CYLINDRICAL TYPE	1

[♦] Indicates STANDARD HARDWARE ITEMS.
***Clyrindrical or Spade type fuses are included with the wire harness.

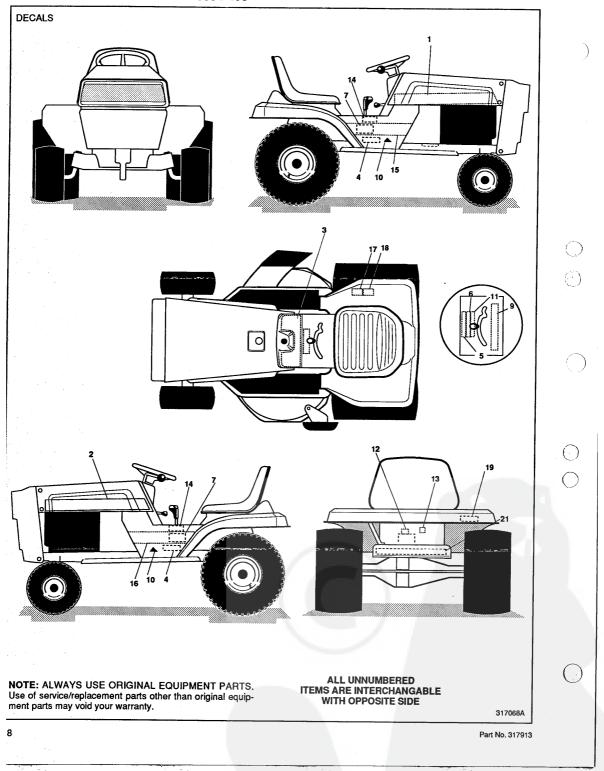

·	KEY#	PART#	DESCRIPTION	QTY.	
	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	314456 314457 307412 68902 69524 69525 300557 307047 305770 307383 308000 310436 310553 314460	DECAL, HOODSIDE RH H-21 DECAL, HOODSIDE LH H-21 DECAL, DASH PLAIN SF DYN EUROPE DECAL, WARNING, FRENCH/GERMAN DECAL, INSTRUCT CONSOLE TOP GER DECAL, INSTRUCT CONSOLE TOP FR NAME PLATE, 10/36 WHITE REFERENCE ONLY DECAL, 3-SPEED CONSOLE TOP DECAL, CAUTION TRIANGLE EUROPE DECAL, CAUTION TRIANGLE EUROPE DECAL, TUV GERMAN EXPORT DECAL, TUV GERMAN EXPORT DECAL, DANGER ENGLISH DECAL, DANGER ENGLISH DECAL, CONSOLE RH STRETCH FRM	QIY. 1 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2	
	16 17 18 19 20 21	314461 68900 68901 301005	DECAL, CONSOLE LH STRETCH FRM DECAL, BLADE ENGAGE EUROPE DECAL, BLADE HEIGHT ADJ. EUROPE NAME PLATE, SM. DYNAMARK WHITE REFERENCE ONLY DECAL, CAUTION HAND-FOOT FR/GR	1 1 1 1 1	

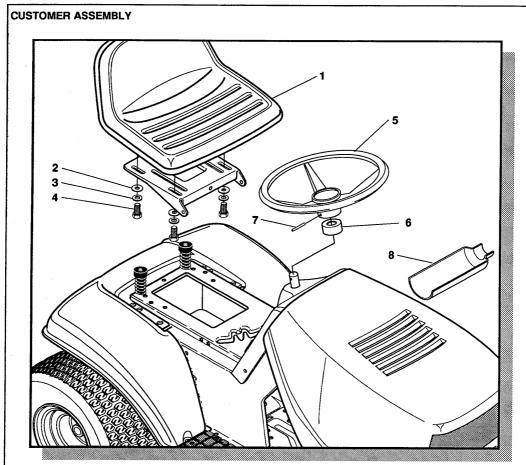


CUSTOMER ASSEMBLY VIEW


315134 PARTS BAG ASSY QTY1


key#	# part#	decription	qty
. 1	57452	SEAT MV350	1
2	120393	WASHER,FLAT .344X.69X.065	4
3	120638	WASHER, HVSPLTLK .328X.60X.109	4
4	122007'	SCREW, 5/16-18X.75 HHC	4
5	301251	STEERING WHEEL	1
6	314775	STEERING, SLEEVE	1
7	456378	ROLL PIN .250DIAX2.0LG	1
8	54873	OIL TROUGH	1


316235

 TREAD PATTERNS



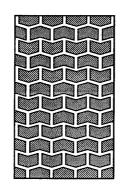

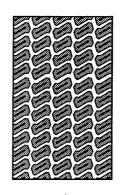

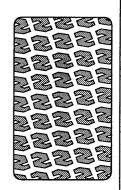

TIRE SIZE	"A"	"B"	"C"	"D"
11 X 4.00 - 5	42295			
13 X 5.00 - 6	41060			
15 X 6.00 - 6	301140	316702	39830	313952
16 X 6.50 - 8		41081		314539
18 X 6.50 - 8				
18 X 9.50 - 8		316701		313950
20 X 8.00 - 8	314584			
20 X 10.00 - 8	58276			313565
20 X 10.00 - 10		55893		
23 X 9.50 - 12	314370			
23 X 9.50 - 12		53655		

316711 A

Part No. 317913