


MODEL 20221x83A

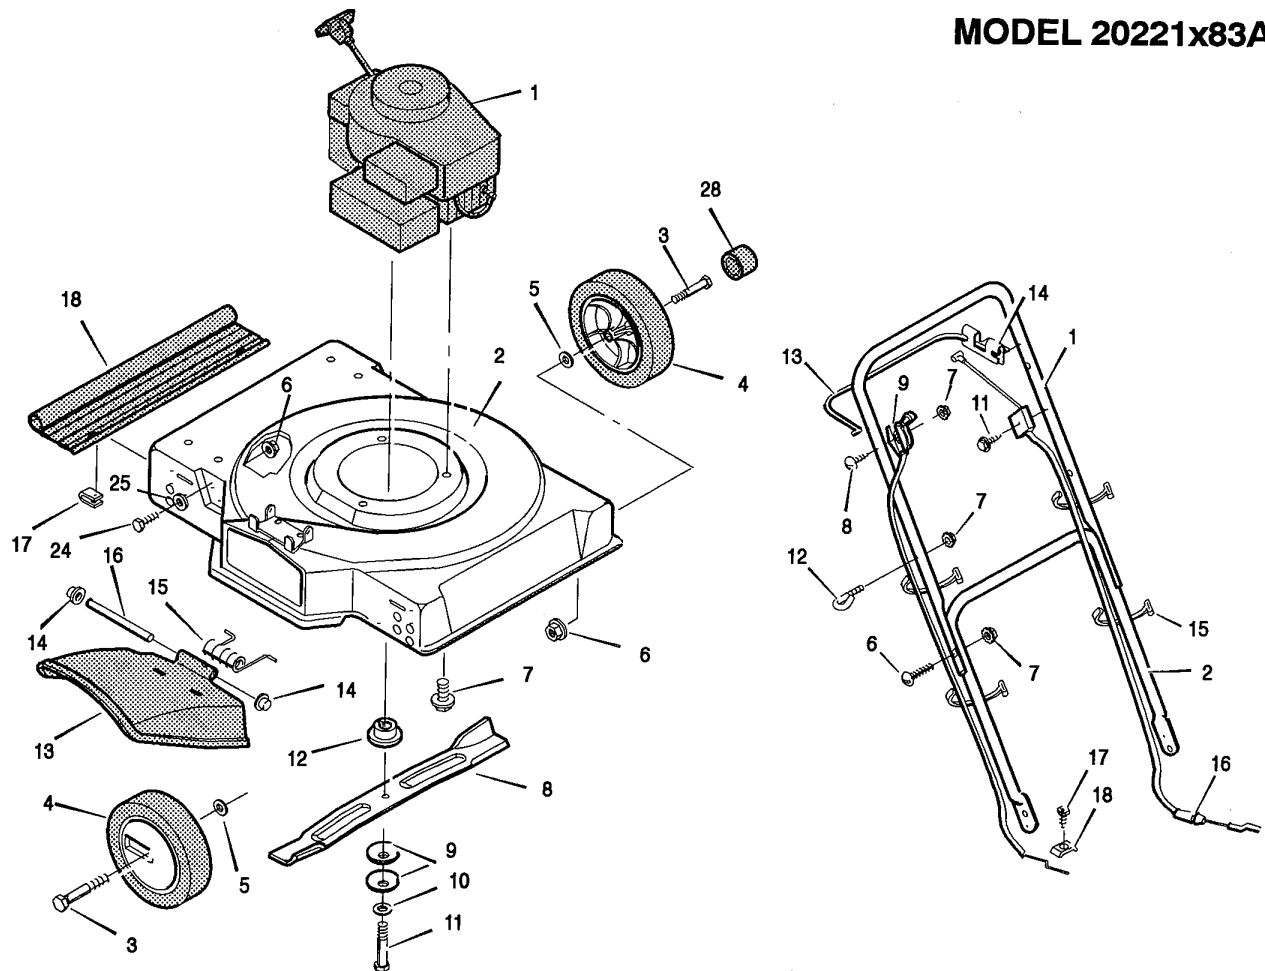

* Parts are available from a Briggs & Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.

** All replacement housings will be brite red.

MOWER HOUSING

Key No.	Description	Part No.
1	Engine *	-----
2	Housing, For Non-Folding Handle **	70120A
3	Bolt, Axle	9x10
4	Wheel and Tire	20270
5	Washer	10851 Z
6	Locknut, Flange	15x68
7	Bolt, Engine	25x6
8	Blade	42785E701
9	Washer, Belleville †	17x137
10	Washer	17x124
11	Bolt, Hex	1x142
12	Adapter, Blade	71056
13	Deflector, Chute	42819
14	Push-On Cap	28x42
15	Spring	166x5
16	Pin, Pivot	215x11 Z
17	Retainer	42743
18	Deflector, Rear	42746
24	Bolt, Hex	1x85
25	Lockwasher	18x31
28	Hub Cap - Optional (Ball Bearing Wheels)	20107
--	Hub Cap - Optional (Plastic Wheels)	43815
--	Parts Bag	70251
--	Instruction Book	F-95550

HANDLE

Key No.	Description	Part No.
1	Handle, Upper - Straight	43838E701
--	Handle, Upper (Grey)	43838E724
2	Handle, Lower	71151E701
--	Handle, Lower (Grey)	71151E724
6	Screw	3x136
7	Locknut	15x116
8	Screw	3x105
9	Throttle Control	71077
11	Screw	26x220
12	Guide, Rope	43956
13	Engine Stop Lv. - Straight	43793
14	Bracket, Stop Lever	43628 BC
15	Fastener, Cable	71372
16	Engine Stop Cable	43824
19	Screw	26x268
20	Clamp	42294