
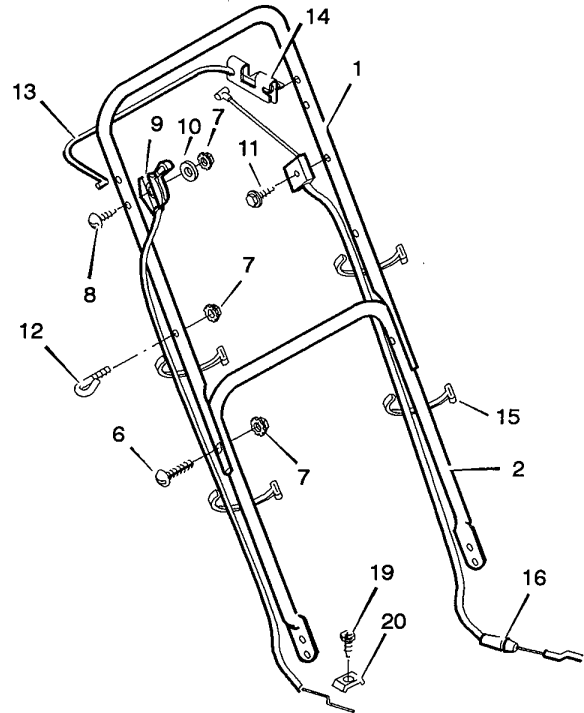


MODEL 20251x4B MODEL 20251x15A
MODEL 20251x5C MODEL 20251x19C
MODEL 20251x5D MODEL 20251x27B

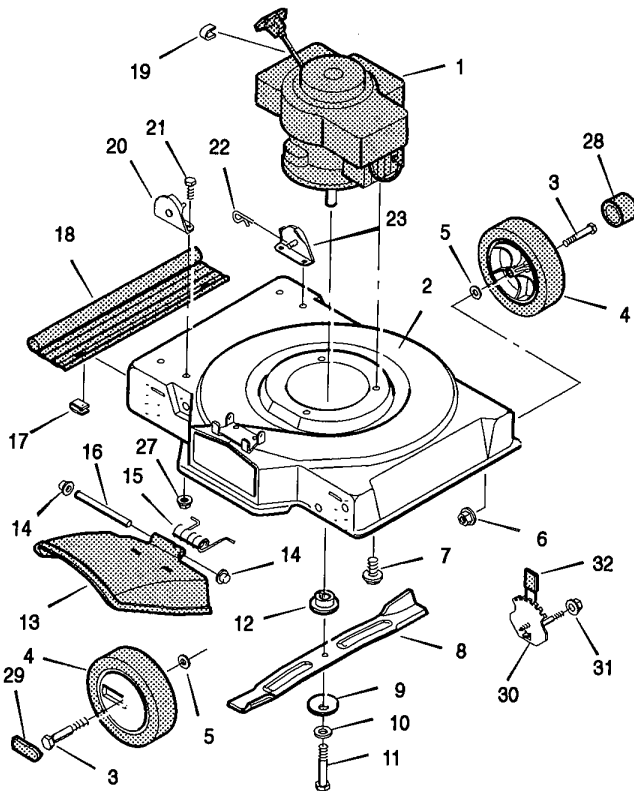

CHART

Model No.	Wheel & Tire	Hub Cap	Height Adjusters	Inst. Book	
20251x4B	43618	43615	401007	F-92493	* Parts are available from a Briggs & Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory. ** All replacement housings will be brite red.
20251x5C	20270	20107	401007	F-92493	
20251x5D	20270	20107	401025	F-93448	
20251x15A	20271	None	401025	F-93448	
20251x19C	20270	20107	401007	F-92493	
20251x27B	20270	None	401007	F-92493	

MOWER HOUSING

Key No.	Description	Part No.
1	Engine *	-----
2	Housing, For Folding Handle	70123A
3	Bolt, Axle	9x10
4	Wheel and Tire	See Chart
5	Washer	10851 Z
6	Locknut, Flange	15x68
7	Bolt, Engine	25x6
8	Blade	42785E701
9	Washer, Belleville	17x137
10	Washer	17x124
11	Bolt, Hex	1x142
12	Adapter, Blade	71056
13	Deflector, Chute	42919
14	Push-On Cap	28x42
15	Spring	166x5
16	Pin, Pivot	215x11 Z
17	Retainer	42743
18	Deflector, Rear	42746
19	Stop, Rope	42189
20	Bracket, Right Handle	42712E700
21	Bolt	1x38
22	Pin, Hair	31x10
23	Bracket, Left Handle	42713E700
27	Nut	15x82

Key No.	Description	Part No.
28	Hub Cap - Optional	See Chart
29	Hub Cap - Optional	See Chart
30	Adjuster, Height	See Chart
31	Locknut, Flange	15x84
32	Grip	43394
--	Parts Bag	70252
--	Instruction Book	See Chart

HANDLE

Key No.	Description	Part No.
1	Handle, Upper	43838E701
2	Handle, Lower	43841E701
6	Screw	3x136
7	Locknut	15x116
8	Screw	3x144
9	Throttle Control	71180
10	Washer	17x184
11	Screw	26x220
12	Guide, Rope	43956
13	Stop Lever	43793
14	Bracket, Stop Lever	43628 BC
15	Fastener, Cable	43499
16	Engine Stop Cable	43825
19	Screw	26x268
20	Clamp	42294