



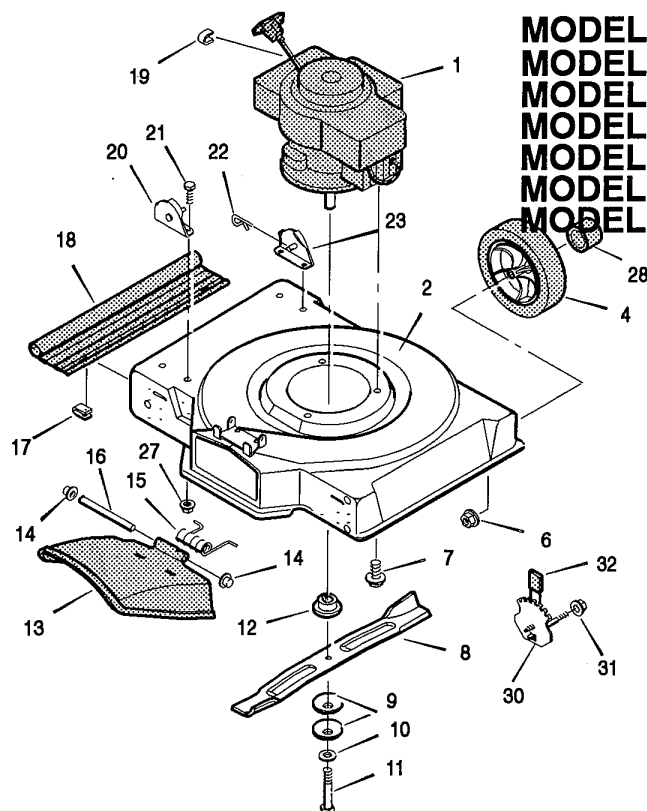

MODEL 20245x33A †
 MODEL 20251x19D
 MODEL 20251x27C
 MODEL 20255x5A
 MODEL 20255x5B †
 MODEL 20255x15A
 MODEL 20255x15B †

MODEL 20255x19A
 MODEL 20255x19B †
 MODEL 20255x27A
 MODEL 20255x27B †
 MODEL 20255x30A †
 MODEL 20255x66A

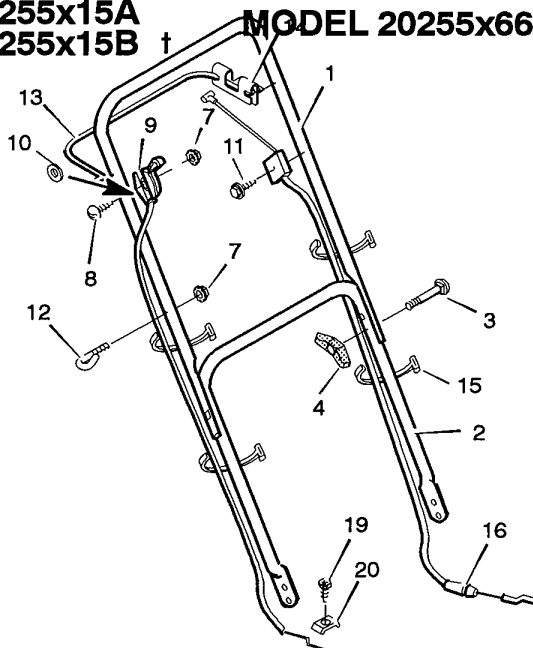

CHART

Model No.	Inst. Book	Wheel & Tire	
20245x33A	F-95563	20270	** All replacement housings will be brite red. * Parts are available from a Briggs and Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory. † As of 4-27-94 these models were changed to include 2 Belleville washers.
20251x19D	F-93449	20270	
20251x27C	F-92493	20270	
20255x5A & B	F-94454	42173	
20255x15A & B	F-94454	20271	
20255x19A	F-94434	20270	
20255x19B	F-95521	20270	
20255x27A	F-94454	20270	
20255x27B	F-95541	20270	
20255x30A	F-95564	20271	
20255x66A	F-94434	20270	

MOWER HOUSING & HANDLE

Key No.	Description	Part No.
1	Engine *	-----
2	Housing, For Folding Handle **	70123A
4	Wheel and Tire	See Chart
6	Locknut, Flange	15x68
7	Bolt, Engine	25x6
8	Blade	42785E701
9	Washer, Belleville †	17x137
10	Washer	17x124
11	Bolt, Hex	1x142
12	Adapter, Blade	71056
13	Deflector, Chute	42919
14	Push-On Cap	28x42
15	Spring	166x5
16	Pin, Pivot	215x11 Z
17	Retainer	42743
18	Deflector, Rear	42746
19	Stop, Rope	42189
20	Bracket, Right Handle	42712E700
21	Bolt	1x38
22	Pin, Hair	31x10
23	Bracket, Left Handle	42713E700
27	Nut	15x82

Key No.	Description	Part No.
28	Hub Cap - Optional	20107
30	Adjuster, Height	401025
32	Grip	43394
--	Parts Bag	70252
--	Instruction Book	See Chart

Key No.	Description	Part No.
1	Handle, Upper -Black	43838E701
--	Handle, Upper -Black w/foam grip	71727E701
2	Handle, Lower -Black	71151E701
3	Bolt	2x77
4	Knob, Plastic	71294
7	Locknut	15x116
8	Screw	3x105
9	Throttle Control	71078
10	Washer	17x184
11	Screw	26x220
12	Guide, Rope	43956
13	Stop Lever	43793
14	Bracket, Stop Lever	43628 BC
15	Fastener, Cable	71372
16	Engine Stop Cable	43825
19	Screw	26x268
20	Clamp	42294