


**MODEL 20541x15C
MODEL 20545x18A**

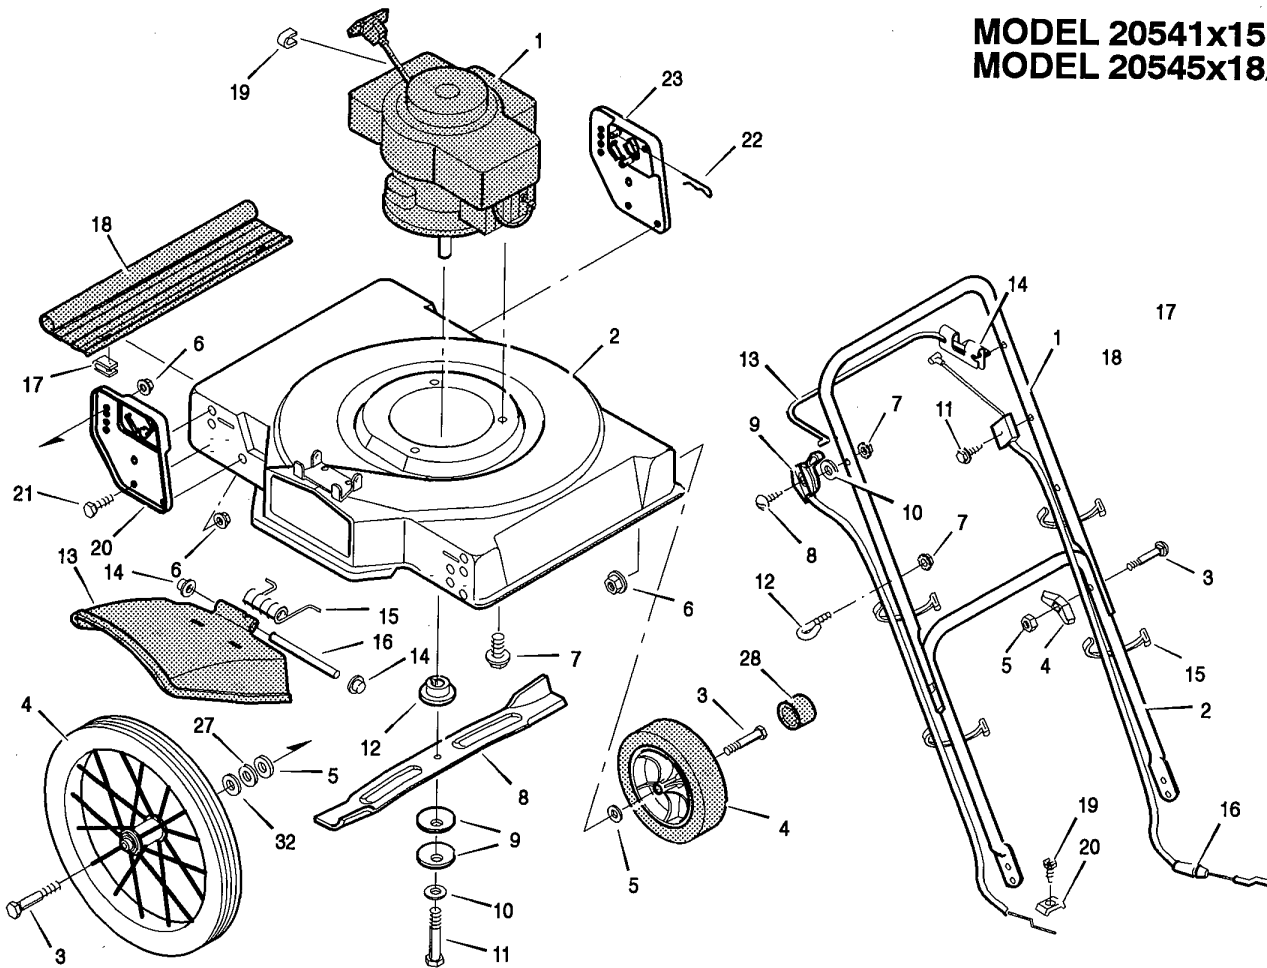

* Parts are available from a Briggs and Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.

** All replacement housings will be brite red.

† As of 4-27-94 these models were changed to include 2 Belleville washers.

CHART

Model No.	Upper Handle	Lower Handle	Blade Adapter	Throttle Control	Engine Stop Lever	Inst. Book
20541x15C	71094E701	71072E701	42734	43706	43845	F-92456
20545x18A	71581E701	71582E701	71056	71178	43828	F-95428

MOWER HOUSING

Key No.	Description	Part No.
1	Engine *	-----
2	Housing, For Folding	70120A
3	Bolt, Axle	9x10
4	Wheel and Tire -Front	20104
--	Wheel and Tire -Rear	42666SE
--	Wheel Bearing	43407
--	Tire	42662
5	Washer	10851 Z
6	Locknut, Flange	15x68
7	Bolt, Engine	25x6
8	Blade	42785E701
9	Washer, Belleville	17x137
10	Washer	17x124
11	Bolt, Hex	1x68
12	Adapter, Blade	See Chart
13	Deflector, Chute	42919
14	Push-On Cap	28x42
15	Spring	166x5
16	Pin, Pivot	215x11 Z
17	Retainer	42743

Key No.	Description	Part No.
18	Deflector, Rear	42746
19	Stop, Rope	42189
20	Bracket, Right Handle	71066E701
21	Bolt	1x85
22	Pin, Hair	31x10
23	Bracket, Left Handle	71067E701
27	Washer, Spring	20x3
28	Hub Cap - Optional	20107
29	Bolt, Shoulder	9x23
32	Washer	17x67Z
--	Parts Bag	70252
--	Instruction Book	See Chart

HANDLE

Key No.	Description	Part No.
1	Handle, Upper	See Chart
2	Handle, Lower	See Chart
3	Bolt	2x77
4	Knob, Plastic	71294
5	Nut	15x2
7	Locknut	15x116
8	Screw	3x144
9	Throttle Control	See Chart
10	Washer	17x32Z
11	Screw	26x220
12	Guide, Rope	43956
13	Engine Stop Lever	43653E70
14	Bracket, Stop Lever	43628 BC
15	Fastener, Cable	43999
16	Engine Stop Cable	See Chart
19	Screw	26x268
20	Clamp	42294