


MODEL 20616x50B

REPAIR PARTS

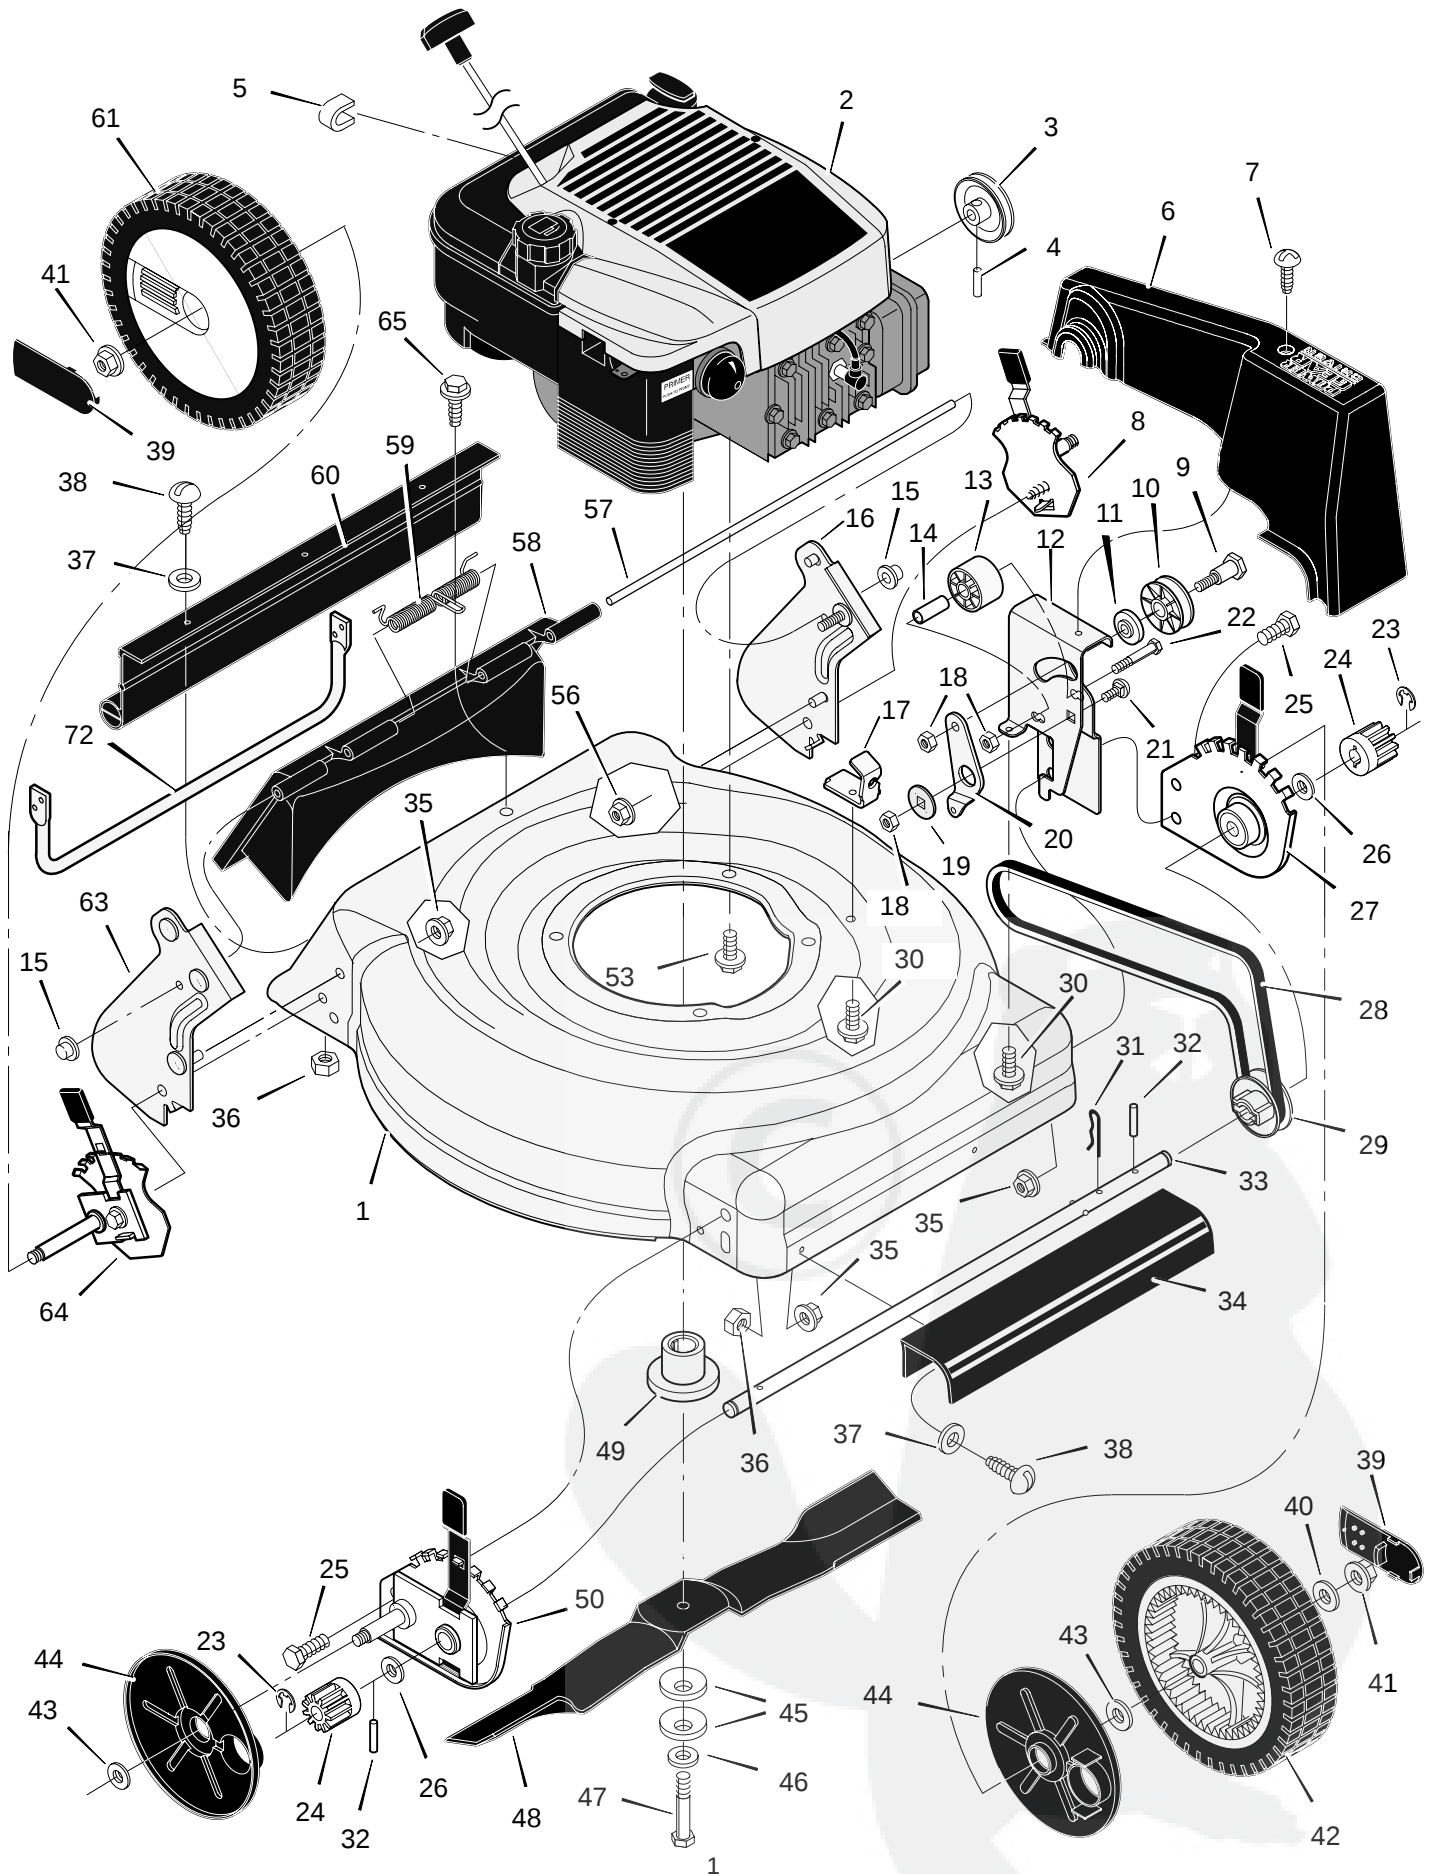

MODEL 20616x50B




REPAIR PARTS

KEY NO.	DESCRIPTION	PART NO.
1	Housing	_____
2	Engine *	*
3	Pulley, Engine	71434
4	Pin, Spring	32x64
6	Cover, Belt (Gray)	672000
7	Screw	26x279
8	Adjuster, Left Height	672605
9	Bolt, Shoulder	9x50
10	Pulley	71779
11	Spacer	71788
12	Bracket, Idler Support	672772 Z
13	Pulley, Idler	71778
14	Bearing	71793
15	Nut, Push	28x49
16	Bracket, Left Handle	672869E700
17	Bracket, Cable	671934
18	Nut, Hex	15x43
19	Spacer	71789
20	Arm, Idler	671936
21	Bolt, Carriage	2x53
22	Bolt, Shoulder	1x81
23	E-Ring	11x16
24	Gear, Pinion	71792
25	Bolt	1x85
26	Washer	17x186
27	Adjuster, Left Frt. Height	672603
28	Belt	37x99
29	Pulley, Axle	71791
30	Screw	26x263
31	Pin, Hair	31x9
32	Pin, Spring	43629

KEY NO.	DESCRIPTION	PART NO.
33	Axle	671931
34	Cover, Axle (Gray)	672108
35	Nut, Flange	15x68
36	Nut, Hex	15x102
37	Washer	17x38
38	Screw	4x21
39	Cap, Hub	672122
40	Washer	17x169
41	Nut, Flange	15x84
42	Wheel, Drive	71133
43	Washer	17x120
44	Cover, Dust	71780
45	Washer, Belleville	17x137
46	Washer	17x124
47	Bolt	1x153
48	Blade	672763E701
49	Adapter, Blade	672503
50	Adjuster, Right Frt. Height	672602
53	Bolt, Engine	25x6
56	Nut, Flange	15x79
57	Rod, Pivot	215x17 Z
58	Door, Rear (Gray)	672612
59	Spring	166x44
60	Deflector, Rear	671970
61	Wheel, Rear	71132
63	Bracket, Right Handle	672868E700
64	Adjuster, Right Height	672604
65	Screw	26x245
72	Guard, Rear	671990
--	Instruction Book	F-000461L

MODEL 20616x50B

REPAIR PARTS

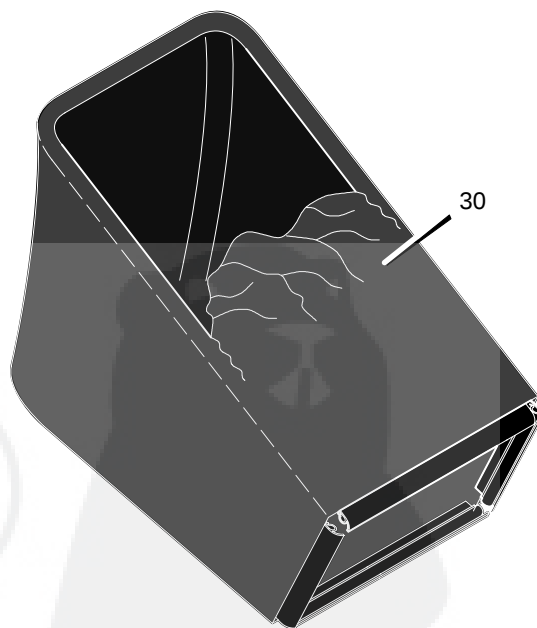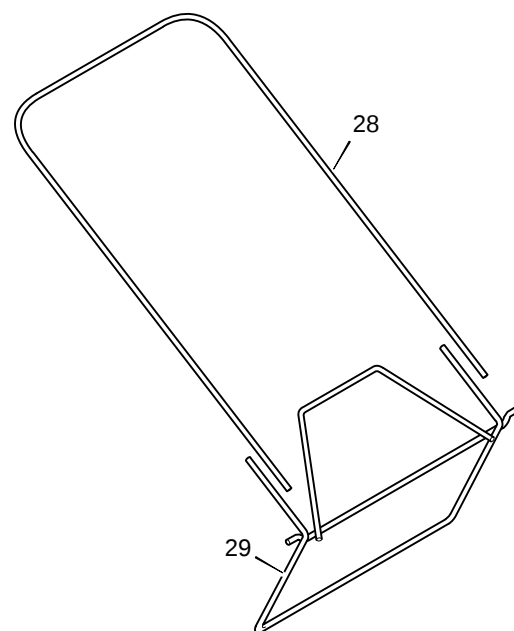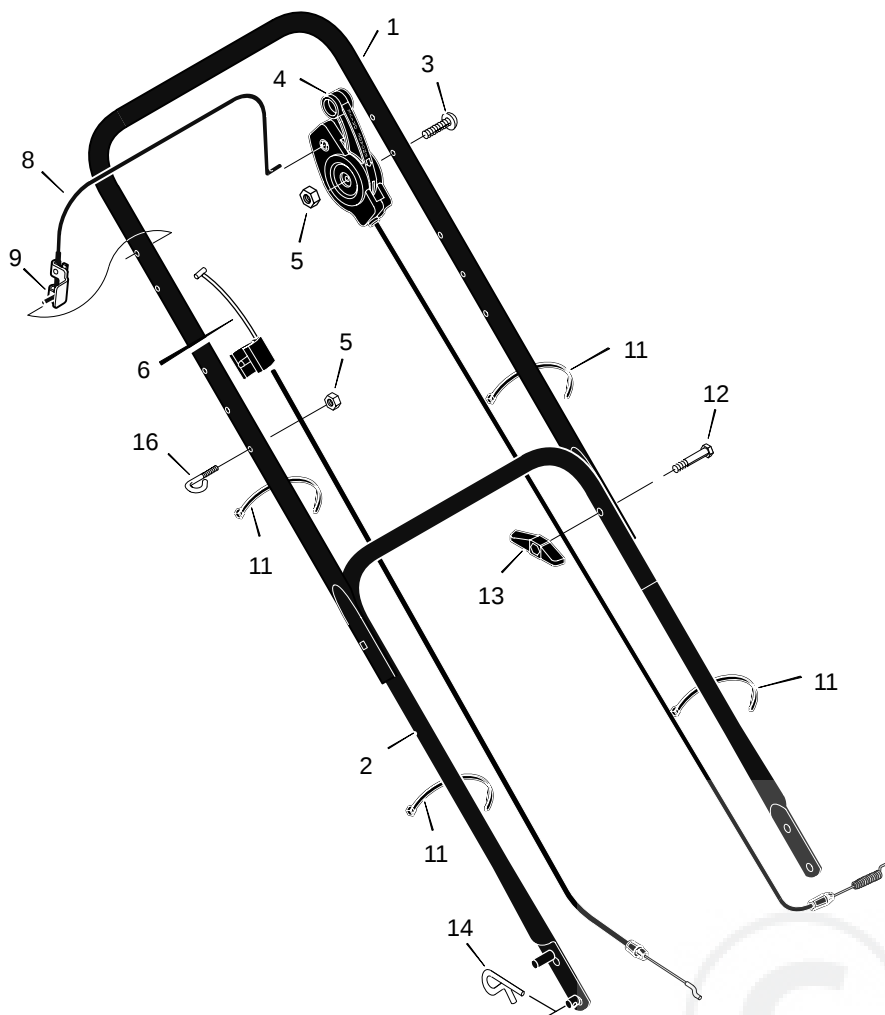

1	Handle, Upper (Gray)	671918E724
2	Handle, Lower (Gray)	1101010E724
3	Bolt	26x286
4	Control, Drive	672872
5	Locknut	15x116
6	Cable, Stop	672831
8	Engine Stop Lever	672878E701
9	Bracket, Stop Lever	43628 BC
11	Fastener, Cable	71372

12	Bolt	2x77
13	Knob	71294
14	Pin, Hair	31x9
15	Clamp	42294
16	Guide, Rope	71530
28	Frame, Top	71592
29	Frame Assembly	672905
30	Bag, Cloth	1101003