


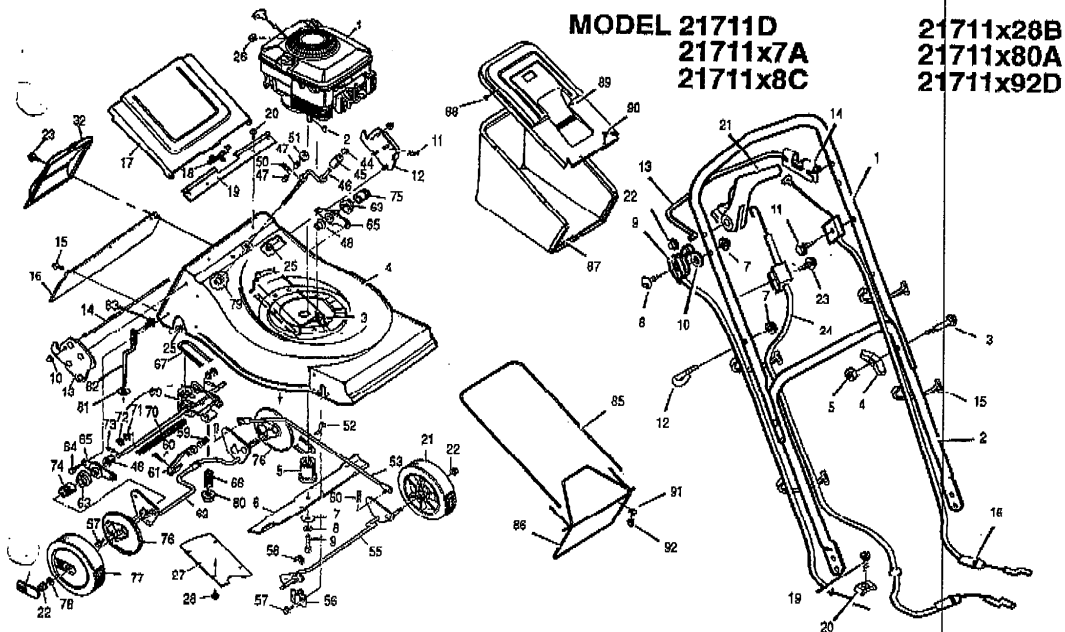

CHART

Model No.	Instruction Book	
21711D	F-92476	
21711x7A	F-92445	
21711x8C	F-92476	
21711x28B	F-92476	
21711x80A	F-924008	
21711x92D	F-92479	

* Parts are available from a Briggs and Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.

+ Model 24072A Side Discharge Attachment. This optional accessory gives you the opportunity of discharging the grass to the side.

** All replacement housings will be brittle red.

Key No.	Description	Part No.	Key No.	Description	Part No.	Key No.	Description	Part No.
1	Engine *		48	Spacer, Axle	43787	83	Screw	25x2
2	Key, Woodruff	20062	50	Pin, Hair	31x8	85	Support, Bag	43669
3	Bolt, Engine	25x6	51	Bushing	43639	86	Frame Assembly	43666
4	Housing	70127	52	Clip, Indicator	43674	87	Bag (For Plastic Top)	43670
5	Adapter, Blade	43603	53	Link, Lifter	43721	88	Screw	26x254
6	Blade	43638E701	55	Crossbar, Front	71152E245	89	Cover, Plastic	43619
7	Washer, Belleville	17x137	56	Clip, Retainer	43675	90	Screw	4x21
8	Washer	17x124	57	Screw	26x221	91	Clip	19x1
9	Bolt	1x88	58	Bushing	43731	92	Nut	16x102
10	Push On Cap	28x42	59	Nut, Lifter	43638		Parts Bag, Hardware	70253
11	Pin, Hair	31x5	60	Pin, Cotter	30x49	HANDLE		
12	Handle Bracket, Left	71097	61	Strap, Lifter	436622	1	Handle, Upper (Black)	71099E701
13	Handle Bracket, Right	71096	62	Crossbar, Rear	43648E700	—	Handle, Upper (Grey)	71099E724
14	Rod, Door Pivot	215x14Z	63	Bearing, Lifter	43786	2	Handle, Lower (Black)	71137E701
15	Screw	26x245	64	Bolt, Hex	1x91	—	Handle, Lower (Grey)	71137E724
16	Deflector, Rear	43640	65	Bearing, Axle	71079	3	Bolt	2x77
17	Door, Rear	43642E701	66	Locknut, Flange	15x89	4	Knob, Plastic	43958
18	Spring, Torsion	186x33	67	Belt, Drive	37x64	5	Nut	15x2
19	Spacer, Door	43641	68	Spring	164x27	7	Locknut	15x116
20	Screw	26x259	69	Transaxle	71121	8	Screw	3x136
21	Wheel & Tire, Front (Black)	43618	70	Shield, Axle	43649	9	Throttle Control	71086
—	Wheel & Tire, Front (Grey)	71132	71	E-Ring	11x19	10	Washer	17x32Z
22	Nut	15x84	72	Washer, Thrust	17x139	11	Screw	26x220
23	Screw	26x214	73	Pin, Drive	43629	12	Guide, Rope	43956
25	Nut, Flange	15x79	74	Pinion, Right	43630	13	Stop Lever	43791
26	Stop, Rope	42189	75	Pinion, Left	43631	14	Bracket, Stop Lever	43628 BC
27	Cover, Belt	43770	76	Cover, Dust	43616	15	Fastener, Cable	43499
28	Screw	26x259	77	Wheel & Tire, Drive (Black)	43617	16	Engine Stop Cable	43739
32	Cover, Rear	43611	—	Wheel & Tire, Drive (Grey)	71133	19	Screw	26x268
43	Hub Cap (Optional)	43615	78	Washer, Thrust	17x169	20	Clamp	42294
44	Nut, Push	25x65	79	Nut, Lifter Crank	43787	21	Lever, Drive	43723
45	Knob	43673	80	Locknut	16x89	22	Push On Cap	28x48
48	Crank, Lifter	43635Z	81	Washer	17x47Z	23	Screw	26x266
47	Spacer, Lifter Crank	43672	82	Support, Spring	7118Z	24	Cable, Drive	71091