


MODEL 22365x14A



REPAIR PARTS

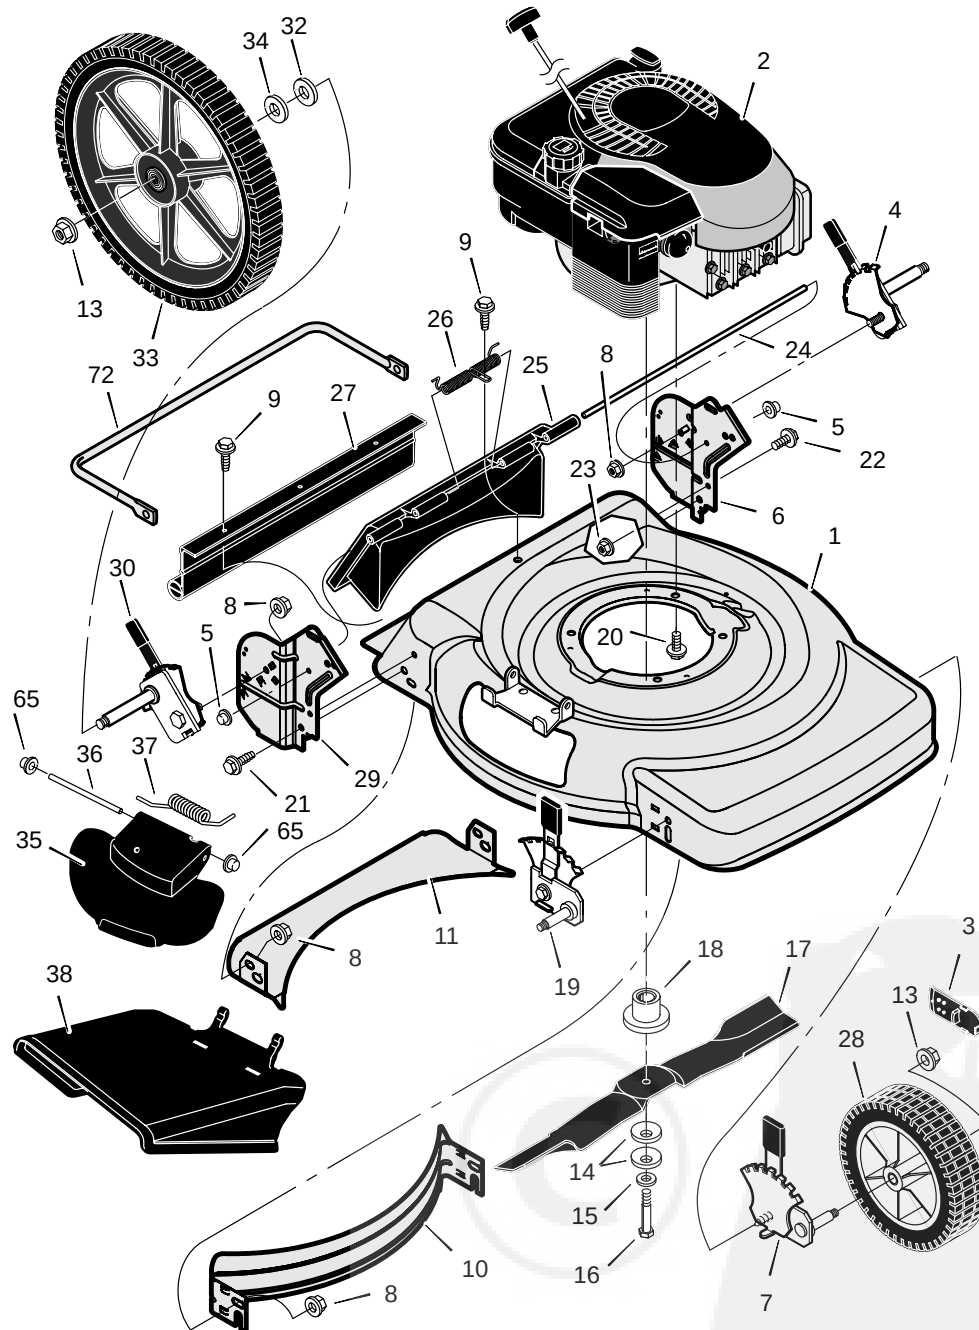

1	Housing	7501001	15	Washer	17x124	28	Wheel & Tire, Front	71132
2	Engine	-----	16	Bolt	1x153	29	Bracket, Right Handle	1101128E700
3	Cap, Hub (Optional)	43615	17	Blade	1101120E701	30	Adjuster, Right Rear Height	672918
4	Adjuster, Left Rear Height	672919	18	Adapter, Blade	672503	32	Washer	17x91
5	Push On Cap	28x49	19	Adjuster, Right Front Height	672600	33	Wheel & Tire, Rear	672745
6	Bracket, Left Handle	1101129E700	20	Bolt, Engine	25x6	34	Washer	20x3
7	Adjuster, Left Front Height	672601	21	Bolt	1x85	35	Cover, Mulch (Black)	1101098
8	Nut, Flange	15x68	22	Bolt	1x45	36	Rod, Pivot	215x19 Z
9	Screw	26x245	23	Nut, Flange	15x79	37	Spring, Torsion	166x38
10	Baffle, Front	672915E700	24	Rod, Pivot	215x21	38	Deflector, Chute (Black)	1101097
11	Baffle, Rear	672916E700	25	Door, Rear (Black)	672611	39	Push On Cap	28x42
13	Nut, Flange	15x84	26	Spring	166x44	72	Brace	1101008E701
14	Washer, Belleville	17x137	27	Guard, Rear	1101105	--	Instruction Book	F-000504J

MODEL 22365x14A

REPAIR PARTS

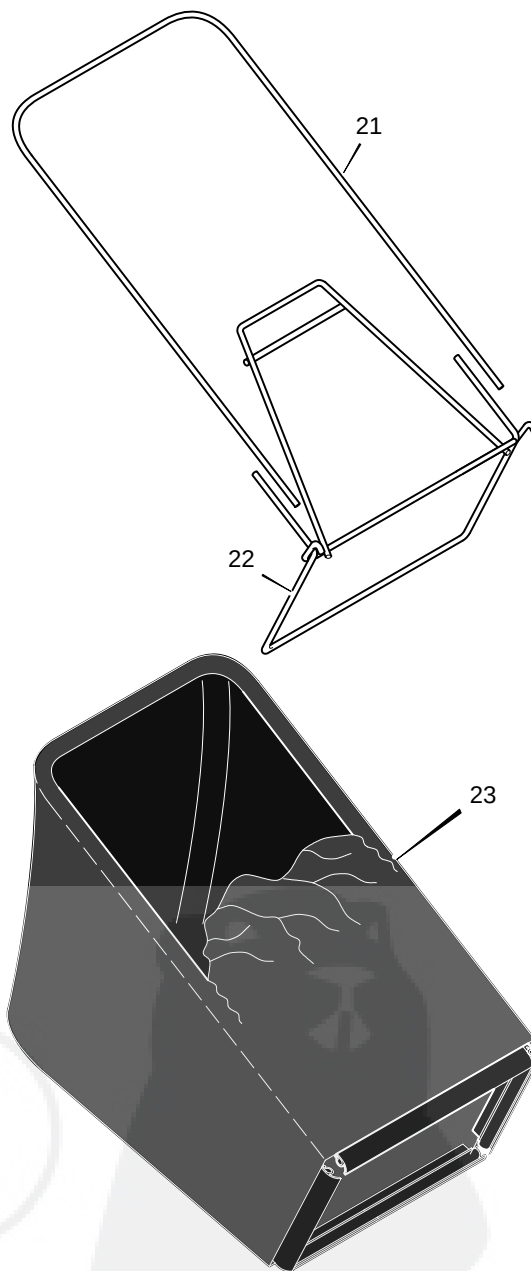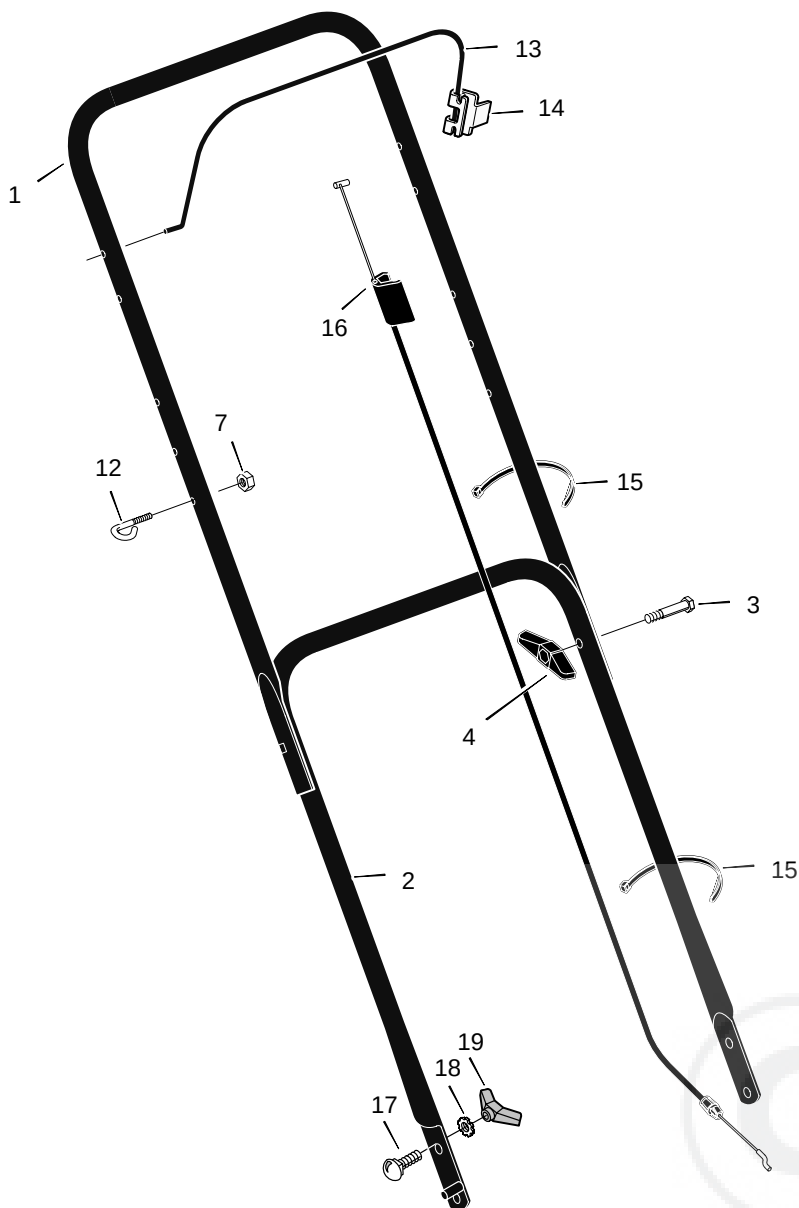

1	Handle, Upper (Gray)	71581E701	14	Bracket, Stop Lever	43628 BC	22	Frame Assembly	1101074
2	Handle, Lower (Gray)	1101082E701	15	Fastener, Cable	71372	23	Bag, Cloth	1101034
3	Bolt	2x77	16	Engine Stop Cable	672838			
4	Knob, Plastic	71294	17	Bolt, Carriage	1101113			
7	Locknut	15x116	18	Washer	19x8			
12	Guide, Rope	71530	19	Knob, Plastic	1101106			
13	Engine Stop Lever	43653E701	21	Frame, Top	1101075			