


WARNING!

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

SPAREPARTS 107 25 73-61

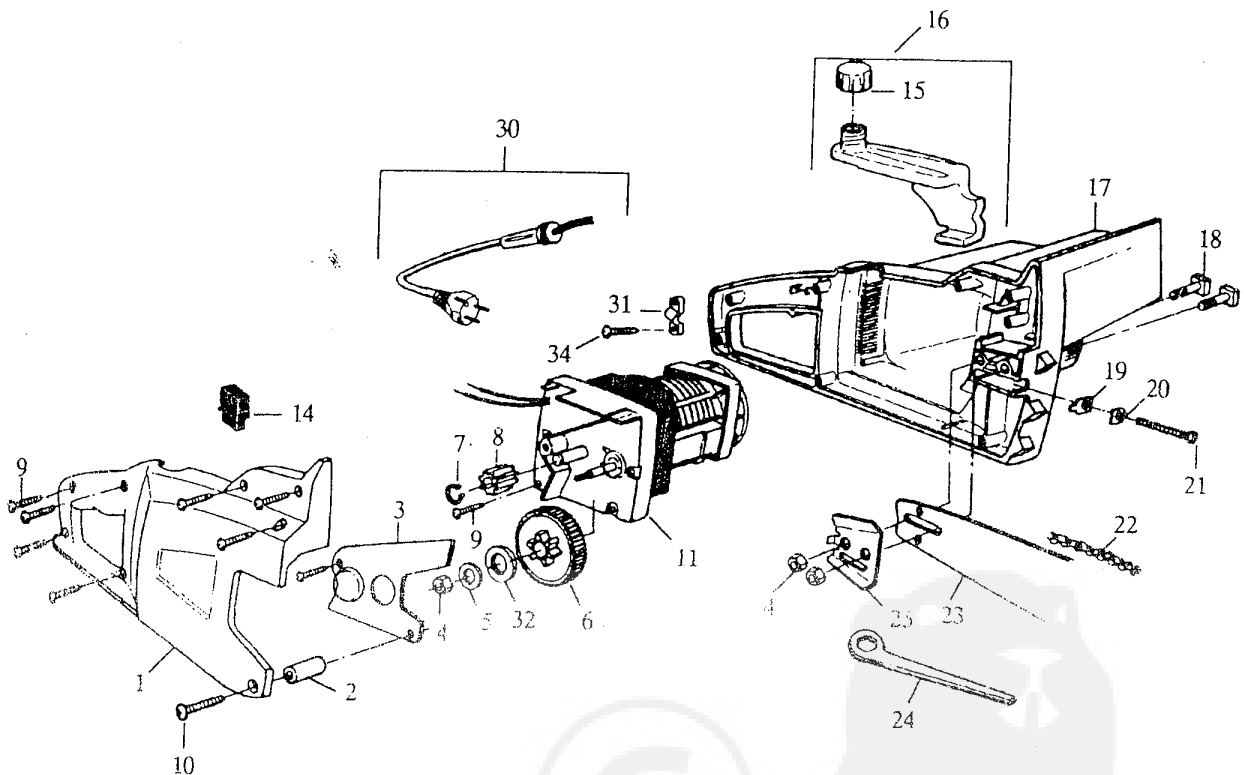

Key No.	Part No.	Description
1		Housing (Right)
2	530 01 58-32	
3	530 02 92-78	Gear Cover
4	530 01 54-45	Nut
5	530 01 58-42	Washer
6	530 02 93-41	Gear Ass'y
7	530 01 55-01	Retaining Ring
8	530 02 54-63	Gear Pinion
9	530 01 54-95	Screw
10	530 01 58-35	Screw
11		Motor Ass'y
14	501 39 44-01	Switch-W/Safety Lock
15	530 02 92-82	Oil Cap
16	530 01 42-54	Oil Tank Ass'y

Key No.	Part No.	Description
17		Housing (Left)
18	530 01 58-31	Bolt-Bar Mounting
19	530 02 34-92	Pin
20	530 02 54-66	Plate (Bar Adjust.)
21	530 01 55-14	Screw
22	505 36 59-52	Chain (14")
23	530 04 43-28	Bar (14")
24	530 03 10-63	Wrench
25	530 02 92-85	Plate
30	530 40 04-53	Cordset Ass'y
31	530 02 56-66	Clamp
32	530 03 60-12	Gear Seal
34	530 01 55-19	Screw