


LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

1. This warranty does not apply to the engine. Please contact your nearest dealer where they will send the machine to the engine manufacturer.
2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by your dealer.
3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
7. In case of any problem within the boundaries of this warranty, contact the nearest department store, indicate the model number, serial number and the date of purchase of your machine. This warranty does not apply to accidental damages. All implicit warranties are limited to the same time frames. Or contact:

E.M. Services
54 Rue Lambrechts
92400 Courbevoie
France
Telephone: (1) 46678078
Fax: (1) 46678095

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES. ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN.

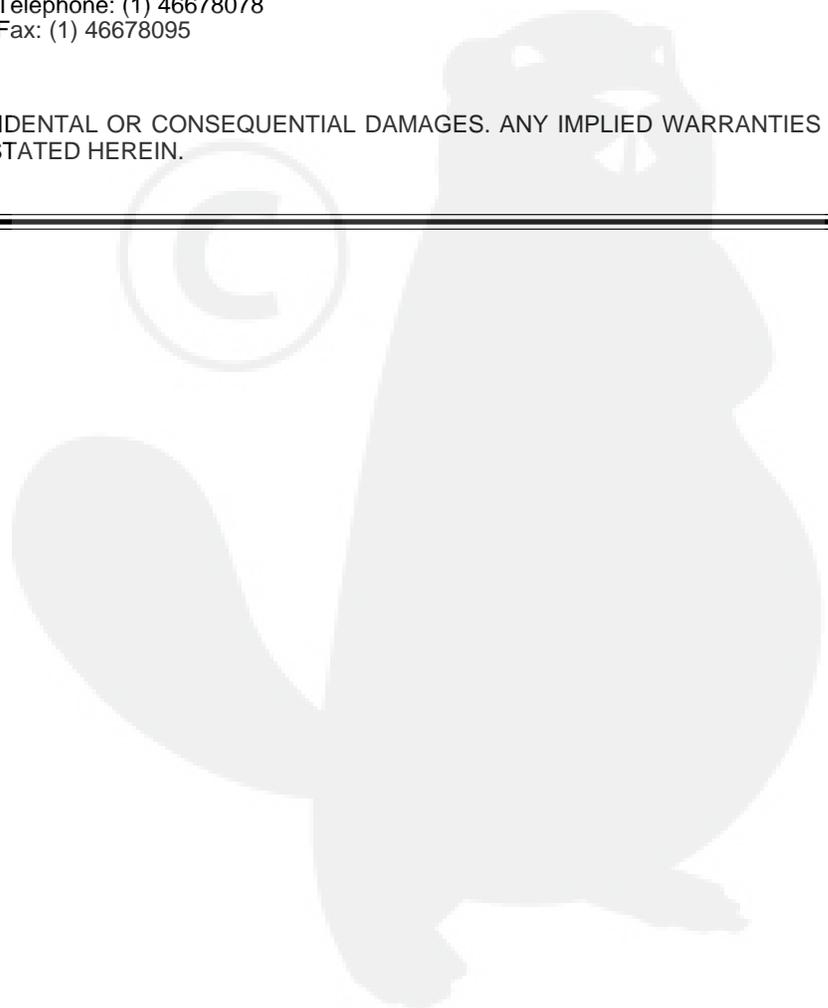



REPAIR PARTS MANUAL
MODEL NO. AYF1236B
Lawn Tractor

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product - "Tractor"
- Model Number - "AYF1236B"
- Part Number
- Part Description

SPECIFICATIONS


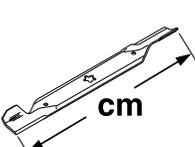
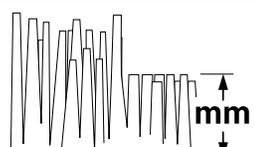
| | | | | | | | |
|--|---|---|---|--|--------|---|--|
|  hp/kw |  km/h |  cm |  mm |  KG | dB (A) | Vibration Vibration Vibración Vibrering Vibrasjon | Lärmpegel Vibratie Vibrazioni Vibration Tärinä |
| 12/8,9 | 0-6 | 91 | 25-89 | 250 | 100 | m/s ² 4 to 8 | |


TABLE OF CONTENTS

| | |
|--------------------------------------|-------|
| SCHEMATIC | 3 |
| ELECTRICAL | 4-5 |
| HOOD | 6 |
| FENDER/CHASSIS | 7 |
| SEAT | 8 |
| DASH | 9 |
| STEERING WHEEL | 10 |
| SECTOR GEAR/AXLE SUPPORT | 11 |
| FRONT AXLE | 12 |
| BRAKE/REAR MOWER LIFT ASSEMBLY | 13 |
| ENGINE/THROTTLE | 14 |
| GROUND DRIVE | 15 |
| TRANSAXLE | 16 |
| MOWER LIFT LEVER | 17 |
| MOWER DECK | 18-19 |
| DECALS | 20 |

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B


SCHEMATIC

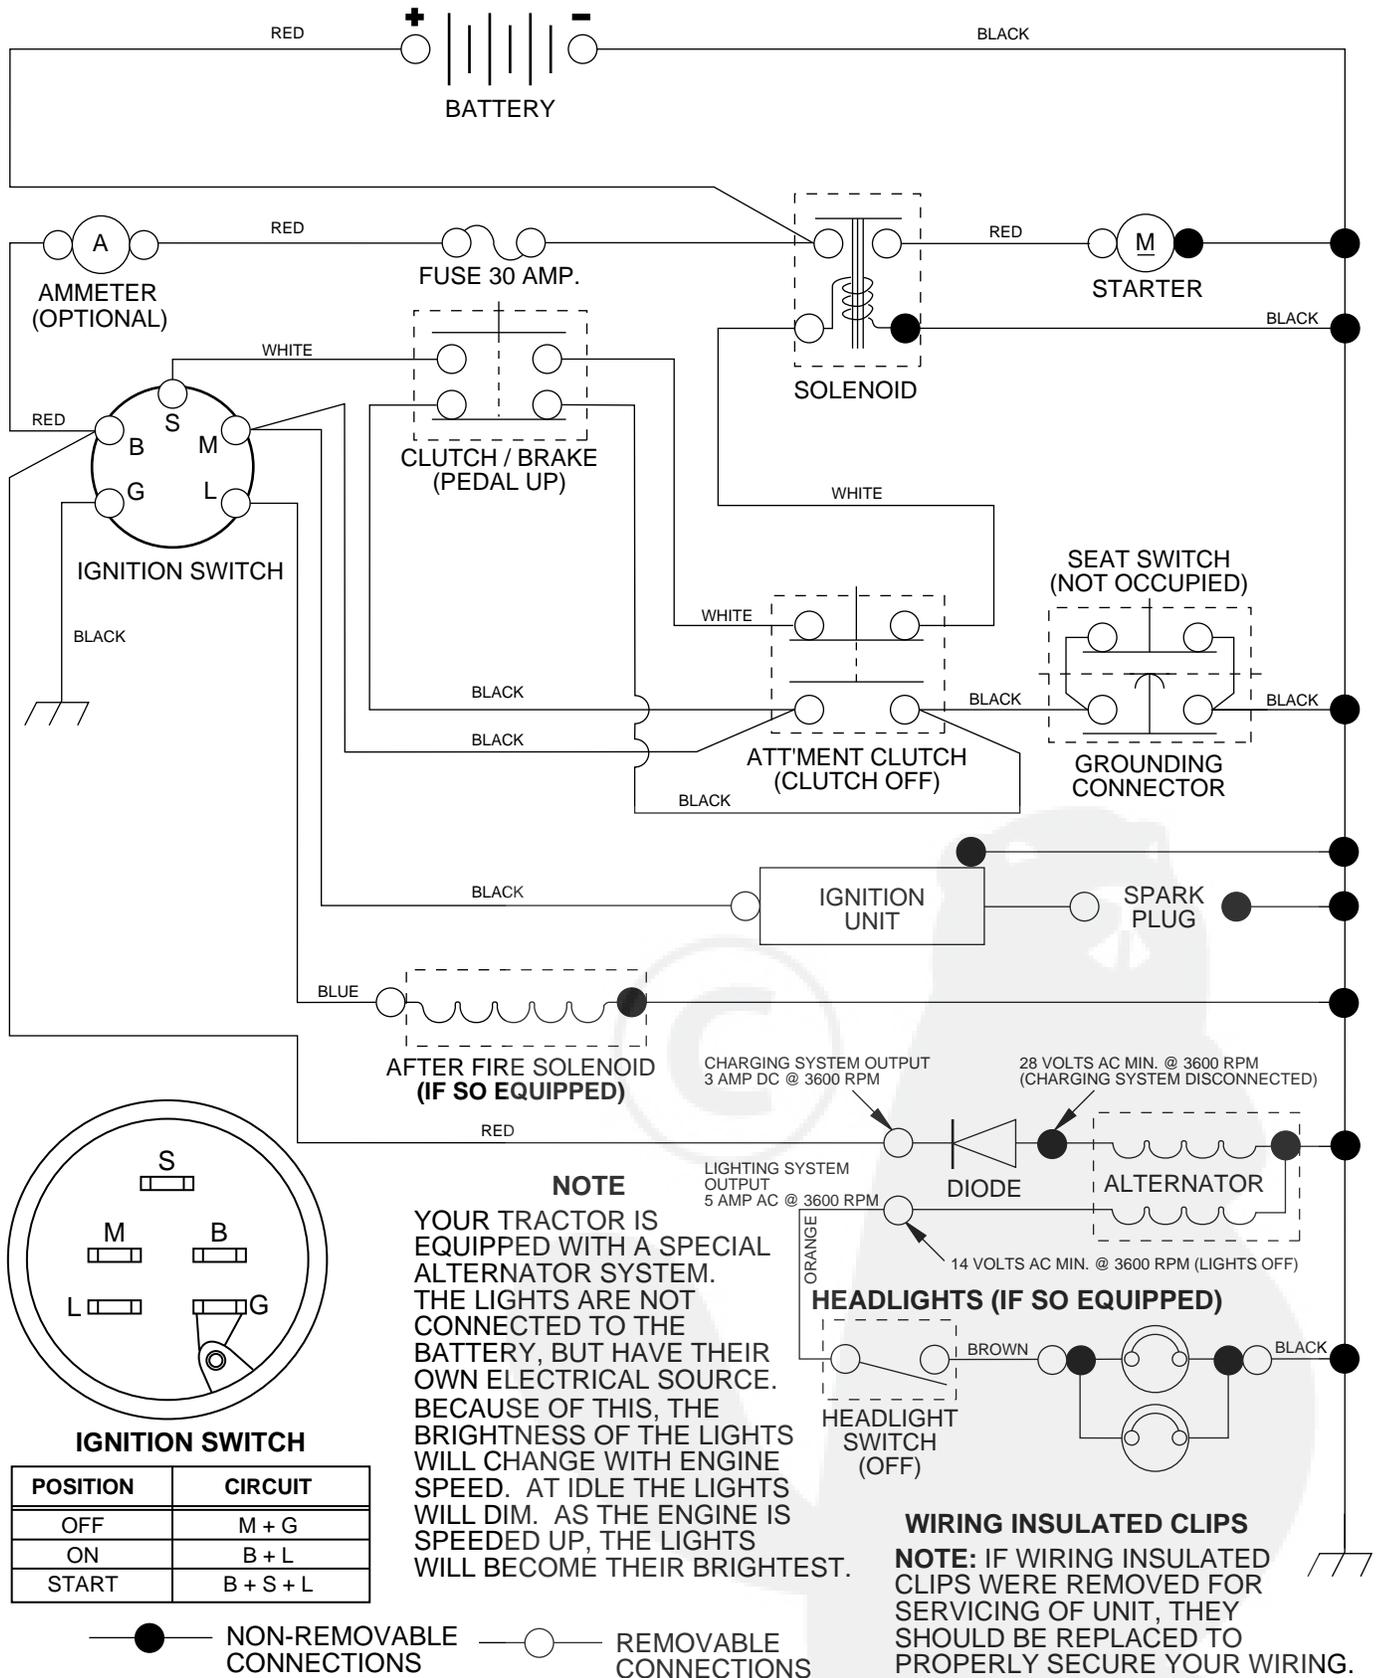

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

ELECTRICAL

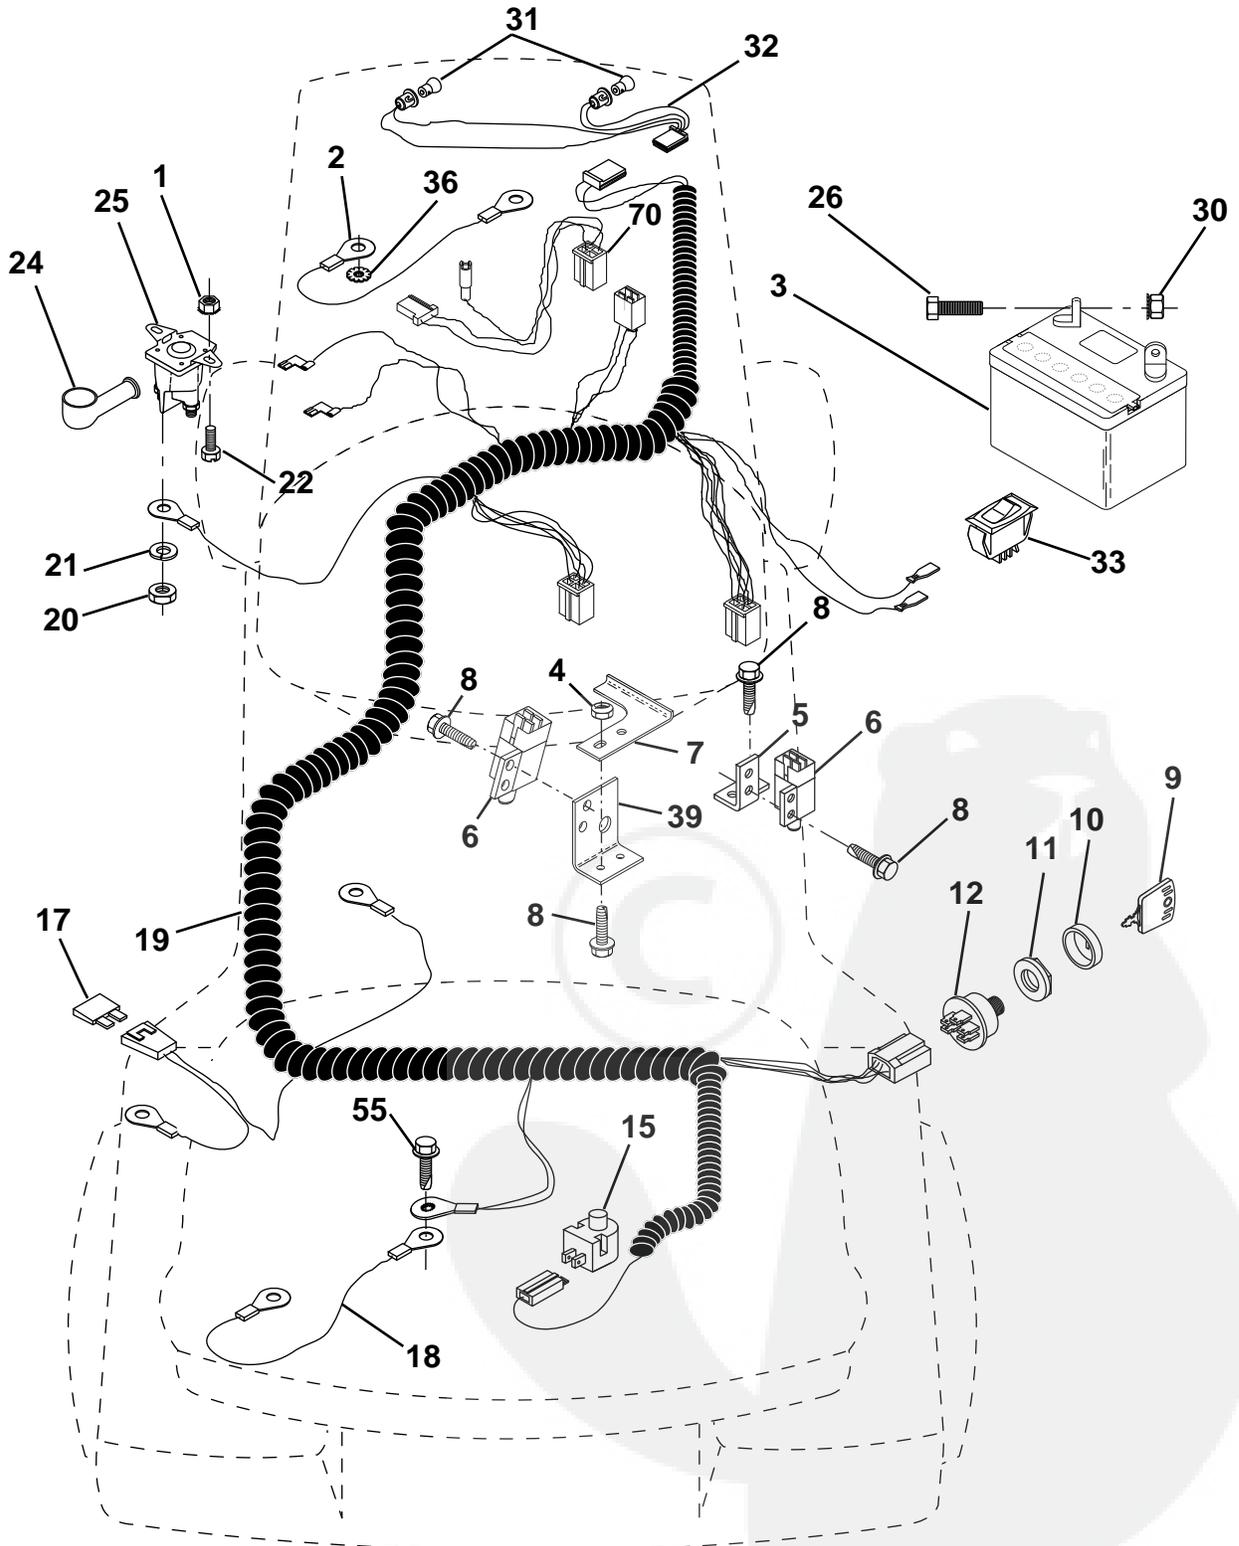

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

ELECTRICAL

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---|
| 1 | 73640400 | Nut, Hex, Keps 1/4-20 |
| 2 | 108423X | Assembly, Cable |
| 3 | 144924 | Battery |
| 4 | 69180 | Nut, lock #10-24 UNC |
| 5 | 108236X | Bracket, Switch |
| 6 | 109553X | Switch, Interlock, 4 Terminal |
| 7 | 146374 | Keeper, Actuator |
| 8 | 17021008 | Screw, Hex Head, Self-Tapping #10-24 x 1/2 |
| 9 | 140401 | Key, Molded |
| 10 | 141226 | Cover, Ignition Key |
| 11 | 140400 | Nut, Ignition |
| 12 | 163088 | Switch, Ignition |
| 15 | 121305X | Switch, Plunger |
| 17 | 108824X | Fuse |
| 18 | 128353 | Assembly, Cable |
| 19 | 146064 | Harness, Ignition |
| 20 | 73350400 | Nut, Hex, Jam 1/4-20 |
| 21 | 10090400 | Washer, Lock 1/4 |
| 22 | 71110408 | Bolt, Hex, Fin. 1/4-20 UNC x 1/2 Grade 5 |
| 24 | 131563 | Cover, Terminal |
| 25 | 145673 | Solenoid |
| 26 | 74760412 | Bolt, Hex Head 1/4-20 UNC x 3/4 |
| 30 | 73510400 | Nut, Keps Hex. 1/4-20 UNC |
| 31 | 4152J | Bulb, Light |
| 32 | 136850 | Harness Asm. Light |
| 33 | 110712X | Switch, light, blk |
| 36 | 11150400 | Washer, Lock, Internal Tooth 1/4 |
| 39 | 141735 | Bracket Switch Clutch |
| 55 | 17490508 | Screw Thdrol 5/16 - 18 x 1/2 |
| 70 | 140413 | Harness Engine |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

HOOD

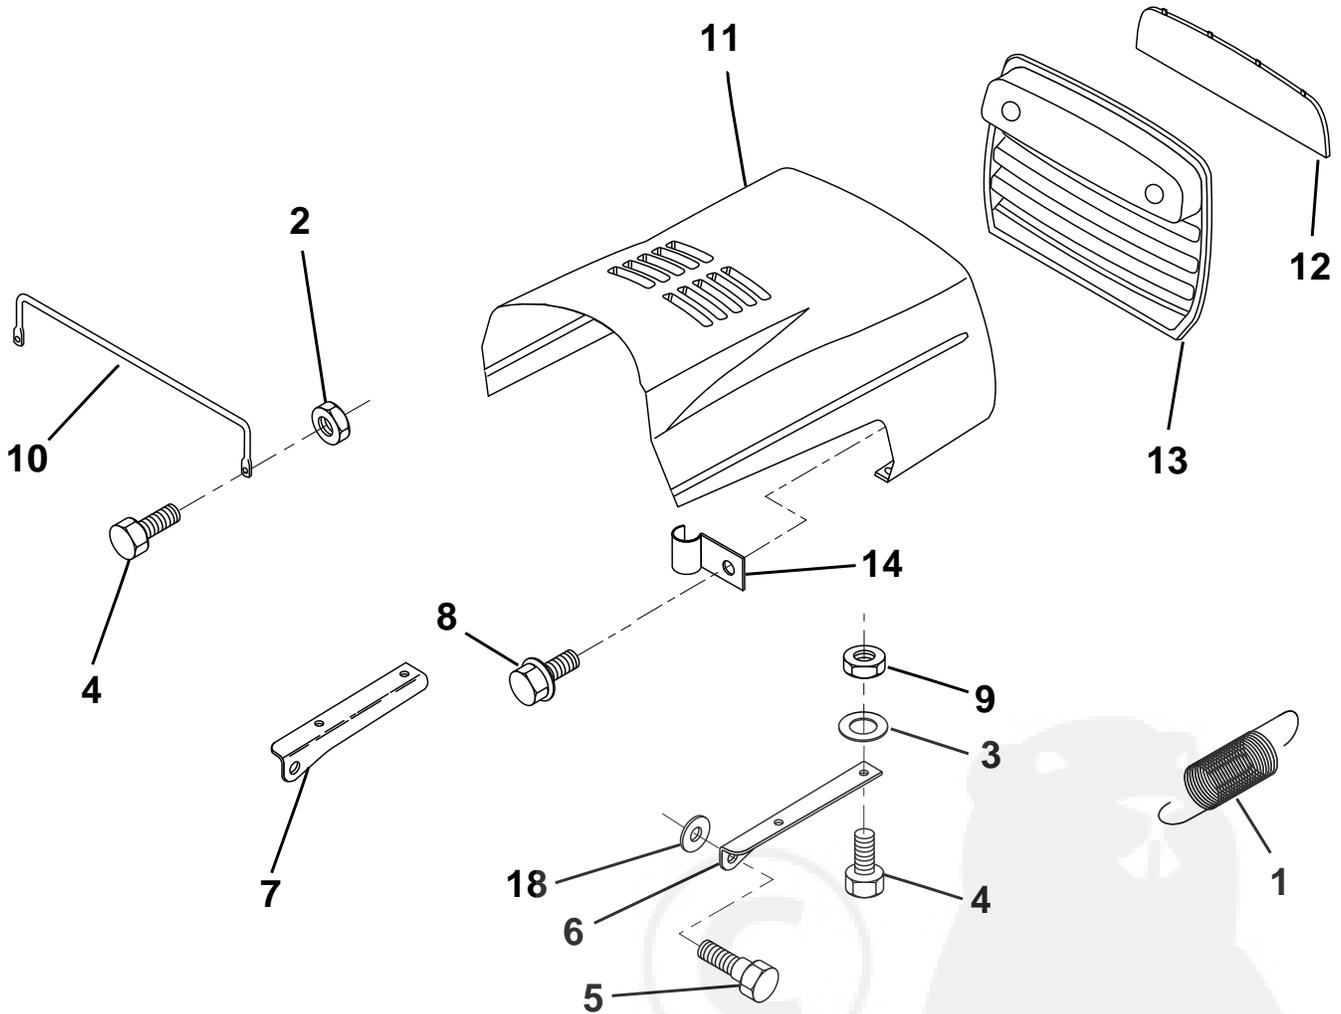

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-------------------------------------|
| 1 | 124657X | Spring, Extension |
| 2 | 73510400 | Nut, Hex, Keps 1/4-20 UNC |
| 3 | 19091416 | Washer 9/32 x 7/8 x 16 Ga. |
| 4 | 74780412 | Bolt, Hex, Fin 1/4-20 x 3/4 Grade 5 |
| 5 | 139888 | Bolt, Shoulder |
| 6 | 122549X | Bracket, Hood, R.H. |
| 7 | 122548X | Bracket, Hood, L.H. |
| 8 | 164863 | Screw, Hwhd. Hi-Lo #13-16 x 3/4 |
| 9 | 73800400 | Nut, Lock W/Insert 1/4-20 |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|------------|-------------------------------|
| 10 | 123693X | Brace, Hood |
| 11 | 132918X550 | Hood |
| 12 | 122035X | Lens |
| 13 | 127029X | Grill |
| 14 | 4171R | Clip, line, fuel 11/32 |
| 18 | 19111116 | Washer 11/32 x 11/16 x 16 Ga. |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR -- MODEL NUMBER AYF1236B

FENDER / CHASSIS

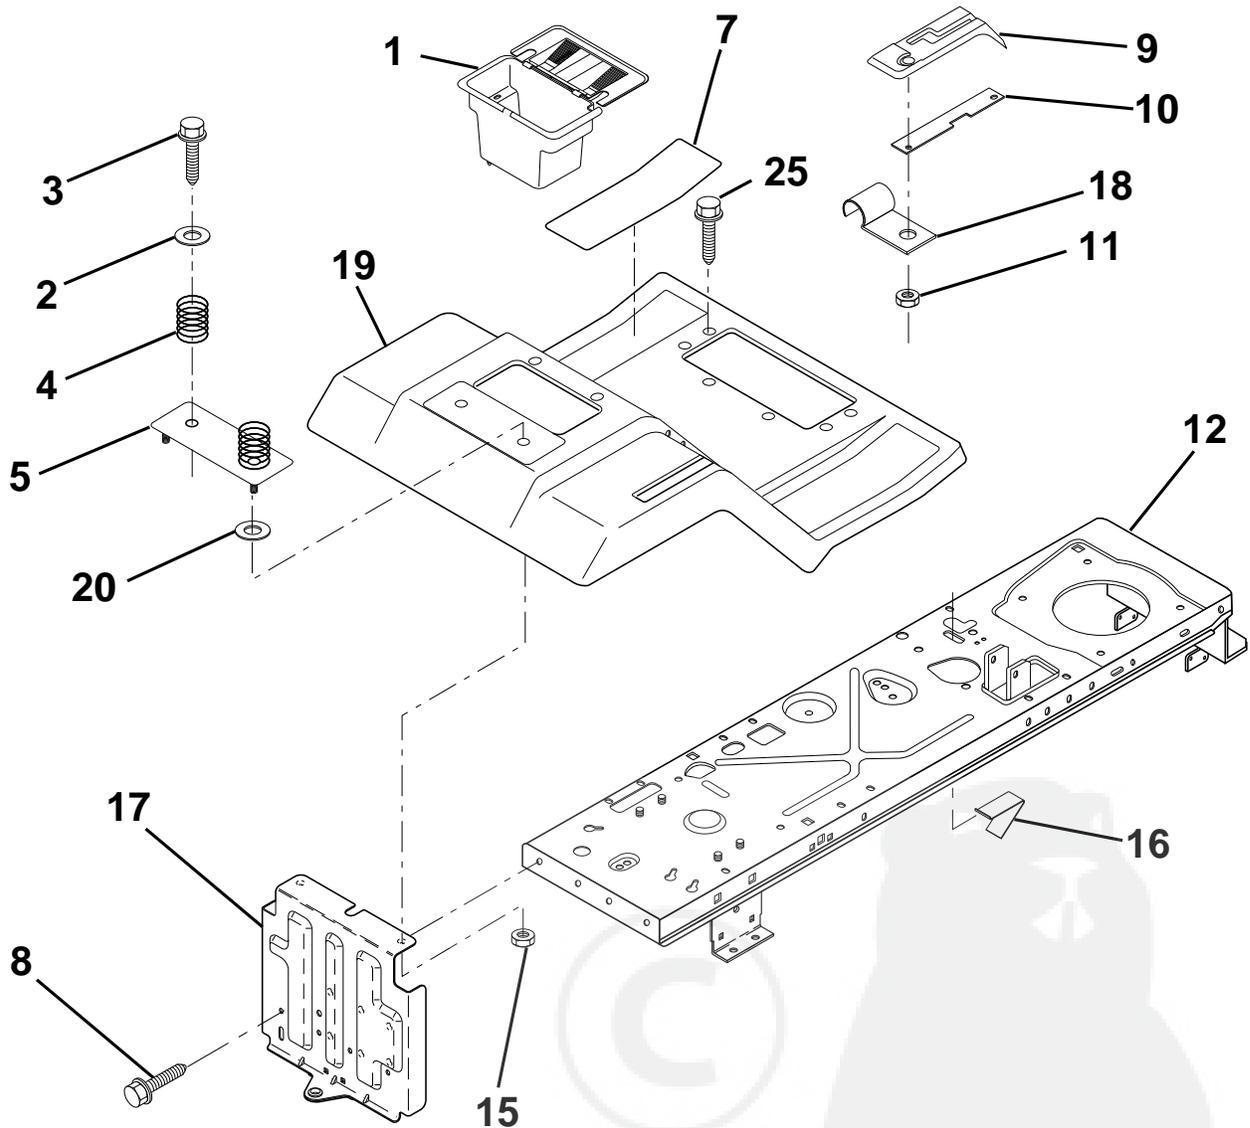

| KEY NO. | PART NO. | DESCRIPTION |
|---------|------------|--|
| 1 | 156417 | Case, Battery |
| 2 | 19132012 | Washer 13/32 x 1-1/4 x 12 Gauge |
| 3 | 17490612 | Screw, Hex Washer Head, Thd. Roll. 3/8-16 x 3/4 |
| 4 | 124181X | Spring, Compression, Seat |
| 5 | 127115X550 | Plate, Battery |
| 7 | 124144X | Pad, Footrest |
| 8 | 17490512 | Screw, Hex Washer Head, Thd. Roll. 5/16-18 x 3/4 |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|------------|------------------------------|
| 12 | 145190 | Chassis, Assembly, Weldment |
| 15 | 73640400 | Nut, Hex, Keps 1/4-20 |
| 16 | 141736 | Switch, Actuator |
| 17 | 140782 | Drawbar |
| 18 | 126470X | Clip, Insulated |
| 19 | 140955X550 | Fender/Footrest |
| 20 | 19091413 | Washer 9/32 x 7/8 x 13 Gauge |
| 25 | 17060514 | Screw Tapping |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

SEAT

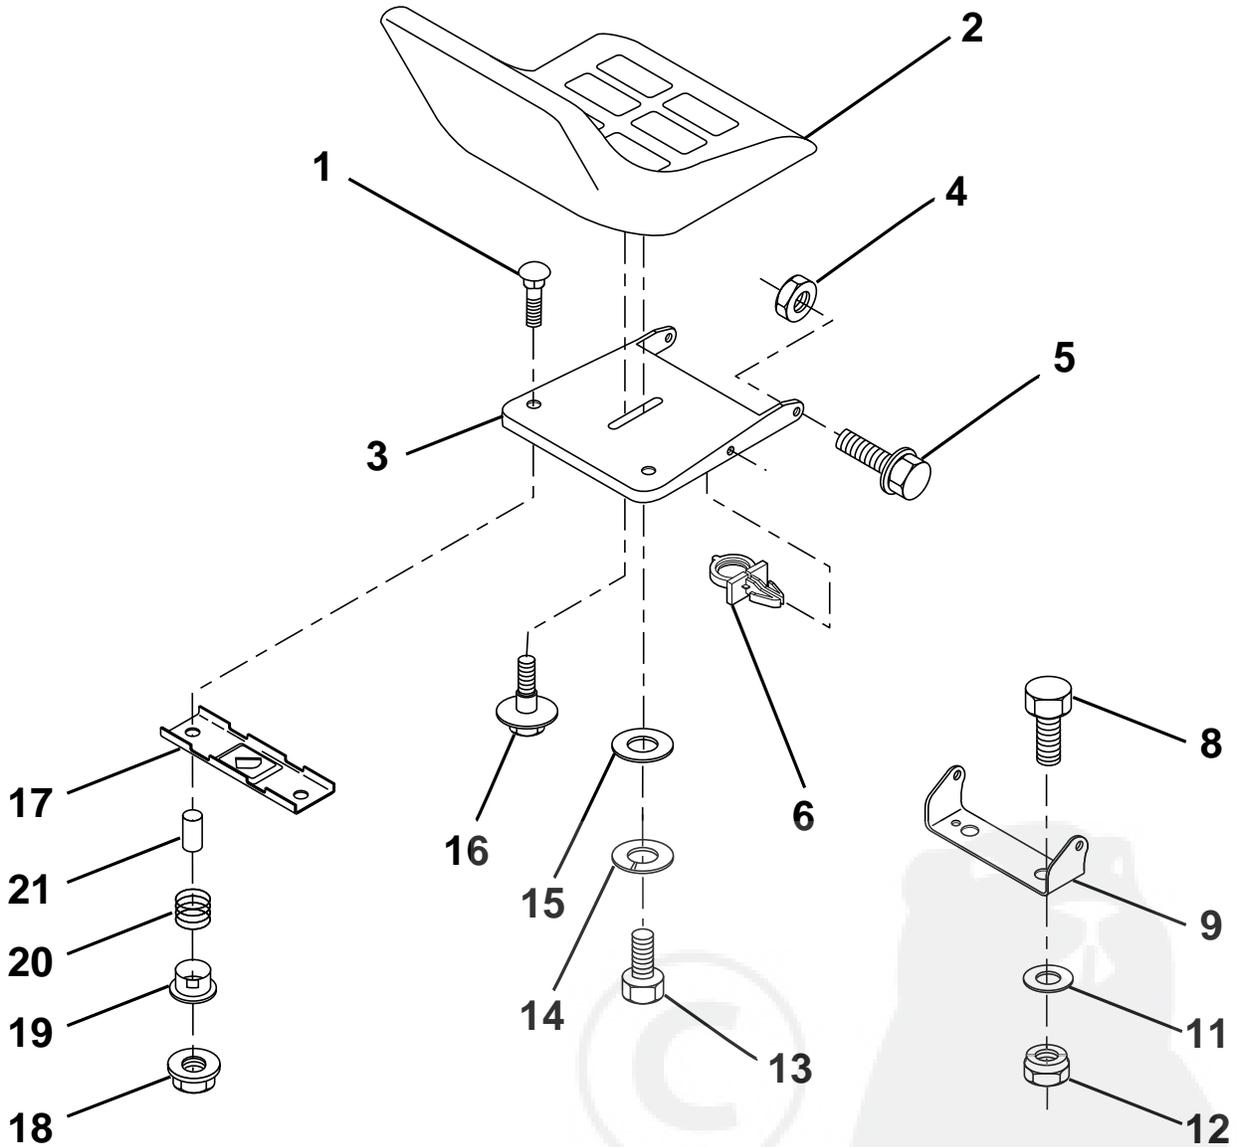

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---------------------------------|
| 1 | 72050412 | Bolt, Carriage 1/4-20 x 1-1/2 |
| 2 | 127426X | Seat |
| 3 | 155925 | Pan, Seat |
| 4 | 73800500 | Nut, Lock Hex W/Ins. 5/16-18 |
| 5 | 153236 | Bolt, Shld. 5/16-18 |
| 6 | 145006 | Clip, Push-In |
| 8 | 74760616 | Bolt, Hex, Fin 3/8-16 UNC x 3/4 |
| 9 | 140551 | Bracket, Pivot, Seat |
| 11 | 19133210 | Washer 13/32 x 2 x 10 Gauge |
| 12 | 73800600 | Nut, Lock Hex W/Wsh 3/8-16 |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|------------------------------------|
| 13 | 74780814 | Bolt, Fin Hex 1/2 - 13 x 7/8 Gr. 5 |
| 14 | 10040800 | Washer Lock Hvy HLCL Spr. 1/2 |
| 15 | 19171912 | Washer 17/32 x 13/16 x 12 Gauge |
| 16 | 127018X | Bolt, Shoulder |
| 17 | 121246X | Bracket, Switch, Mounting |
| 18 | 123976X | Locknut, Hex, Large, Flange |
| 19 | 121248X | Bushing, Snap |
| 20 | 121250X | Spring, Compression |
| 21 | 134300 | Spacer, Split, Large .28 Id. x .96 |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

DASH

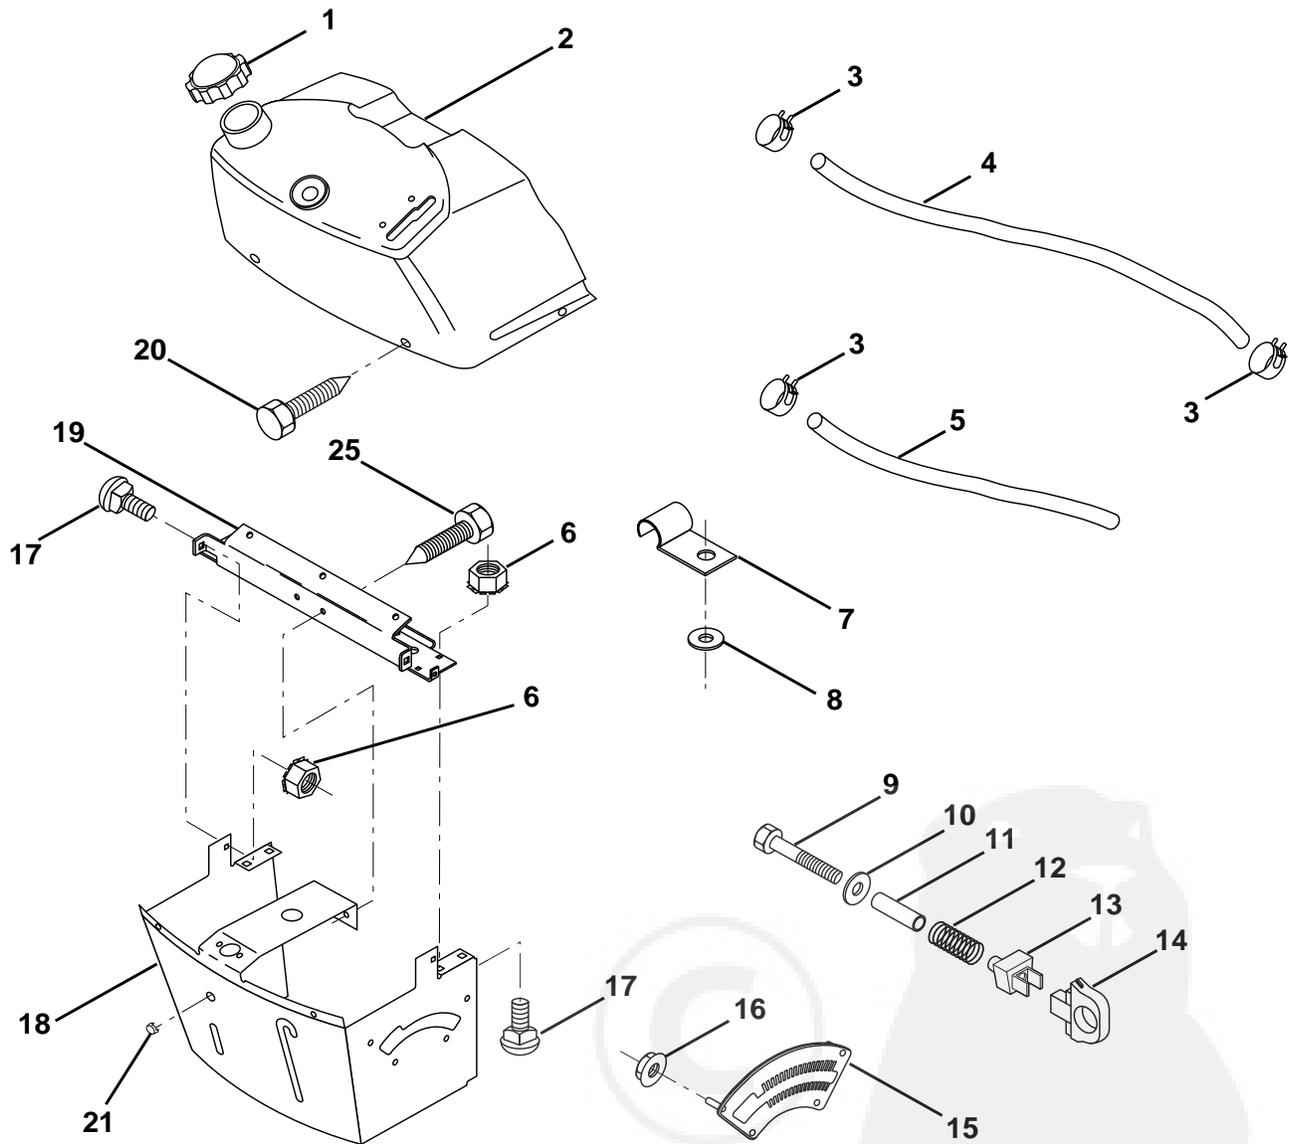

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---------------------------------|
| 1 | 141523 | Cap, Fuel |
| 2 | 138392 | Assembly, Dash & Fuel Tank |
| 3 | 123487X | Clamp, Hose |
| 4 | 8544R | Line, Fuel |
| 5 | 8548R | Line, Fuel |
| 6 | 73640400 | Nut, Hex, Keps 1/4-20 |
| 7 | 2751R | Clip, Fuel Line |
| 8 | 19091216 | Washer 9/32 x 3/4 x 16 Gauge |
| 9 | 74760428 | Bolt, Hex, Fin. 1/4-20 x 1-3/4 |
| 10 | 19091413 | Washer 11/32 x 11/16 x 16 Gauge |
| 11 | 121249X | Spacer, Split |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-------------------------------------|
| 12 | 3720R | Spring |
| 13 | 126450X | Clip, Height Adjustment |
| 14 | 126115X | Knob, Height Stop |
| 15 | 122023X | Adjustment, Quadrant Height |
| 16 | 124346X | Nut, Self-Threading 3/16-18 |
| 17 | 72110404 | Bolt, Carriage 1/4-20 x 1/2 Grade 5 |
| 18 | 130745 | Support Assembly, Dash |
| 19 | 134744 | Brace, Cross |
| 20 | 17060408 | Screw, Tap 1/4-20 x 1/2 |
| 21 | 134014 | Plug, Dome |
| 25 | 17720410 | Screw Hex Thd Cut 1/4-20 x 5/8 |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

STEERING WHEEL

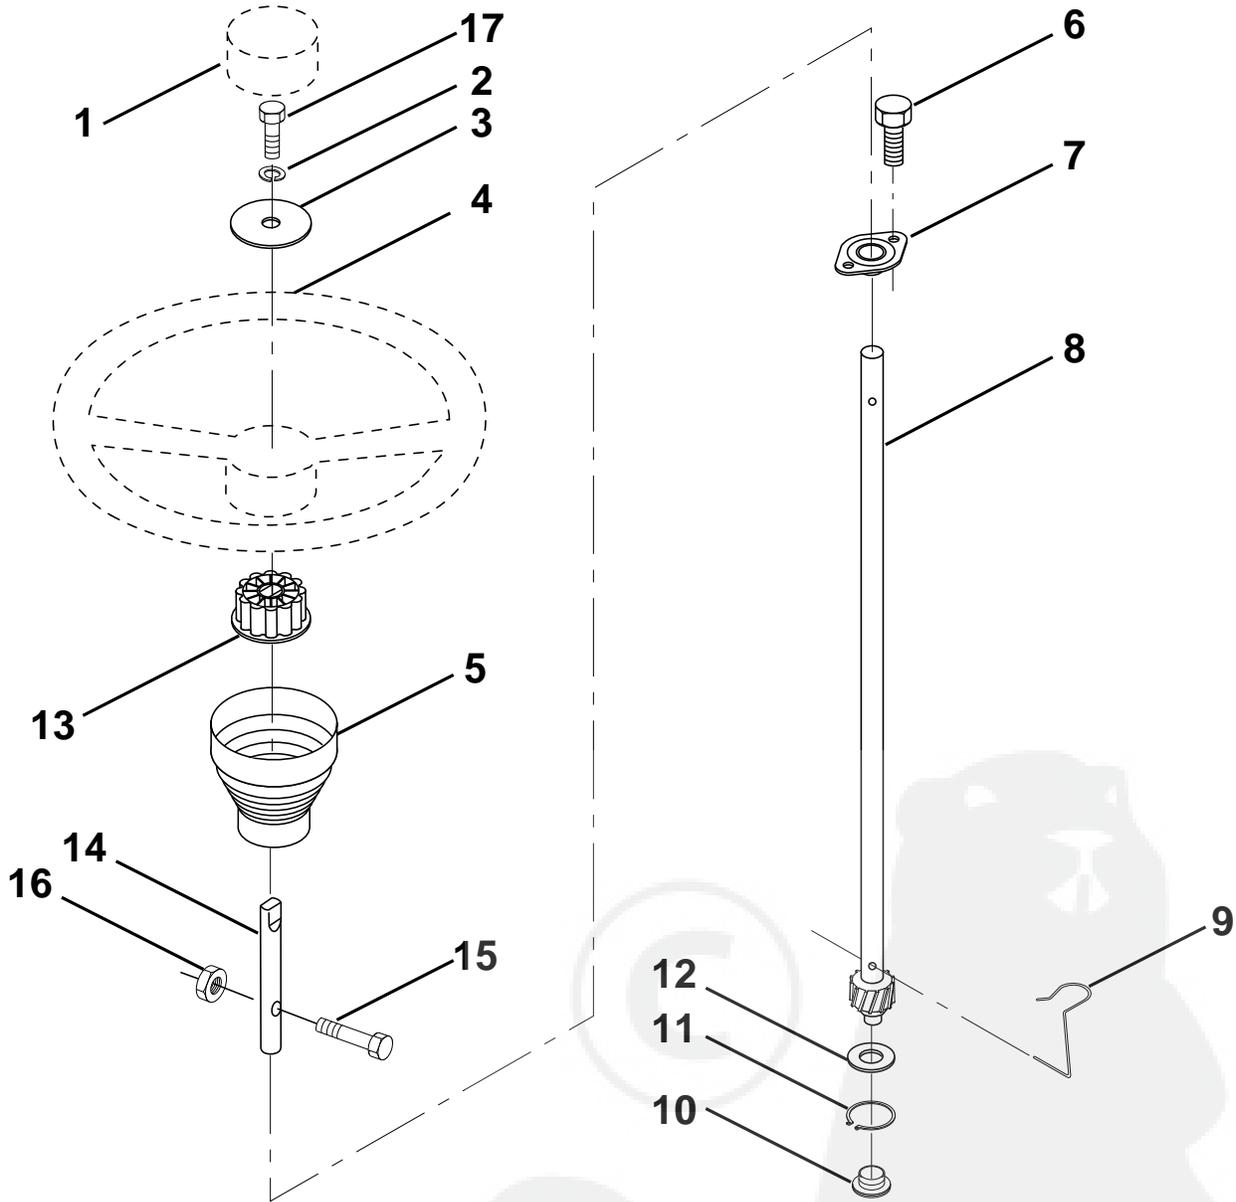

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|--------------------------------|
| 1 | 133742 | Insert, Steering Wheel |
| 2 | 10040600 | Washer, Lock Hvy. Hlcl Spr 3/8 |
| 3 | 19133808 | Washer 13/32 x 2-3/8 x 8 Ga. |
| 4 | 133741 | Wheel, Steering |
| 5 | 121897X | Sleeve, Steering |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|------------------------------------|
| 6 | 152927 | Screw, TT #10-32 5 3/8 Flange |
| 7 | 155104 | Bushing, Steering |
| 8 | 147391 | Shaft, Steering |
| 9 | 124210X | Clip, Steering |
| 10 | 123438X | Bushing, Lower, Steering |
| 11 | 12000045 | Ring, Retaining |
| 12 | 19211616 | Washer 21/32 x 1 x 16 Ga. |
| 13 | 100711L | Adaptor, Steering Wheel |
| 14 | 153720 | Extension Shaft Steering |
| 15 | 74780520 | Bolt Fin Hex 5/16-18 UNC x 1-1/4 |
| 16 | 73800500 | Nut Lock Hx W/Insert 5/16-18 UNC |
| 17 | 74780616 | Bolt, Fin Hex 3/8-16 Unc x 1 Gr. 5 |


NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

SECTOR GEAR / AXLE SUPPORT

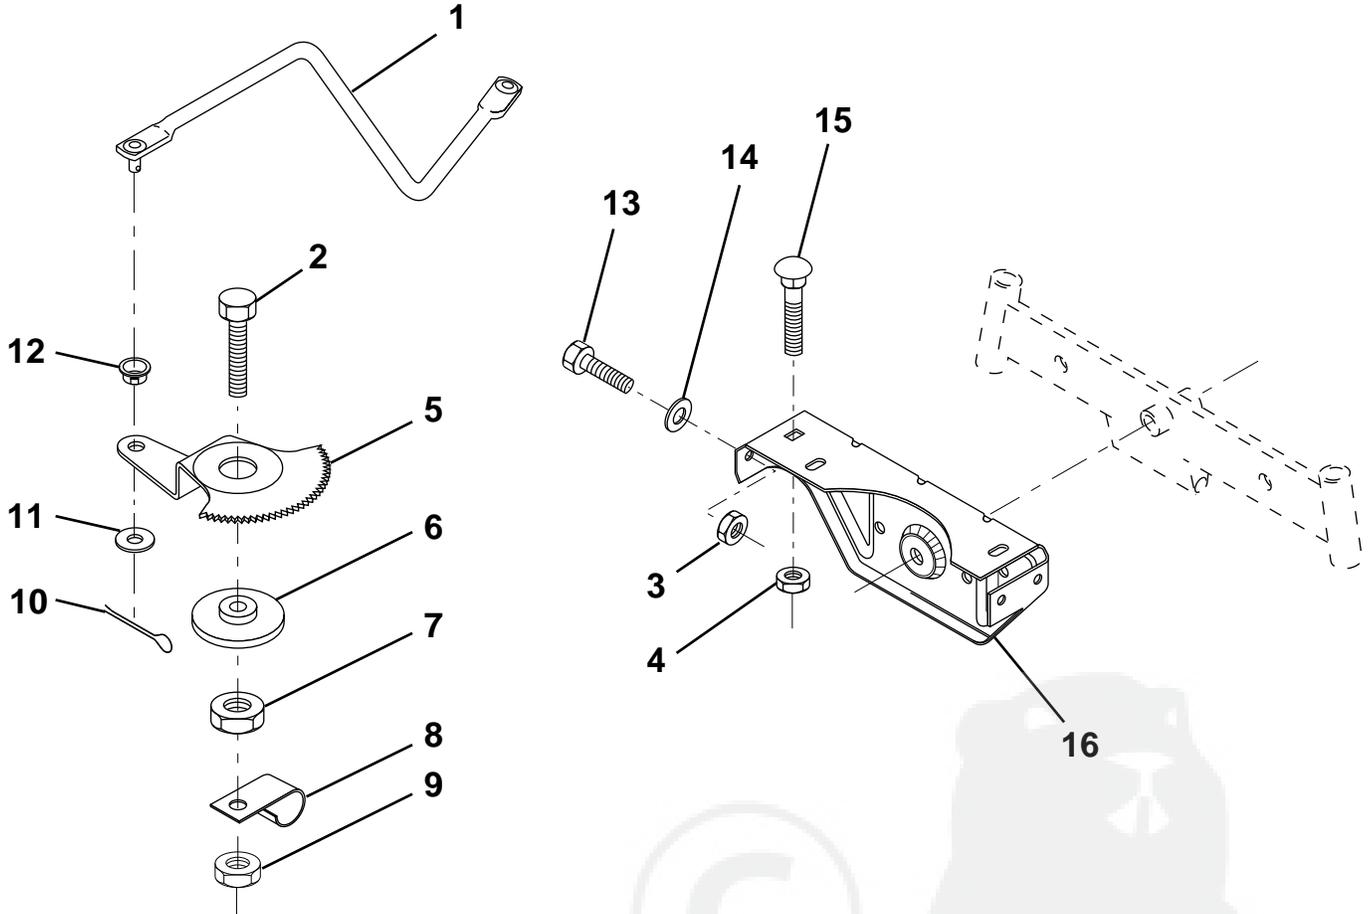

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|--------------------------------------|
| 1 | 132566 | Link, Drag |
| 2 | 74780828 | Bolt, Hex, Fin 1/2-13 x 1-3/4 |
| 3 | 73680500 | Nut, Crownlock 5/16-18 |
| 4 | 73680600 | Nut, Crownlock 3/8-16 UNC |
| 5 | 121926X | Gear, Sector |
| 6 | 121927X | Bushing |
| 7 | 73030800 | Nut, Heavy, Hex, Top Lock 1/2-13 UNC |
| 8 | 126472X | Clip, Wire |
| 9 | 73680800 | Nut, Crownlock 1/2-13 |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---------------------------------|
| 10 | 76020412 | Pin, Cotter 1/8 x 3/4 |
| 11 | 19131316 | Washer 13/32 x 13/16 x 16 Ga. |
| 12 | 126847X | Bushing |
| 13 | 74760512 | Bolt, Hex 5/16-18 x 3/4 |
| 14 | 19111416 | Washer 11/32 x 7/8 x 16 Ga. |
| 15 | 72110606 | Bolt, Carriage 3/8-16 UNC x 3/4 |
| 16 | 137096 | Support, Front Axle |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

FRONT AXLE

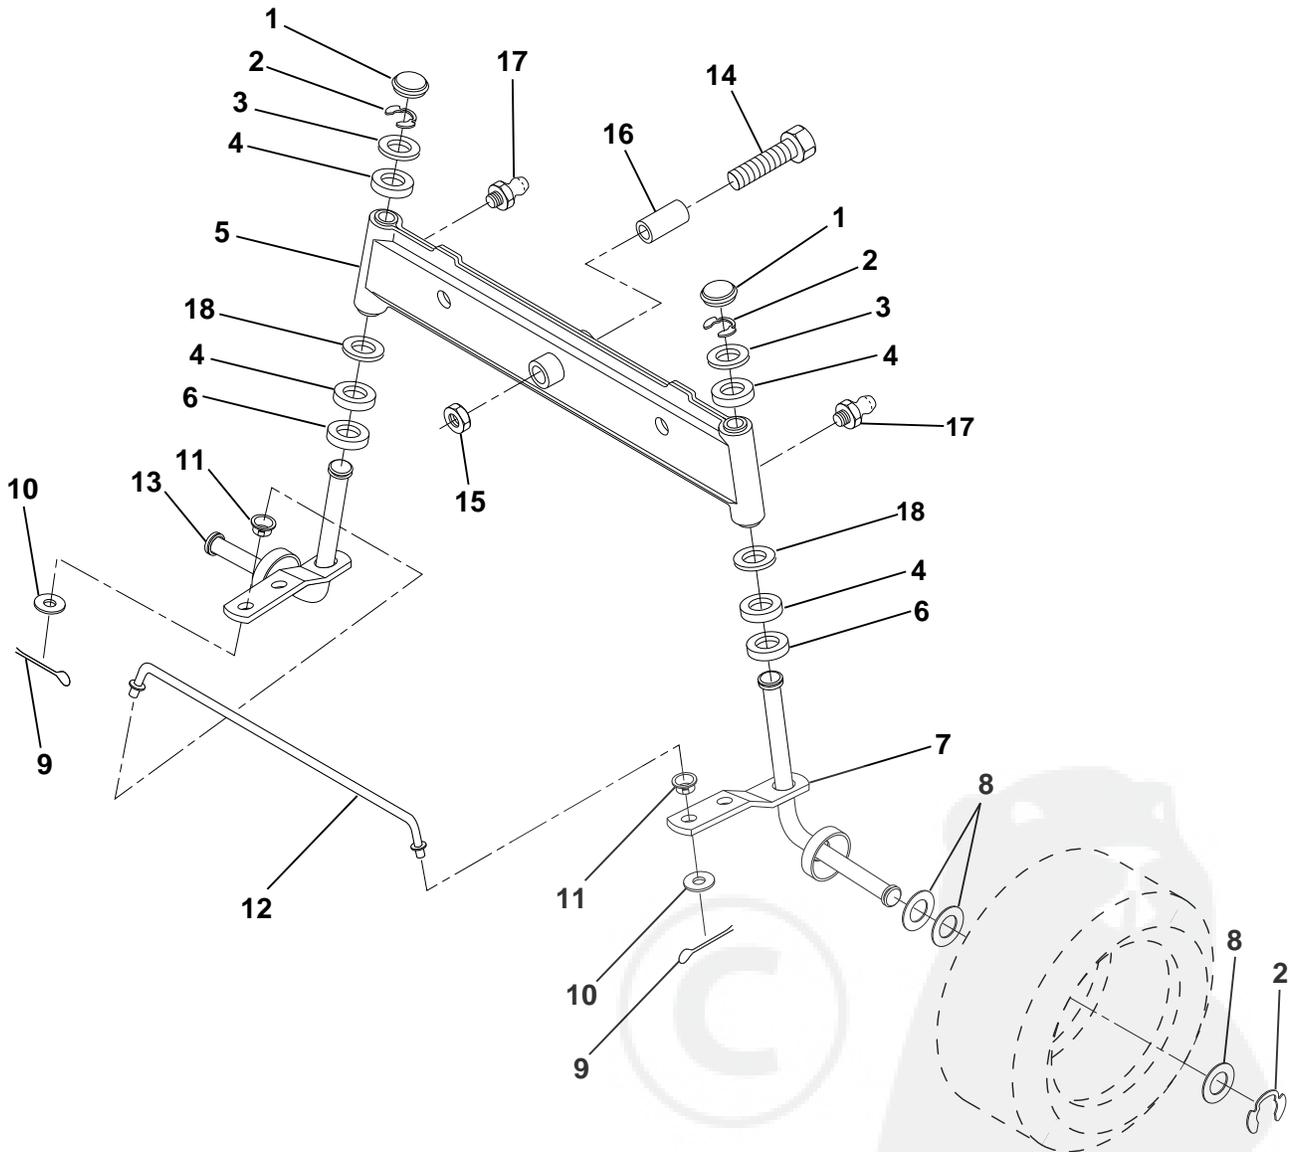

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---------------------------------|
| 1 | 121232X | Cap, Spindle |
| 2 | 12000029 | Ring, Klip |
| 3 | 121748X | Washer 25/32 x 1-5/8 x 16 Gauge |
| 4 | 3366R | Bearing |
| 5 | 142033 | Axle, Front |
| 6 | 6266H | Bearing, Thrust |
| 7 | 161826 | Spindle Assembly, R.H. |
| 8 | 121749X | Washer 25/32 x 1-1/4 x 16 Gauge |
| 9 | 76020412 | Pin, Cotter 1/8 x 3/4 |
| 10 | 19131316 | Washer 13/32 x 13/16 x 16 Gauge |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-------------------------------|
| 11 | 126847X | Bushing |
| 12 | 130465 | Rod, Tie |
| 13 | 161827 | Spindle Assembly, L.H. |
| 14 | 74011056 | Bolt, Hex 5/8-11 x 3-1/2 |
| 15 | 73901000 | Nut, Lock Flange 5/8-11 |
| 16 | 110438X | Spacer |
| 17 | 6855M | Fitting, Grease |
| 18 | 19272016 | Washer 27/32 x 1-1/4 x 16 Ga. |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

BRAKE / REAR MOWER LIFT ASSEMBLY

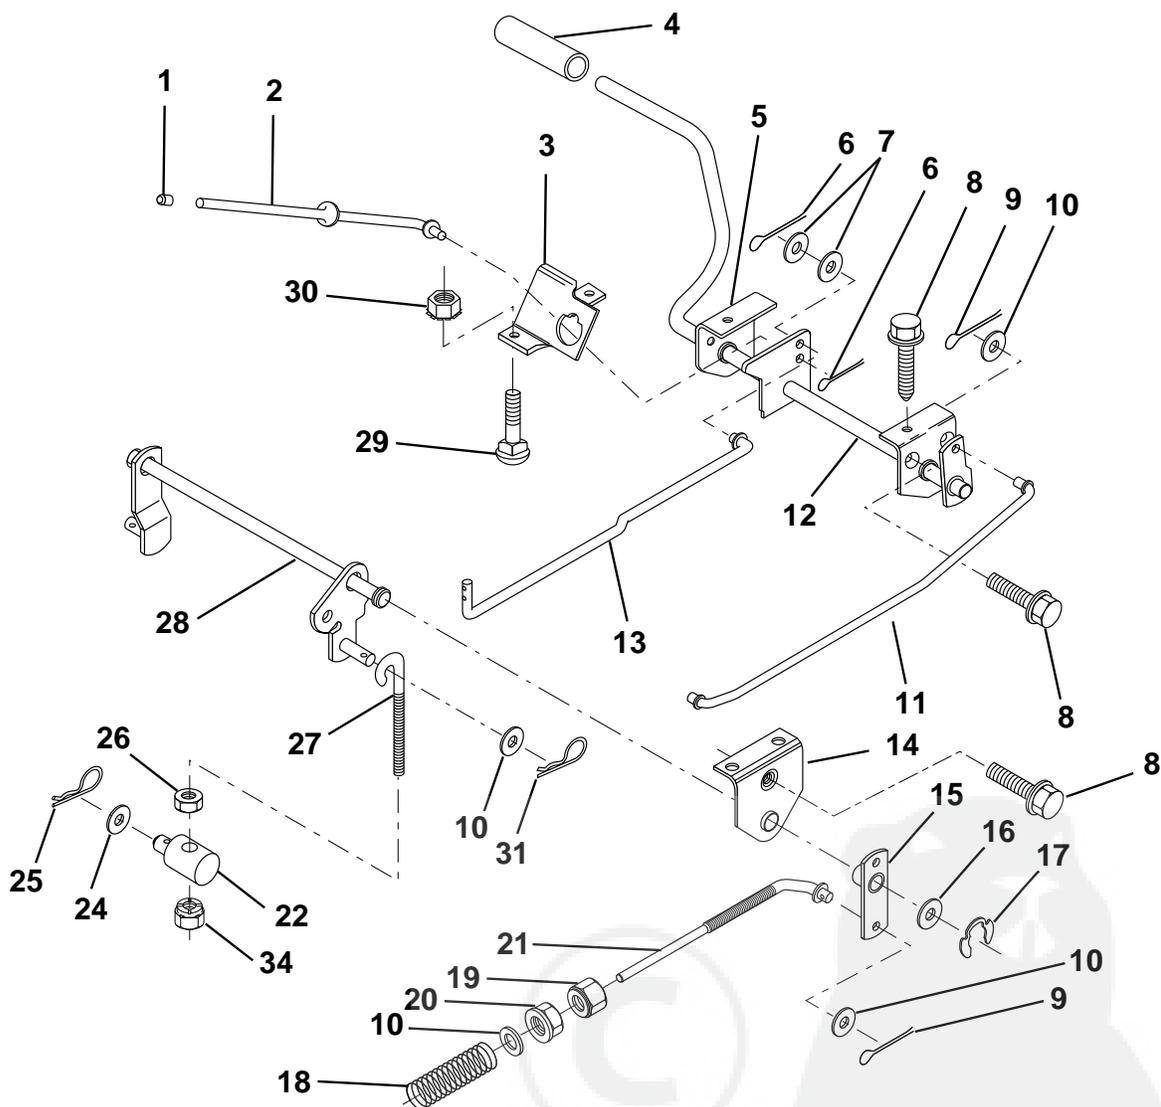

| KEY NO. | PART NO. |
|---------|----------|
| 1 | 71673 |
| 2 | 123436X |
| 3 | 123437X |
| 4 | 8156H |
| 5 | 122504X |
| 6 | 76020312 |
| 7 | 19131016 |
| 8 | 17490508 |
| 9 | 76020412 |
| 10 | 19131316 |
| 11 | 123543X |
| 12 | 139933 |
| 13 | 123394X |
| 14 | 121978X |
| 15 | 133332 |
| 16 | 19251816 |
| 17 | 12000034 |

DESCRIPTION

| | |
|----|--------------------------------------|
| 1 | Cap, Parking Brake |
| 2 | Rod, Parking Brake |
| 3 | Bracket, Parking Brake |
| 4 | Cover, Pedal |
| 5 | Bracket, Pedal, Clutch LH |
| 6 | Pin, Cotter 3/32 x 3/4 |
| 7 | Washer 13/32 x 5/8 x 16 Gauge |
| 8 | Screw, Hex, Thd. Roll. 5/16-18 x 1/2 |
| 9 | Pin, Cotter 1/8 x 3/4 |
| 10 | Washer 13/32 x 13/16 x 16 Gauge |
| 11 | Rod, Front Brake |
| 12 | Assembly, Clutch/Brake Pedal |
| 13 | Rod, Clutch |
| 14 | Bracket, Lift, Shaft |
| 15 | Assembly, Brake, Pivot, Arm |
| 16 | Washer 25/32 x 1-1/8 x 16 Gauge |
| 17 | Ring, Klip |

| KEY NO. | PART NO. |
|---------|----------|
| 18 | 151332 |
| 19 | 73350600 |
| 20 | 73800600 |
| 21 | 131460 |
| 22 | 144585 |
| 24 | 19132012 |
| 25 | 4921H |
| 26 | 73930600 |
| 27 | 127369 |
| 28 | 140776 |
| 29 | 72110506 |
| 30 | 73510500 |
| 31 | 3146R |
| 34 | 73680600 |

DESCRIPTION

| | |
|----|----------------------------------|
| 18 | Spring, Brake Rod |
| 19 | Nut, Hex Jam 3/8-16 UNC |
| 20 | Nut Lock Hex W/Insert 3/8-16 UNC |
| 21 | Rod, Rear Brake |
| 22 | Trunnion, Lift |
| 24 | Washer 13/32 x 1-1/4 x 12 Gauge |
| 25 | Spring, Retainer |
| 26 | Nut, Centerlock 3/8-16 UNC |
| 27 | Link, Threaded |
| 28 | Assembly, Rear Mower Lift |
| 29 | Bolt, Carriage 5/16-18 UNC x 3/4 |
| 30 | Nut, Keps 5/16-18 UNC |
| 31 | Retainer, Spring |
| 34 | Nut, Crownlock 3/8-16 |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

ENGINE / THROTTLE

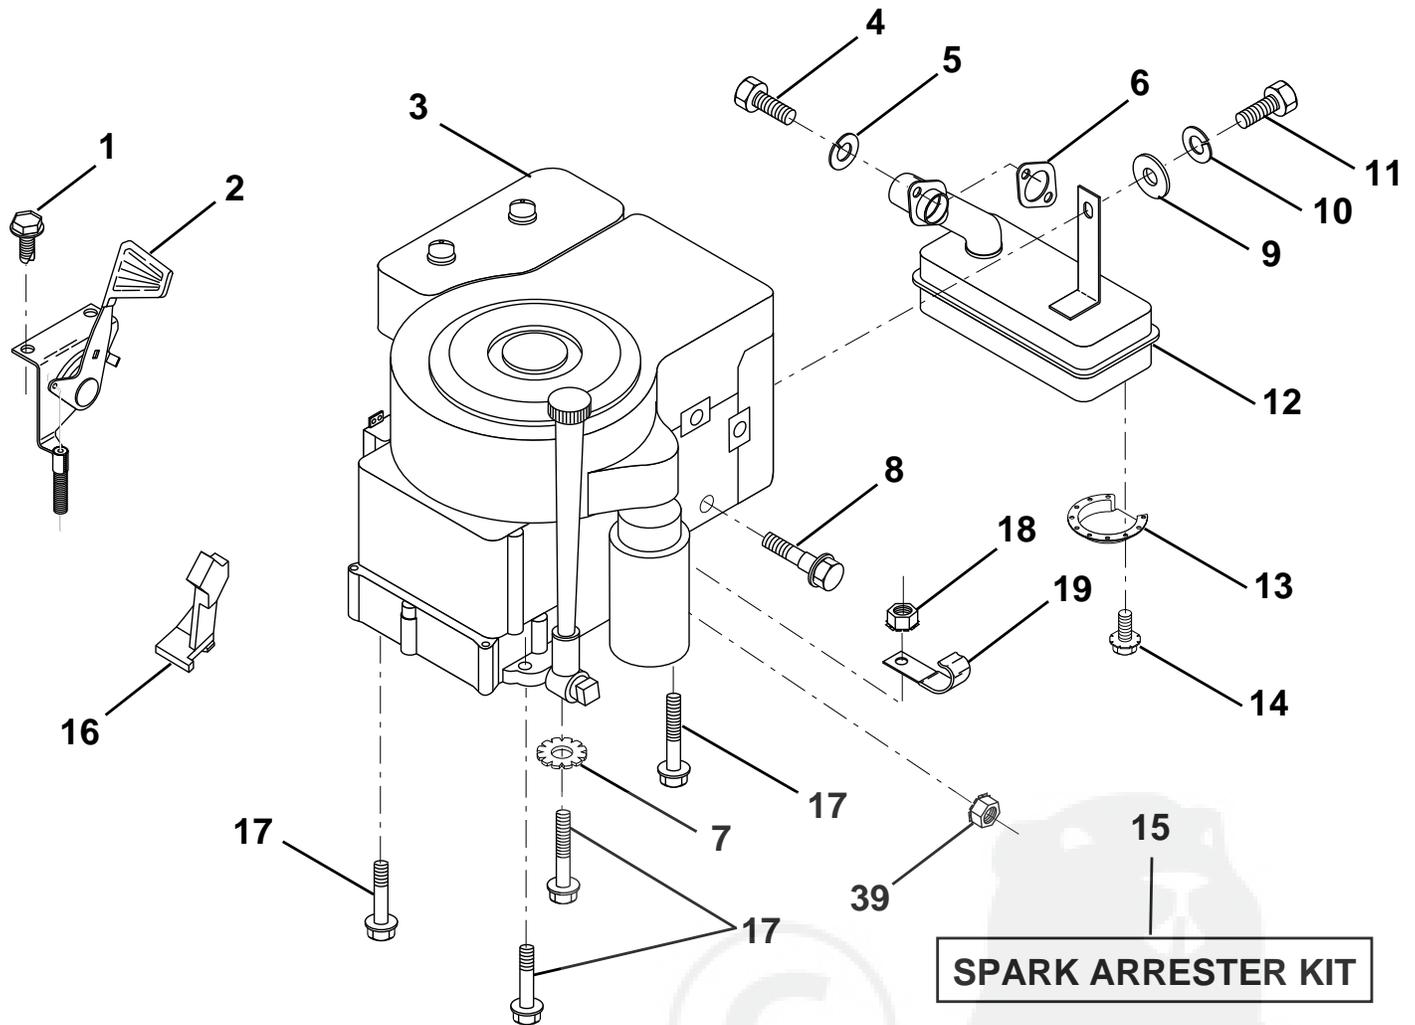

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---|
| 1 | 17720410 | Screw Hex Thd Cut |
| 2 | 133025 | Control, Throttle |
| 3 | ----- | Engine, B&S, Model #289707 |
| 4 | 71070512 | Screw, Hex Hd |
| 5 | 10040500 | Washer, Lock, Heavy Helical Spring 5/16 |
| 6 | 165291 | Gasket, Exhaust |
| 7 | 11050600 | Washer Lock Ext Tooth 3/8 |
| 8 | 121094X | Bolt, Shoulder 5/16 UNC |
| 9 | 19101216 | Washer 5/16 x 3/4 x 16 Gauge |
| 10 | 10040400 | Washer, Lock, Hvy Hlcl Spring 1/4 |
| 11 | ----- | Bolt, Order from Engine Mfg. |
| 12 | 137437 | Muffler |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---|
| 13 | 101326L | Deflector, Muffler |
| 14 | 17030808 | Screw, Spiderlock |
| 15 | 137180 | Kit, Spark Arrester (Optional) |
| 16 | 127951 | Stop, Choke |
| 17 | 17490624 | Screw, Hex Washer Head, Thd. Roll. 3/8-16 x 1-1/2 |
| 18 | 73510600 | Nut Keps Hex 3/8-16 |
| 19 | 2751R | Clip line fuel 13/32 |
| 39 | 128861 | Nut Flange 1/4-20 |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

GROUND DRIVE

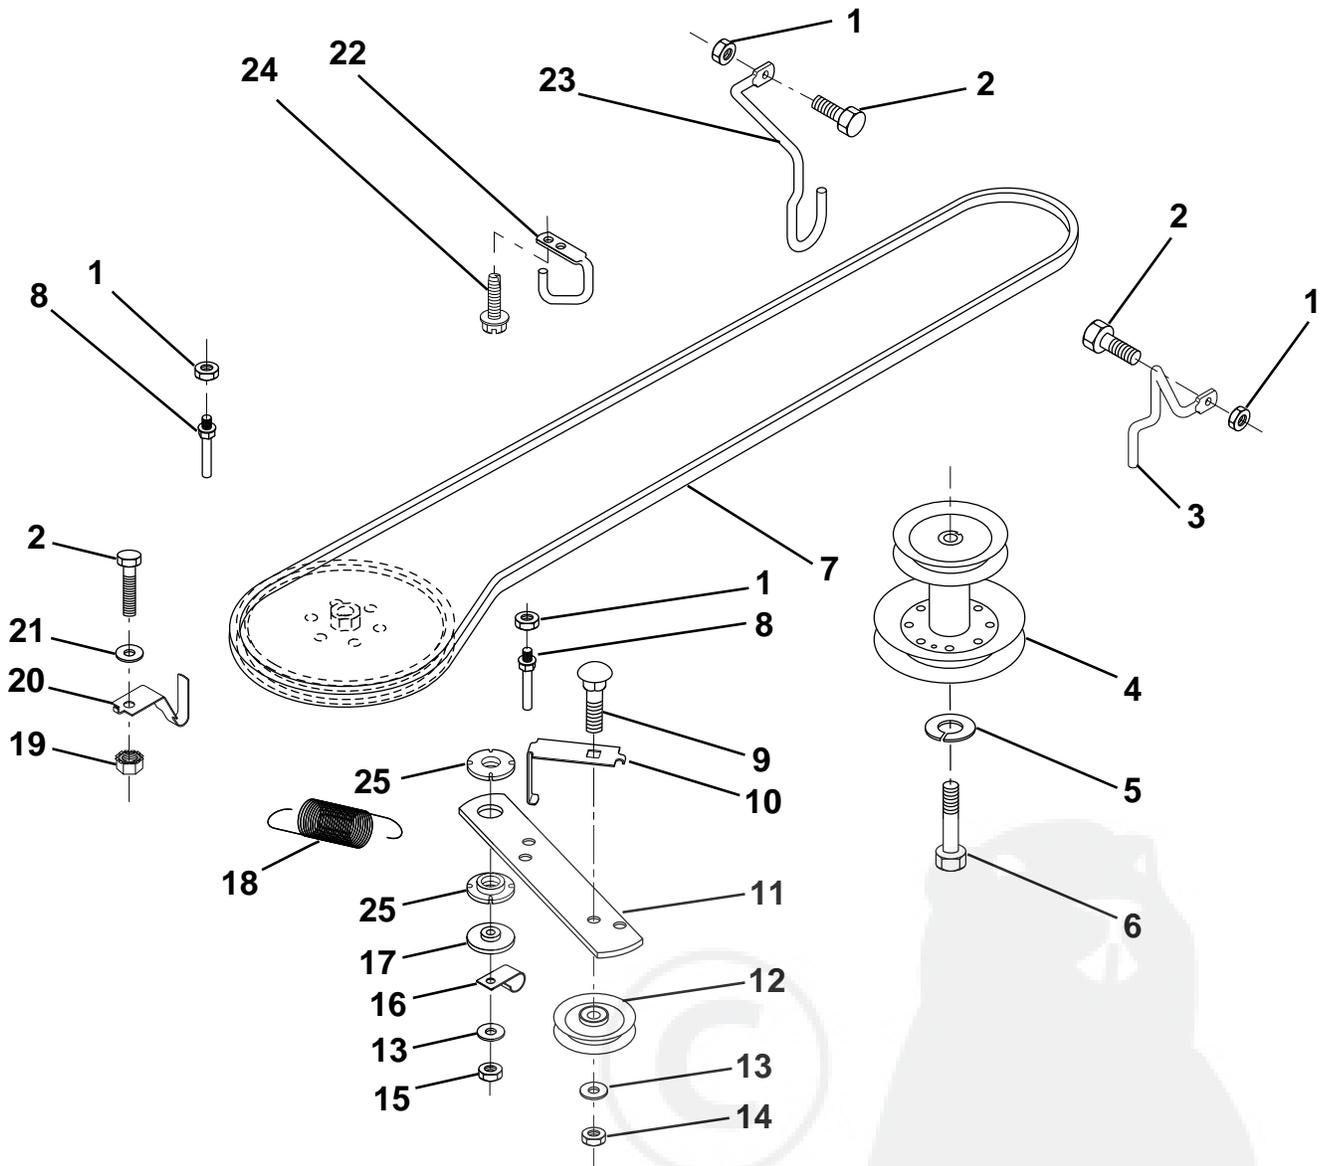

| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---|---------|----------|----------------------------------|
| 1 | 73680500 | Nut, Lock Hex W/Ins 5/16-18 | 14 | 73930600 | Nut, Centerlock 3/8-16 UNC |
| 2 | 74760512 | Bolt, Hex 5/16-18 UNC x 3/4 | 15 | 73680600 | Nut, Crownlock 3/8-16 |
| 3 | 141342 | Keeper, Mower Drive Belt, Engine, R.H. | 16 | 126471X | Clip, Insulated |
| 4 | 138029 | Pulley, Engine | 17 | 150932 | Spacer, Retainer |
| 5 | 10040700 | Washer, Lock, Heavy Helical Spring 7/16 | 18 | 131459 | Spring, Extension |
| 6 | 71170744 | Bolt, Hex, 7/16-20 x 2-3/4 Grade 5 | 19 | 73510500 | Nut, Keps 5/16-18 UNC |
| 7 | 126520X | Traction, V-Belt Drive | 20 | 139919 | Keeper, T/A Ground Drive Belt |
| 8 | 123405X | Keeper, T/A Ground Drive Belt | 21 | 19111016 | Washer 11/32 x 5/8 x 16 Gauge |
| 9 | 72140612 | Bolt, Carriage 3/8-16 UNC x 1-1/2 | 22 | 123404X | Keeper, Ground Drive Belt, Frame |
| 10 | 123396X | Keeper, Ground Drive Belt, Idler | 23 | 140916 | Keeper, Mower Drive Belt, L.H. |
| 11 | 150926 | Arm, Ground Drive Clutch | 24 | 17720408 | Screw, Thdcut 1/4-20 x 1/2 |
| 12 | 123674X | Idler, Flat | 25 | 150935 | Bushing |
| 13 | 19131316 | Washer 13/32 x 13/16 x 16 Gauge | | | |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

TRANSAXLE

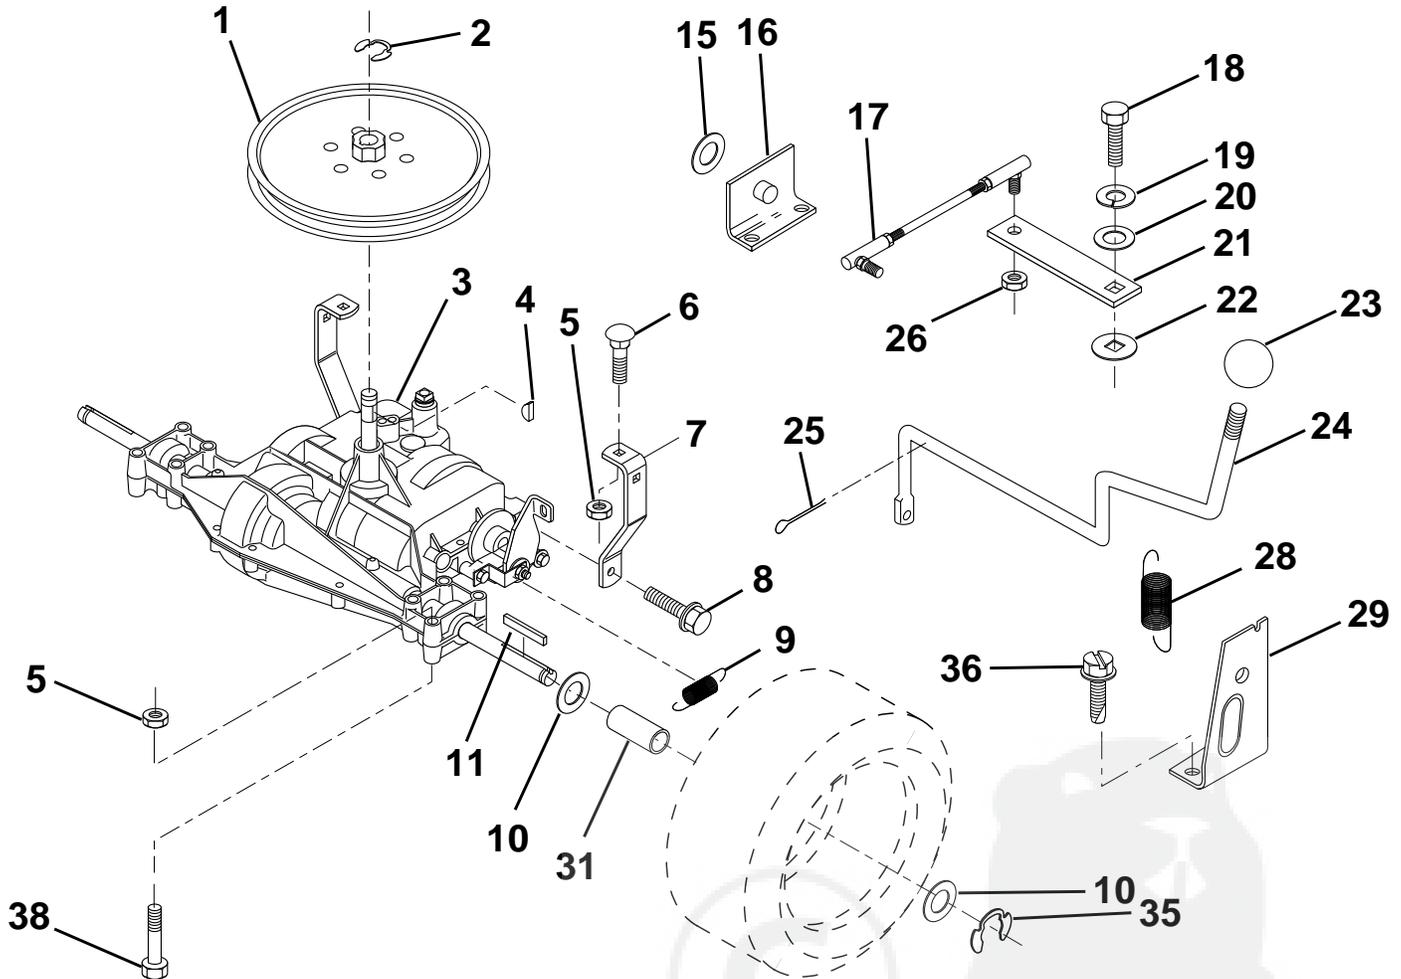

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|--------------------------------------|
| 1 | 123385X | Pulley |
| 2 | 12000028 | Ring, Retainer |
| 3 | ----- | Transaxle, Peerless Model # 205-507B |
| 4 | 2228M | Key, Woodruff #9 |
| 5 | 73680500 | Nut, Crownlock 5/16-18 |
| 6 | 72140506 | Bolt, Carriage 5/16-18 UNC x 3/4 |
| 7 | 123378X | Strap, Torque |
| 8 | 17490512 | Screw 5/16-18 x 3/4 |
| 9 | 146682 | Spring, Brake |
| 10 | 121749X | Washer 25/32 x 1-1/4 x 16 Ga. |
| 11 | 123583X | Key, Square |
| 15 | 19171616 | Washer 17/32 x 1 x 16 Ga. |
| 16 | 124600 | Support, Handle Shift LH |
| 17 | 126293X | Link, Shift |
| 18 | 74550412 | Bolt, Fin Hex 1/4-28 UNF x 3/4 Gr. 8 |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|----------------------------|
| 19 | 10040400 | Washer, Lock 1/4 |
| 20 | 19091210 | Washer 9/32 x 3/4 x 10 Ga. |
| 21 | 126292X | Arm, Shift |
| 22 | 105701X | Washer, Shift Plate |
| 23 | 106933X | Knob |
| 24 | 128215 | Rod, Shift |
| 25 | 76020416 | Pin, Cotter 1/8 x 1 |
| 26 | 73810500 | Locknut 5/16-24 UNF |
| 28 | 128085 | Spring, Extension |
| 29 | 128084 | Support, Handle Shift RH |
| 31 | 137057 | Spacer, Axle |
| 35 | 12000001 | E-Ring |
| 36 | 17720408 | Screw, Thdcut 1/4-20 x 1/2 |
| 38 | 74490540 | Bolt, Hex, Flngd 5/16-18 |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

MOWER LIFT LEVER

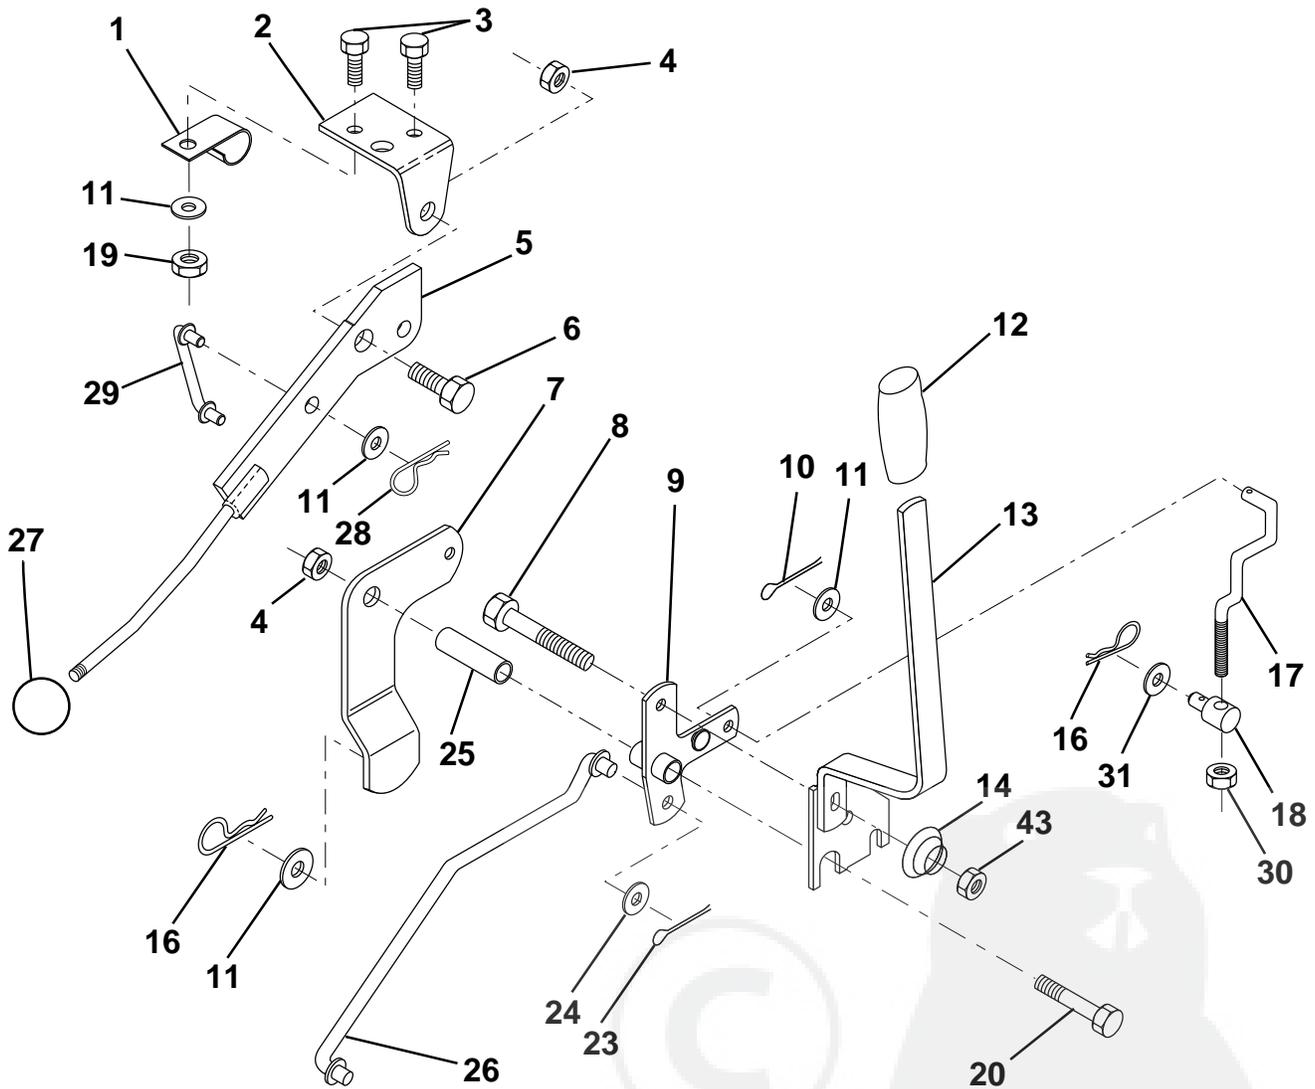

| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|---|---------|----------|------------------------------------|
| 1 | 126470X | Clip, Insulated | 18 | 142028 | Trunnion, Threaded 3/8-16 |
| 2 | 122018X | Bracket, Mower Clutch | 19 | 73640400 | Nut, Keps 1/4-20 |
| 3 | 71110408 | Bolt, Hex, Fin 1/4-20 UNC x 1/2 Grade 5 | 20 | 74760644 | Bolt, Hex, Fin. 3/8-16 UNC x 2-3/4 |
| 4 | 73680600 | Nut, Crownlock 3/8-16 | 23 | 76020416 | Pin, Cotter 1/8 x 1 |
| 5 | 145187 | Assembly, Clutch Lever | 24 | 19171612 | Washer 17/32 x 1 x 16 Gauge |
| 6 | 106451X | Bolt, Shoulder | 25 | 121933X | Tube, Spacer |
| 7 | 135371 | Assembly, Mower Clutch Arm | 26 | 141470 | Rod, Mower Lift |
| 8 | 74760636 | Bolt, Hex 3/8-16 UNC x 2-1/4 | 27 | 106932X | Knob, Rd |
| 9 | 121930X | Assembly, Bellcrank, Lift | 28 | 4497H | Retainer Spring |
| 10 | 76020412 | Pin, Cotter 1/8 x 3/4 | 28 | 76020312 | Pin, Cotter 3/32 x 3/4 |
| 11 | 19131316 | Washer 13/32 x 13/16 x 16 Gauge | 29 | 131655 | Link, Mower Clutch |
| 12 | 131861 | Sleeve, Handle | 30 | 73350600 | Nut, Hex Jam 3/8-16 |
| 13 | 139352 | Assembly, Lift Handle | 31 | 19132012 | Washer 13/32 x 1-1/4 x 12 Ga. |
| 14 | 123496X | Spring, Compression | 43 | 73900600 | Nut Lock Flg 3/8-16 |
| 15 | 19131212 | Washer 13/32 x 3/4 x 12 Gauge | | | |
| 16 | 4921H | Retainer, Spring | | | |
| 17 | 127359 | Link, Front Lift | | | |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR -- MODEL NUMBER AYF1236B

MOWER DECK

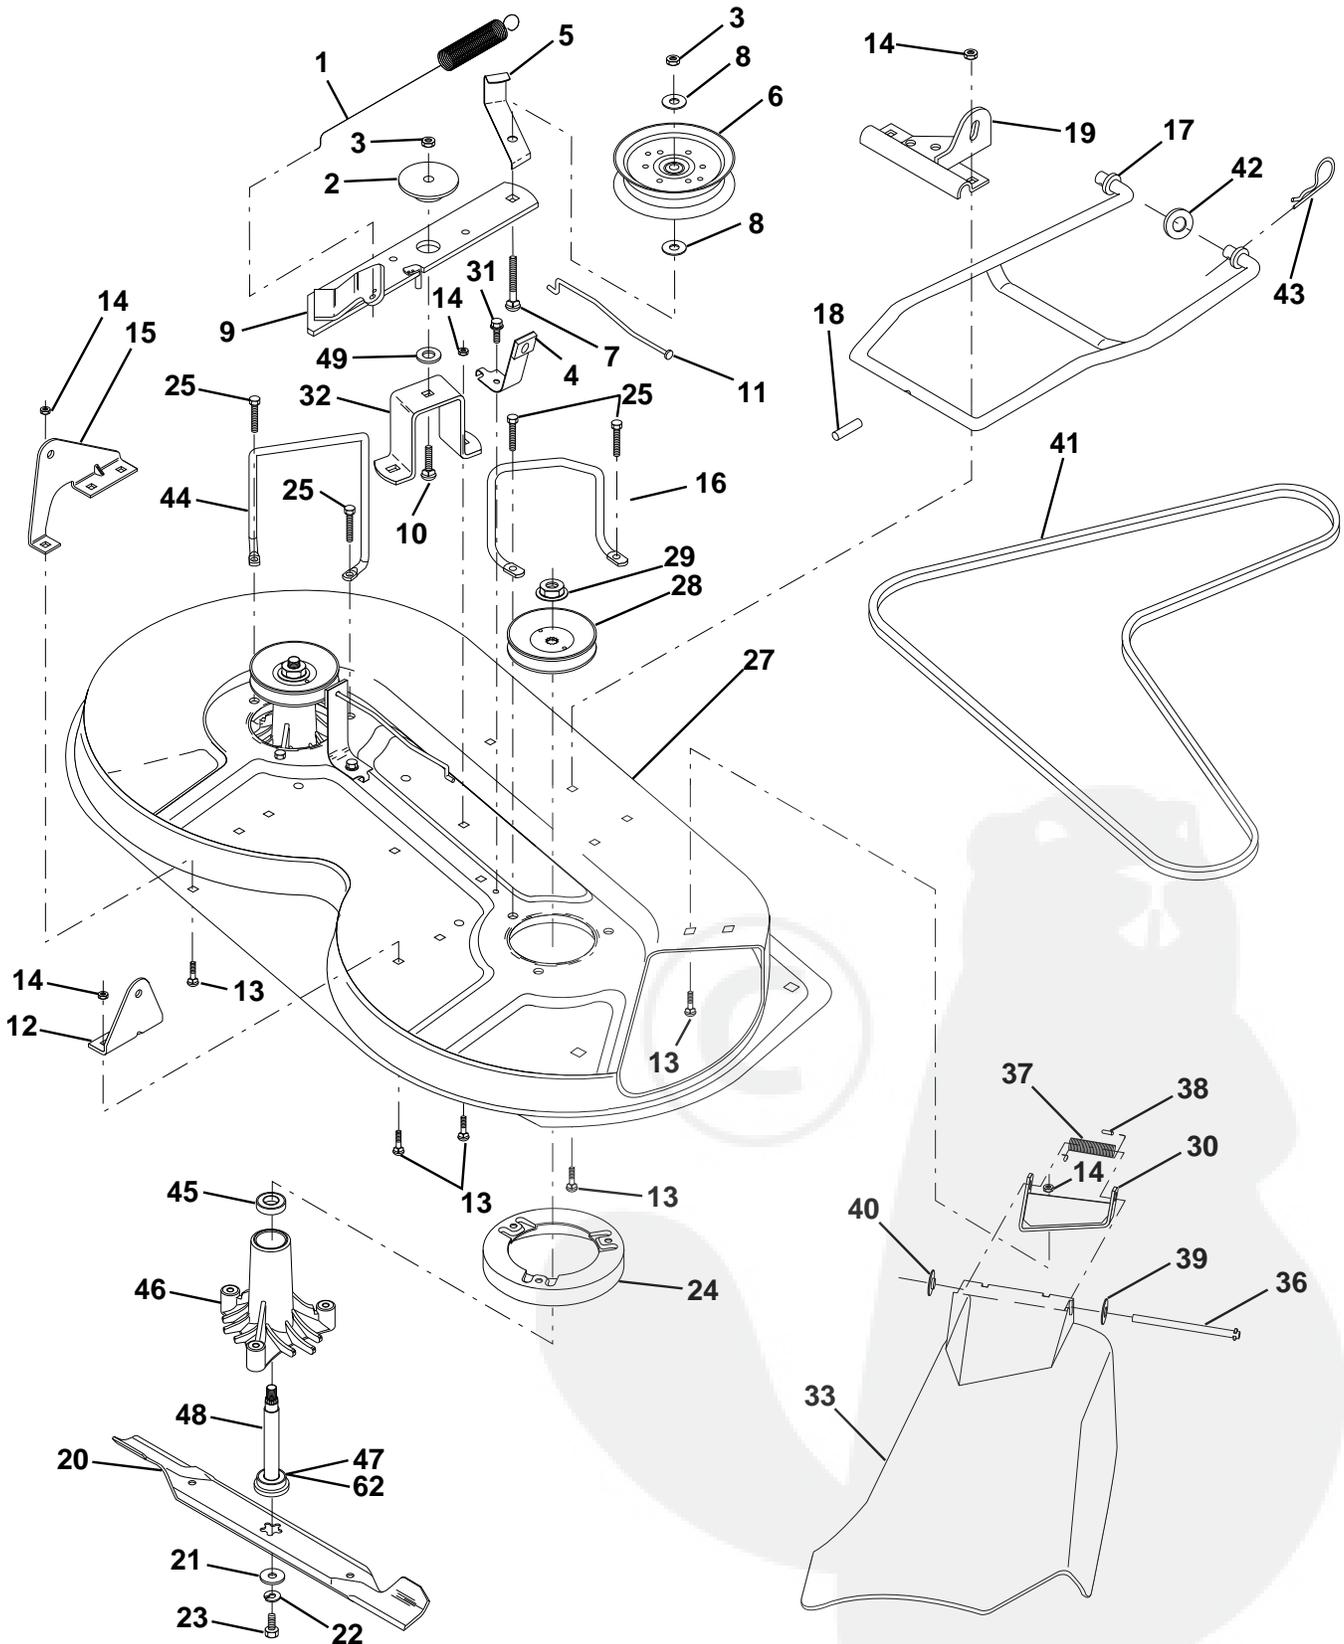

REPAIR PARTS

TRACTOR - - MODEL NUMBER AYF1236B

MOWER DECK

| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-----------------------------------|---------|----------|---|
| 1 | 140064 | Spring, Mower Clutch | 29 | 137266 | Nut, Flangelock 9/16 |
| 2 | 122052X | Spacer, Retainer | 30 | 136631 | Bracket, Deflector |
| 3 | 73680600 | Nut, Crownlock 3/8-16 | 31 | 17490508 | Screw, Hex Washer Head, Thd. Roll. 5/16-18 x 1/2 |
| 4 | 130840 | Assembly, Brake | 32 | 122051X | Arm, Support Idler, Mower |
| 5 | 131251 | Guide, Belt Idler | 33 | 131560 | Shield, Deflector |
| 6 | 121316X | Idler, Flat | 36 | 121980X | Rod, Hinge |
| 7 | 72110616 | Bolt, Carriage 3/8-16 x 2 Grade 5 | 37 | 123713X | Spring, Torsion Deflector |
| 8 | 19131410 | Washer 13/32 x 7/8 x 10 Gauge | 38 | 105304X | Cap, Sleeve |
| 9 | 127744 | Assembly, Mower Idler Arm | 39 | 19111016 | Washer 11/32 x 5/8 x 16 Gauge |
| 10 | 72140610 | Bolt, Carriage 3/8-16 x 1-1/4 | 40 | 110452X | Nut, Push |
| 11 | 130841 | Rod, Brake | 41 | 131264 | V-Belt |
| 12 | 127356 | Bracket, Rear Lift, R.H. | 42 | 19171616 | Washer 11/32 x 5/8 x 16 Gauge |
| 13 | 72140506 | Bolt, Carriage 5/16-18 UNC x 5/8 | 43 | 3146R | Clip, Hairpin |
| 14 | 73680500 | Nut, Crownlock 5/16-18 | 44 | 140608 | Keeper, L.H. |
| 15 | 127357 | Bracket, Rear Lift, L.H. | 45 | 110485X | Bearing |
| 16 | 153298 | Keeper, R.H. | 46 | 128774 | Housing, Mandrel, Vented |
| 17 | 128508 | Stabilizer, Mower Link | 47 | 129895 | Bearing |
| 18 | 128511 | Pin, Drive | 48 | 137645 | Shaft, Mandrel (Includes Key Number 47) |
| 19 | 127380 | Bracket, Stabilizer Link | 49 | 133943 | Washer, Hardened |
| 20 | 138496 | Blade, Mwr 36 High Lift | 62 | 153390 | Washer, Felt |
| 21 | 140296 | Washer, Hard Blade Mower Vented | -- | 130794 | Mandrel Assembly (Includes Key Numbers 21-23, 26, 29 and 45-48) |
| 22 | 10030600 | Washer, Lock, Heavy 3/8 | -- | 156866 | Deck, Serv 36 HP |
| 23 | 850857 | Bolt 3/8-24 x 1-1/4 Grade 8 | | | |
| 24 | 140329 | Stripper | | | |
| 25 | 157722 | Screw, Thdrol. Washer Hd | | | |
| 27 | 156600 | Housing, Mower | | | |
| 28 | 153531 | Pulley, Mandrel | | | |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR -- MODEL NUMBER AYF1236B


DECALS

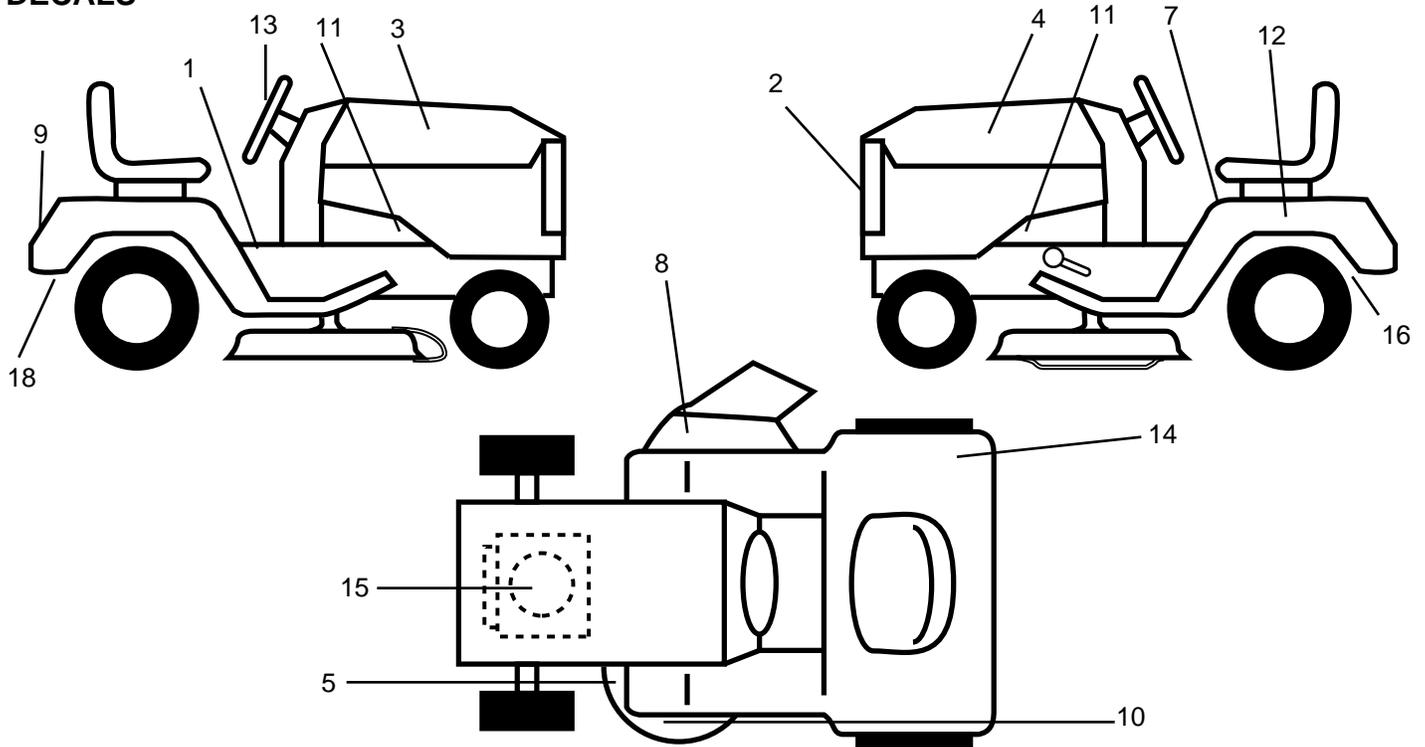

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|--------------------------------|
| 1 | 159739 | Decal, Brake/Clutch Sym. |
| 2 | 126860X | Decal, Lightbox |
| 3 | 161952 | Decal, Hood, R.H. |
| 4 | 161953 | Decal, Hood L.H. |
| 5 | 136830 | Decal, V-Belt Sch. |
| 7 | 145498 | Decal, Read Owner's Manual Sym |
| 8 | 145494 | Decal, Cutfinger Sym |
| 9 | 161950 | Decal, Fender |
| 10 | 141517 | Decal, Deck, Mower |
| 11 | 159736 | Decal, Chassis Hot Muffler |
| 12 | 145005 | Decal, Caution, Battery |


| KEY NO. | PART NO. | DESCRIPTION |
|---|----------|----------------------------|
| 13 | 161951 | Decal, Insert, Steering |
| 14 | 126187X | Decal 100 Db |
| 15 | 165297 | Decal, Engine |
| 16 | 162598 | Decal, Drawbar Load Limit |
| 18 | 145437 | Decal, Europe, Stand, CE |
| -- | 138311 | Decal, Handle, Lift |
| -- | 157065 | Manual, Operator's, (Euro) |
| -- | 157216 | Manual, Operator's, (Scan) |
| -- | 166578 | Manual, Repair Parts |
| Available accessories are not included with your tractor: | | |
| -- | C36 | Rear Bagger |
| -- | MK36 | Mulcher Kit |

TIRES & WHEELS

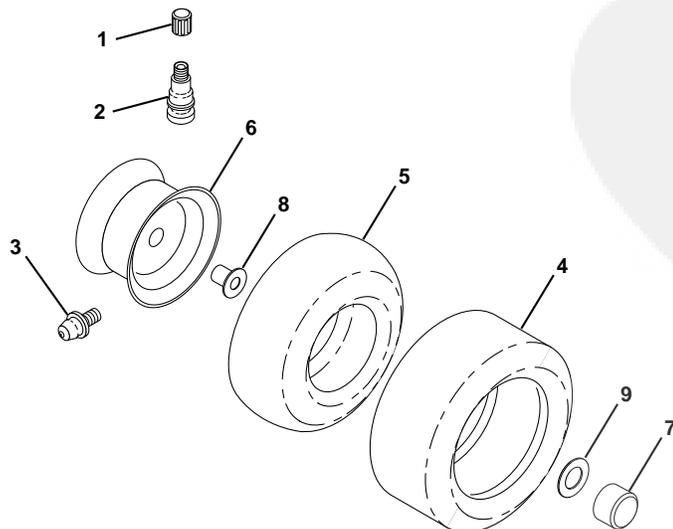

| KEY NO. | PART NO. | DESCRIPTION |
|---------|------------|-------------------------------|
| 1 | 59192 | Cap, Valve |
| 2 | 65139 | Stem, Valve |
| 3 | 278H | Fitting, Grease (Front Only) |
| 4 | 137422 | Tire, Front |
| | 132703 | Tire, Rear |
| 5 | 59904 | Tube, Tire, Front |
| | 8134H | (Optional, Service Item Only) |
| | | Tube, Tire, Rear |
| | | (Optional, Service Item Only) |
| 6 | 137237X427 | Rim Assembly, Front |
| | 140325X427 | Rim Assembly, Rear |
| 7 | 104757X | Cap, Axle |
| 8 | 9040H | Bearing, Flange (Front Only) |
| 9 | 121748X | Washer, Axle Cap |
| -- | 144334 | Sealant, Tire (10 oz. Tube) |

NOTE: All component dimensions given in U. S. inches
1 inch = 25.4 mm

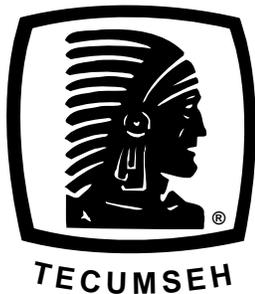

SERVICE POLICY WARRANTY



Issued January 1980
Revised January 1991

LIMITED WARRANTIES FOR NEW PEERLESS GEAR POWER TRAIN COMPONENTS

A. Products Warranted

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or a Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

B. Products And Items Not Warranted

1. Alterations or Modifications of Power Train Components.
 2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.
- This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

C. Securing Warranty Service

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

D. Limitation of Damages and Implied Warranties

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

E. No Dealer Warranty

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

SERVICE NOTES



SERVICE NOTES

