

REPAIR PARTS MANUAL

43" - 14 H.P. LAWN TRACTOR

MODEL B4314-040

TWO YEAR LIMITED WARRANTY

For two (2) years from date of purchase by the first consumer for residential use (thirty (30) days commercial use), NOMA Outdoor Products Incorporated warrants that it will replace free of charge, including labor, any original part of any NOMA Outdoor Products Incorporated product found to be defective by any authorized Service Dealer or the factory, except the battery which is warranted for ninety (90) days from date of purchase.

This warranty does not cover engine, transmission, transaxle or differential (these items are covered by their manufacturer's own warranty). This warranty does not cover parts that have failed due to normal wear or parts that have failed subject to misuse or abuse. Transportation of the unit or part to and from an authorized Service Dealer or factory is the responsibility of the owner.

A step by step explanation as to what procedure should be followed for this warranty is:

1. If a part becomes defective, contact the store where the unit was purchased for the name and address of the authorized Service Dealer nearest to you.
2. If you cannot locate an authorized Service Dealer, write Service Department of NOMA Outdoor Products Incorporated for the name and address of the authorized Service Dealer in your area or call the Service Department at 1-901-422-1690.
3. Return the defective product, along with proof of purchase to such authorized Service Dealer for replacement of any defective part where covered by this warranty.

There is no other express warranty. Implied warranties, including those of merchantability and fitness for a particular purpose are limited to two (2) years from date of purchase. Liability for incidental or consequential damages are excluded.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

NOMA Outdoor Products Incorporated

Caller 8000

Jackson, TN 38308-8000

UNIT PARTS AND SERVICE

This manual contains instructions for safety, assembly and maintenance. Read this manual carefully and completely so that you will know proper assembly, use and care of your unit. Also fill in and mail the registration card packed with the unit. For service other than covered in this manual, contact an authorized service dealer. A nationwide parts and service organization has been established to provide locally available parts and service. A list of authorized parts distributors has been included in this manual. When ordering repair parts, always give the following information: 1. The Part Name; 2. The Part Number; 3. The Quantity desired; 4. The Full (eight digit) Model Number of the unit. The model number will be found on a plate attached to the unit.



Look for this symbol.

It means - ATTENTION! BECOME ALERT! A HAZARD TO OPERATOR, BYSTANDER, PROPERTY OR EQUIPMENT MAY EXIST.

NOMA Outdoor Products Incorporated
Caller 8000
Jackson, TN 38308-8000

Part No. 318098

0191



OPERATIONAL PRECAUTIONS



THESE INSTRUCTIONS ARE FOR YOUR PROTECTION. PLEASE READ THEM CAREFULLY.

1. Know the controls and how to stop quickly. **READ THIS OPERATOR'S MANUAL** and instructions furnished with attachments.
2. Wear safety glasses or eye shields when assembling or operating riding mower.
3. Do not allow children to operate the machine. Do not allow adults to operate it without proper instruction.
4. Do not carry passengers. Do not mow when children and others are around. Disengage power to blade(s) or attachment(s) and stop the engine while others are in the vicinity of the mower.
5. Battery fluid (electrolyte) is an **ACID** and is extremely dangerous. Do not smoke while servicing the battery. Do not service the battery near a open flame or spark.
6. Handle gasoline with care, it is highly flammable.
 - A. Use approved gasoline container.
 - B. Never remove the fuel cap off, or add gasoline to, a running or hot engine, or an engine that has not been allowed to cool for several minutes after running. Never fill the tank indoors and always clean up spilled fuel immediately.
 - C. Do not smoke while filling fuel tank.
 - D. Do not run the engine indoors. Open doors if engine must be run in garage. Exhaust fumes contain **CARBON MONOXIDE**, an **ODORLESS** and **DEADLY GAS**.
7. Check fuel supply before each use allowing space for expansion as the heat of the engine and/or sun can cause gasoline to expand.
8. Do not operate mower when barefooted. Always wear substantial footwear, preferably steel-toed shoes. Do not wear loose fitting clothing that could get caught in moving parts.
9. Clear the work area of objects (wire, rocks, etc.) which might be picked up and thrown. Check all controls for proper function.
10. Disengage all attachment clutches, shift to neutral, and set parking brake before attempting to start the engine (motor). When starting engine equipped with a pull starter, stand firm and make sure your feet are well away from the blade(s).
11. Disengage power to blade(s) or other attachments(s) and stop the engine (motor) before leaving the operator's position. Always dismount from the left side.
12. Disengage power to blade(s) or other attachment(s) and stop the engine (motor) before making any repairs or adjustments.
13. Disengage power to blade(s) or other attachment(s) when transporting or not in use.
14. Take all possible precautions when leaving the vehicle unattended, such as disengaging power to blade(s) or attachment(s), lower the attachment(s), setting the parking brake, stopping the engine (motor), and removing the key.
15. Do not stop or start suddenly when going uphill or downhill. Mow up and down the face of steep slopes; never across the face.
16. Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing direction on slopes.
17. Stay alert for holes, rocks, and roots in the terrain and other hidden hazards. Keep away from drop-off. Never operate your riding mower on wet or slippery grass or at a speed which could cause a skid. Exercise care when mowing around a fixed object to prevent the blade(s) from striking it. Never deliberately run over any foreign object.
18. Always disengage blade control lever before attempting to remove the mower from a hole or other obstruction.
19. Use care when pulling loads or using heavy equipment.
 - A. Use only approved drawbar hitch points.
 - B. Limit loads to those that you can safely control.
 - C. Do not turn sharply. Use care when backing.
 - D. Use counterweight(s), wheel weights or tire chains when suggested in attachment(s) instructions.
20. Watch for traffic when crossing or near roadways.
21. When using attachment(s), never direct discharge of material toward bystanders nor allow anyone near the vehicle while in operation.
22. Keep the vehicle and attachments in good operating condition, and keep safety devices in place and in working condition.
23. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
24. Never store the equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
25. To reduce fire hazard, keep the engine free of grass, leaves or excessive grease.
26. The vehicle and attachments should be stopped and inspected for damage after striking a foreign object, and the damage should be repaired before restarting and operating the equipment.
27. Do not change the engine governor settings or over-speed engine.
28. When using the vehicle with mower, proceed as follows:
 - A. Mow only in daylight or in good artificial light.
 - B. Never make a cutting height adjustment while the engine (motor) is running if the operator must dismount to do so.
 - C. Shut the engine (motor) off when removing the grass catcher or unclogging chute.
 - D. Check the blade mounting bolts for proper tightness at frequent intervals.
29. Under normal usage, the grass catcher bag material is subject to deterioration and wear. Check the bag frequently for deterioration and wear and replace worn bags. Check that replacement bags comply with the original manufacturer's recommendations or specifications.
30. Disengage power to mower before backing up. Do not mow in reverse unless absolutely necessary and then only after careful observation of the entire area behind the mower.

OWNER'S INFORMATION

Record the following information about your unit so that you will be able to provide it in case of loss or theft.

MODEL NUMBER: - (Enter complete 8 digit number from model plate on unit)

PURCHASE DATE: ____ / ____ / ____ CODE NO.: _____ SERIAL NO.: _____

DEALER'S NAME AND ADDRESS: _____

CITY: _____ STATE: _____ TELEPHONE: _____

CONTENTS OF SHIPPING CARTON


- 1 - Lawn Tractor with 43 inch Mower Deck
- 1 - Operator's Manual
- 1 - Repair Parts Manual
- 1 - Engine Manual
- 1 - Steering Wheel (see Note)
- 1 - Seat (see Note)
- 1 - Steering Shaft Cover (see Note)
- 1 - Spring Pin (see Note)
- 1 - Battery Acid Pak (see Note)
- 1 - Shift Knob (see Note)
- 1 - Torsion Spring (see Note)
- 1 - Chute Deflector (see Note)
- 1 - Push Nut (see Note)
- 1 - Pivot Rod (see Note)
- 2 - Shoulder Bolts 3/8-16 (see Note)
- 2 - Centerlock Nuts 3/8-16 (see Note)
- 2 - Deck Wheels (see Note)
- 1 - Bag of Assembly Parts Containing (see Note):
 - 1 - Oil Drain Trough
 - 4 - 5/16 x 3/4 inch Hex Head Screws
 - 4 - 5/16 inch Split Lockwashers
 - 4 - 11/32 inch Flatwashers

NOTE: Refer to page 22 & 23 (Customer Assembly Parts) for more detailed description.

TOOLS REQUIRED FOR ASSEMBLY

- 2 - 7/16 inch Wrenches (or adjustable wrench)
- 1 - 1/2 inch Wrench (or adjustable wrench)
- 1 - Small Phillips Screwdriver with a 1/4 inch shank
- 1 - Hammer

HOW TO MEASURE SCREW SIZE (5/16 x 1 1/2 INCH)

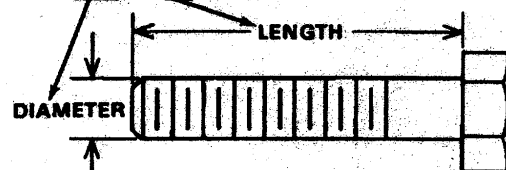

DANGER



This lawn tractor can be dangerous if carelessly used.

Read your Operator's Manual thoroughly before operating your lawn tractor.

Always wear safety glasses or eye shields while assembling or operating your lawn tractor.

DO NOT carry passengers at any time.

Keep your hands, feet, hair and loose clothing away from the discharge area, the underside of the mower deck or any moving parts while the engine is running.

DO NOT allow children or young teenagers to operate or be near your lawn tractor while it is operating.

ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS:

1. The PART NUMBER; 2. The PART NAME; 3. QUANTITY DESIRED; 4. The MODEL NUMBER (As shown on Model Plate).

SEND PART ORDERS AS PER INSTRUCTIONS ON THE FRONT PAGE.

DO NOT USE KEY NUMBERS WHEN ORDERING REPAIR PARTS, ALWAYS USE PART NUMBERS.


All replacement parts will be supplied in current production colors or in a neutral color.

A handling fee is applicable to small parts orders.

YOUR UNIT IS RIGHT HAND (RH) OR LEFT HAND(LH) AS YOUR STAND BEHIND IT.

43" LAWN TRACTOR MODEL B4314-040

CHASSIS & HOOD ASSEMBLY

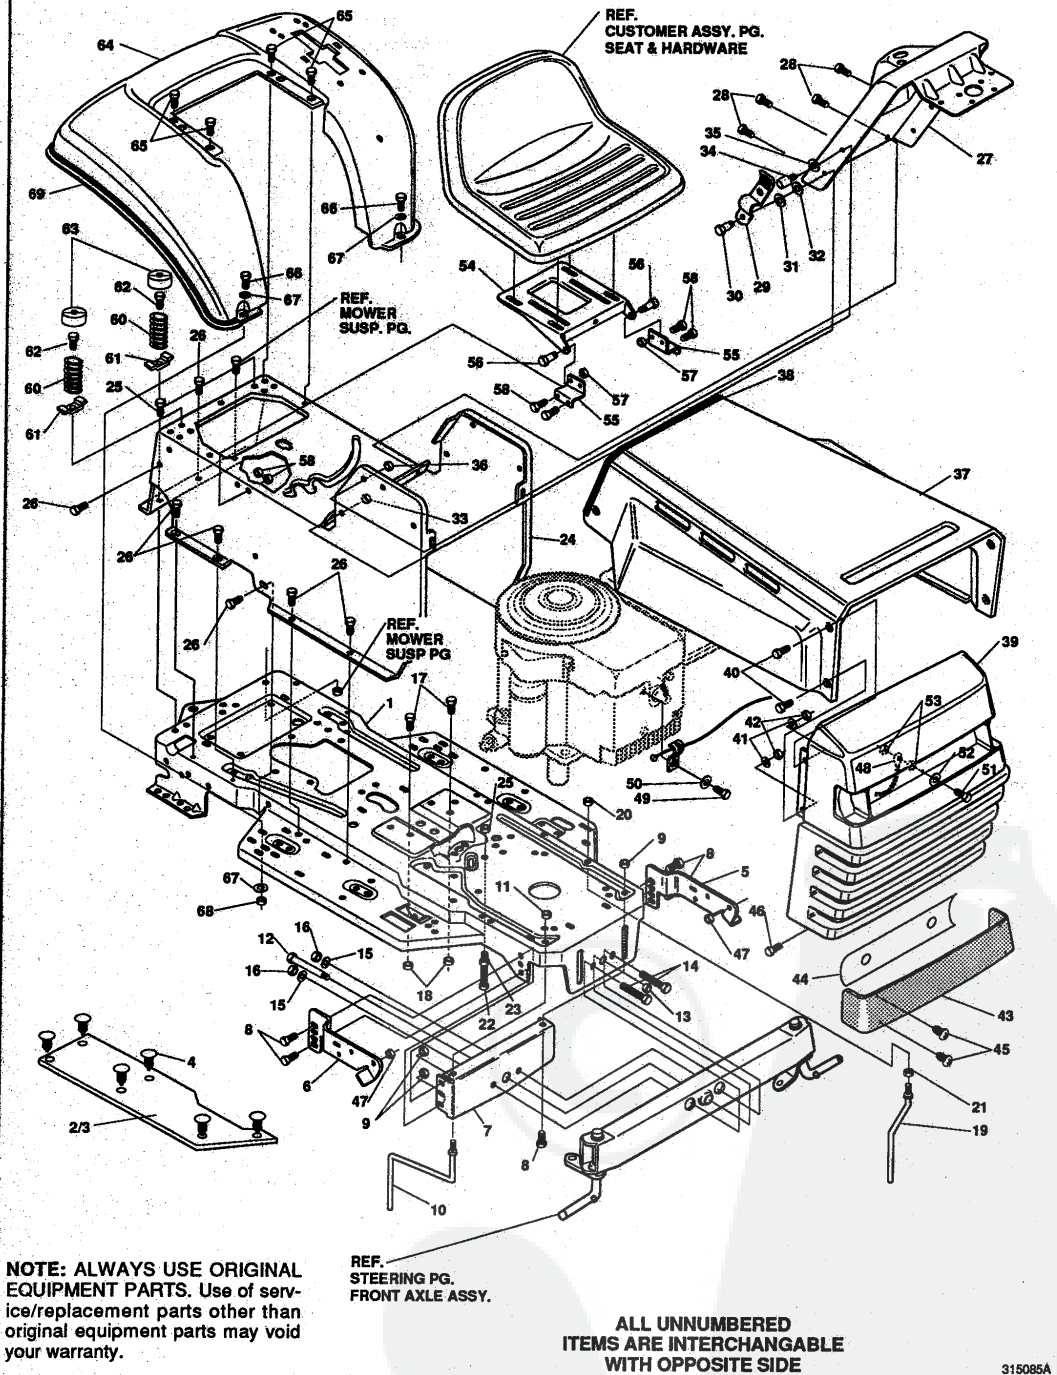


43" LAWN TRACTOR MODEL B4314-040

key#	part#	description	qty.
1	315967	FRAME,LF MAIN P920/F4360	1
2	310005	FOOTPAD,LH	1
3	310006	FOOTPAD,RH	1
4	309235	FASTENER, RATCHET	12
5	313047	BRKT,GRILL LH	1
6	313048	BRKT,GRILL RH	1
7	56361	BRACKET, FRONT AXLE	1
8	56030	SCREW, 5/16-18X.75WDFLLK GR5	5
9	55273	NUT, 5/16-18 HXWDFLLK	5
10	300440	GUIDE, BELT, RIDER	1
11	◇ 1498	NUT, 5/16-18 REGHEXCTRLK	1
12	308207	BOLT, .625X2.180 HSSH 1/2-13NC	1
13	◇ 309008	NUT, 1/2-13 HXJAMCTRLK	1
14	◇ 122207	SCREW, 3/8-16X3.00 HHC GR2	2
15	2483	WASHER, .39IDX1.25DX.07 BELLVIL	2
16	◇ 1499	NUT, 3/8-16 REGHEXCTRLK	2
17	◇ 120229	SCREW, 5/16-18X .88 HHC GR2	2
18	◇ 1498	NUT, 5/16-18 REGHEXCTRLK	2
19	300635	GUIDE,BELT SHORT 15" WHEEL	1
20	124824	NUT, 5/16-18 HEXJAM	1
21	271190	NUT, 3/8-16 HEXKEPS	1
22	◇ 49930	SCREW, 3/8-16X7.50 HHC	1
23	◇ 1499	NUT, 3/8-16 REGHEXCTRLK	2
24	310446	CONSOLE	1
25	35497	SCREW, 5/16-18X .50 WAHTAP	1
26	995346	SCREW, 1/4-20X .50 WAHTAP	13
27	304880	DASHBOARD	1
28	995346	SCREW, 1/4-20X .50 WAHTAP	4
29	57159	LATCH, .94WDX.047 ASSY HOOD	2
30	8482	BOLT, .375X .156 HSSH 5/16-18	2
31	120394	WASHER, FLAT .406X .81X.065	2
32	120393	WASHER, FLAT .344X .69X.065	2
33	◇ 1498	NUT, 5/16-18 REGHEXCTRLK	2
34	53446	PIN, 5/16-18 HOOD LATCH	2
35	138538	WASHER, REGINTLK.320X.61X.03	2
36	45174	NUT, 5/16-18 HEXWDFLLK WHIZ	2
37	316527	HOOD	1
38	47453	EDGING,WIDE	27.5"
39	314476	GRILLE	1
40	◇ 274672	SCREW, 1/4-20X .63 WAHHC GR2	4
41	120392	WASHER, FLAT .281X .63X.065	4
42	◇ 1502	NUT, 1/4-20 REGHEXCTRLK	4
43	302333	LENS, SMOKED W/TAB NO LOGO	1
44	314948	FOIL,LENS DYNA-PRO REFLECTOR	1
45	57796	SCREW, #6 X .50 PLASTITE	4
46	36149	BOLT, .375X .500 HSSH 5/16-18	2
47	◇ 1498	NUT, 5/16-18 REGHEXCTRLK	2
48	310748	LANYARD,HOOD	1
49	◇ 180018	SCREW, 1/4-20X .62 HHC	1
50	◇ 120380	WASHER, REGSPTLK.263X.49X.07	1
51	◇ 48900	SCREW, 1/4-20X .75 HHC GR2	1
52	120392	WASHER, FLAT .281X .63X.065	1
53	◇ 1502	NUT, 1/4-20 REGHEXCTRLK	2
54	304761	PLATE, SEAT	1
55	310444	BRACKET, SEAT SUPPORT	1
56	20507	BOLT, .437X .156 HSSH 5/16-18	2
57	◇ 1498	NUT, 5/16-18 REGHEXCTRLK	2
58	◇ 120228	SCREW, 5/16-18X .63 HHC GR2	4
59	◇ 1498	NUT, 5/16-18 REGHEXCTRLK	4
60	57153	SPRING,SEAT 2.63LG.1.49OD	2
61	1341	CLAMP,SPRING 1.17"ID	2
62	44811	SCREW, 1/4-20X .75 HXWATAP	2
63	56907	COVER,SEAT SPRING 1.5IDX1.0LG	2
64	304758	FENDER	1
65	995346	SCREW, 1/4-20X .50 WAHTAP	4
66	◇ 122017	SCREW, 5/16-18X1.00 HHC GR2	2
67	446363	WASHER, FLAT .375X .88X.082	4
68	◇ 1498	NUT, 5/16-18 REGHEXCTRLK	2
69	55021	EDGING	75"
70	317984	OPERATOR'S MANUAL (NOT ILLUSTRATED)	1
71	318098	PARTS MANUAL (NOT ILLUSTRATED)	1

◇ Indicates STANDARD HARDWARE ITEMS.

43" LAWN TRACTOR MODEL B4314-040

MOWER SUSPENSION ASSEMBLY

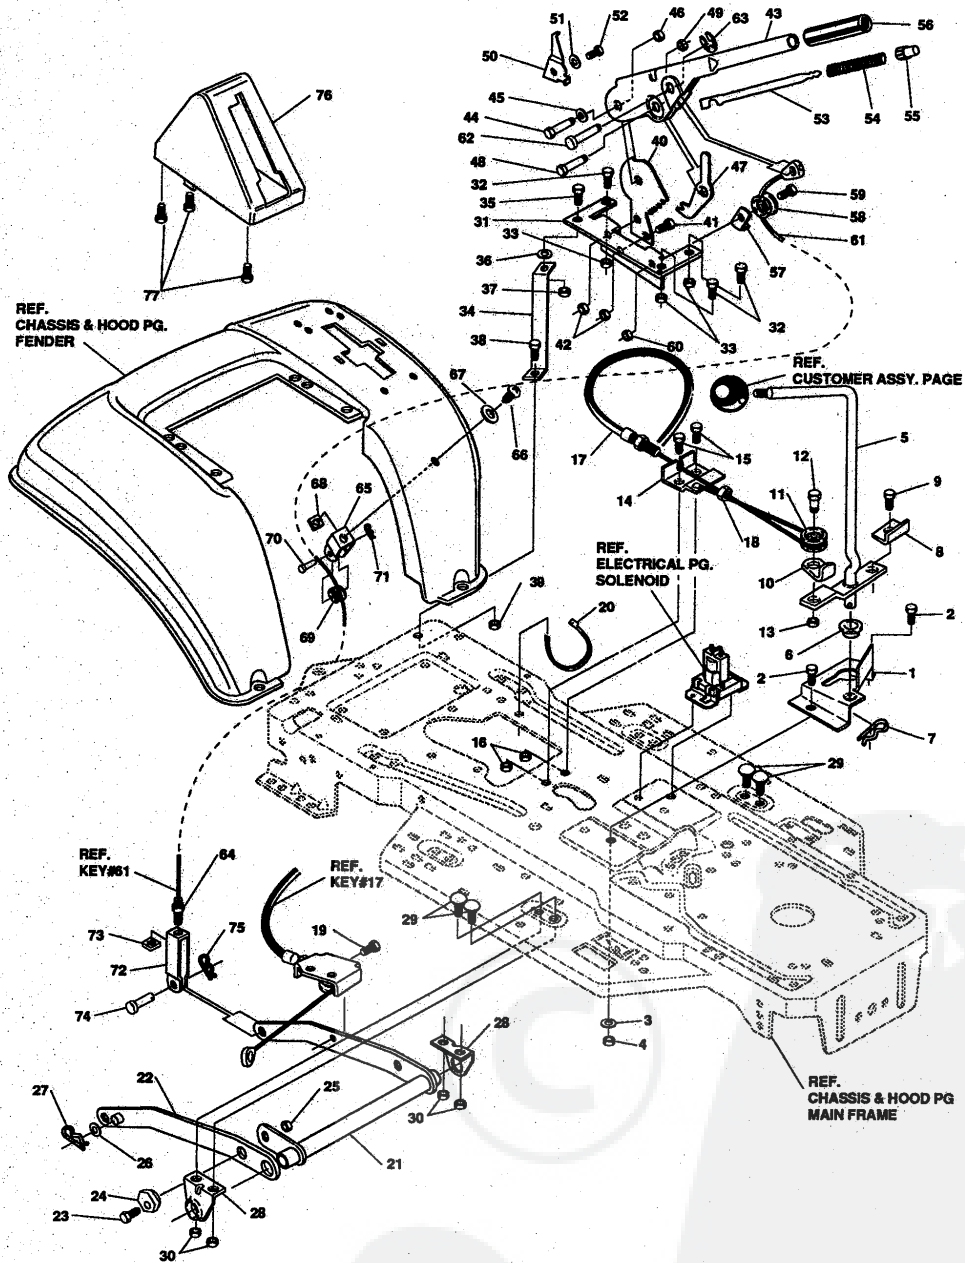

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS. Use of service/replacement parts other than original equipment parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGABLE WITH OPPOSITE SIDE

315029B


43" LAWN TRACTOR MODEL B4314-040

key#	part#	description	qty.
1	9402	BRACKET,CLUT-ENGAGELEVER	1
2	180079	◊ SCREW, 5/16-18X1.00 HHC	2
3	120393	WASHER, FLAT .344X.69X.065	2
4	1498	◊ NUT, 5/16-18 REGHEXCTRLK	2
5	304791	ASSY,CLUTCH LEVER	1
6	50148	BEARING,FL. .503IDX.628OD	1
7	8260	PIN, HAIR .091 DIA X1.66LG	1
8	315347	BRACKET,SWITCH ENGAGE	1
9	35498	◊ SCREW, 5/16-18X.75 WAHHTAP	1
10	1288	BRKT,CABLE RETAINER	1
11	39298	PULLEY, .906X.305 NYLON	1
12	58336	BOLT, .375X.375 HHSH 1/4-20	1
13	1502	◊ NUT, 1/4-20 REGHEXCTRLK	1
14	9397	BRKT, FRAME CABLE	1
15	180020	◊ SCREW, 1/4-20X.75 HHC	2
16	1502	◊ NUT, 1/4-20 REGHEXCTRLK	2
17	301503	ASSY,CABLE, BLADE ENGAGE	1
18	120813	◊ NUT, 1/4-28 HJAM	1
19	35498	◊ SCREW, 5/16-18X.75 WAHHTAP	1
20	57444	TIE, CABLE BLACK NYLON	1
21	9569	ASSY,REAR LIFT	1
22	9186	ASSY,LINK,RIGHT SIDE	1
23	180079	◊ SCREW, 5/16-18X1.00 HHC	1
24	58247	ADJUSTING NUT	1
25	1498	◊ NUT, 5/16-18 REGHEXCTRLK	1
26	120396	WASHER, FLAT .531X1.06X.095	2
27	8260	PIN, HAIR .091 DIA X1.66LG	2
28	9117	BRKT,REAR,HANG,SUSP.	2
29	126211	BOLT, 5/16-18X.63 CARR	4
30	1498	◊ NUT, 5/16-18 REGHEXCTRLK	4
31	58333	BRACKET,HGT/ADJUST SUPPORT	1
32	180077	◊ SCREW, 5/16-18X.75 HHC	3
33	1498	◊ NUT, 5/16-18 REGHEXCTRLK	3
34	304766	BRACE, FENDER	1
35	180079	◊ SCREW, 5/16-18X1.00 HHC	1
36	45602	WASHER, FLAT .333X.87X.119	1
37	1498	◊ NUT, 5/16-18 REGHEXCTRLK	1
38	180079	◊ SCREW, 5/16-18X1.00 HHC	1
39	1498	◊ NUT, 5/16-18 REGHEXCTRLK	1
40	301238	QUADRANT,HEIGHT ADJUST	1
41	180077	◊ SCREW, 5/16-18X.75 HHC	2
42	1498	◊ NUT, 5/16-18 REGHEXCTRLK	2
43	9788	HANDLE,LIFT SHORT BLK	1
44	300171	BOLT, .500X.270 HHSH 5/16-18	1
45	996418	WASHER, FLAT .506X.75X.024	1
46	44108	◊ NUT, 5/16-18 HWDFLCTRLK	1
47	301239	PAWL, HEIGHT ADJUST	1
48	300171	BOLT, .500X.270 HHSH 5/16-18	1
49	44108	◊ NUT, 5/16-18 HWDFLCTRLK	1
50	9435	POINTER Z-PL	1
51	138479	WASHER, EXLK.195X.41X.03	1
52	35287	◊ SCREW, #8-32X.38 HHWAT	1
53	303027	ROD,ACTUATOR-SHORT	1
54	58326	SPRING, HEIGHT ADJUST	1
55	58325	KNOB, HGT ADJ PUSH BUTTON	1
56	58329	GRIP .750 OD W/ HOLE	1
57	9149	BRKT, CABLE RETAIN	1
58	39298	PULLEY, .906X.305 NYLON	1
59	58336	BOLT, .375X.375 HHSH 1/4-20	1
60	1502	◊ NUT, 1/4-20 REGHEXCTRLK	1
61	314177	CABLE, LIFT 21.70 F-5 20X8-8	1
62	300310	PIN,CLEVIS .310DIA+.475LG	1
63	300311	RING, RET E.31X.24	1
64	120375	◊ NUT, 1/4-20 REGHEX	1
65	9239	CLEVIS	1
66	439455	◊ SCREW, 5/16-18X.56PHPNMA BKPH	1
67	301551	WASHER,.344IDX1.50DX.09 CU BPH	1
68	120373	◊ NUT, 5/16-18 SQ	1
69	39298	PULLEY, .906X.305 NYLON	1
70	300317	PIN, CLEVIS .38 DIA X1.00 LG	1
71	8260	PIN, HAIR .091 DIA X1.66LG	1
72	9405	CLEVIS, LIFT CABLE	1
73	120372	◊ NUT, 1/4-20 REGSQ	1
74	39522	PIN CLEVIS .312 X.812	1
75	121222	PIN, COTTER .090/.086X.75LG	1
76	300335	LIFT COVER-39" F5	1
77	300340	◊ SCREW, #10 X.75 HHPLAST	3

◊ Indicates STANDARD HARDWARE ITEMS.

43" LAWN TRACTOR MODEL B4314-040

STEERING ASSEMBLY

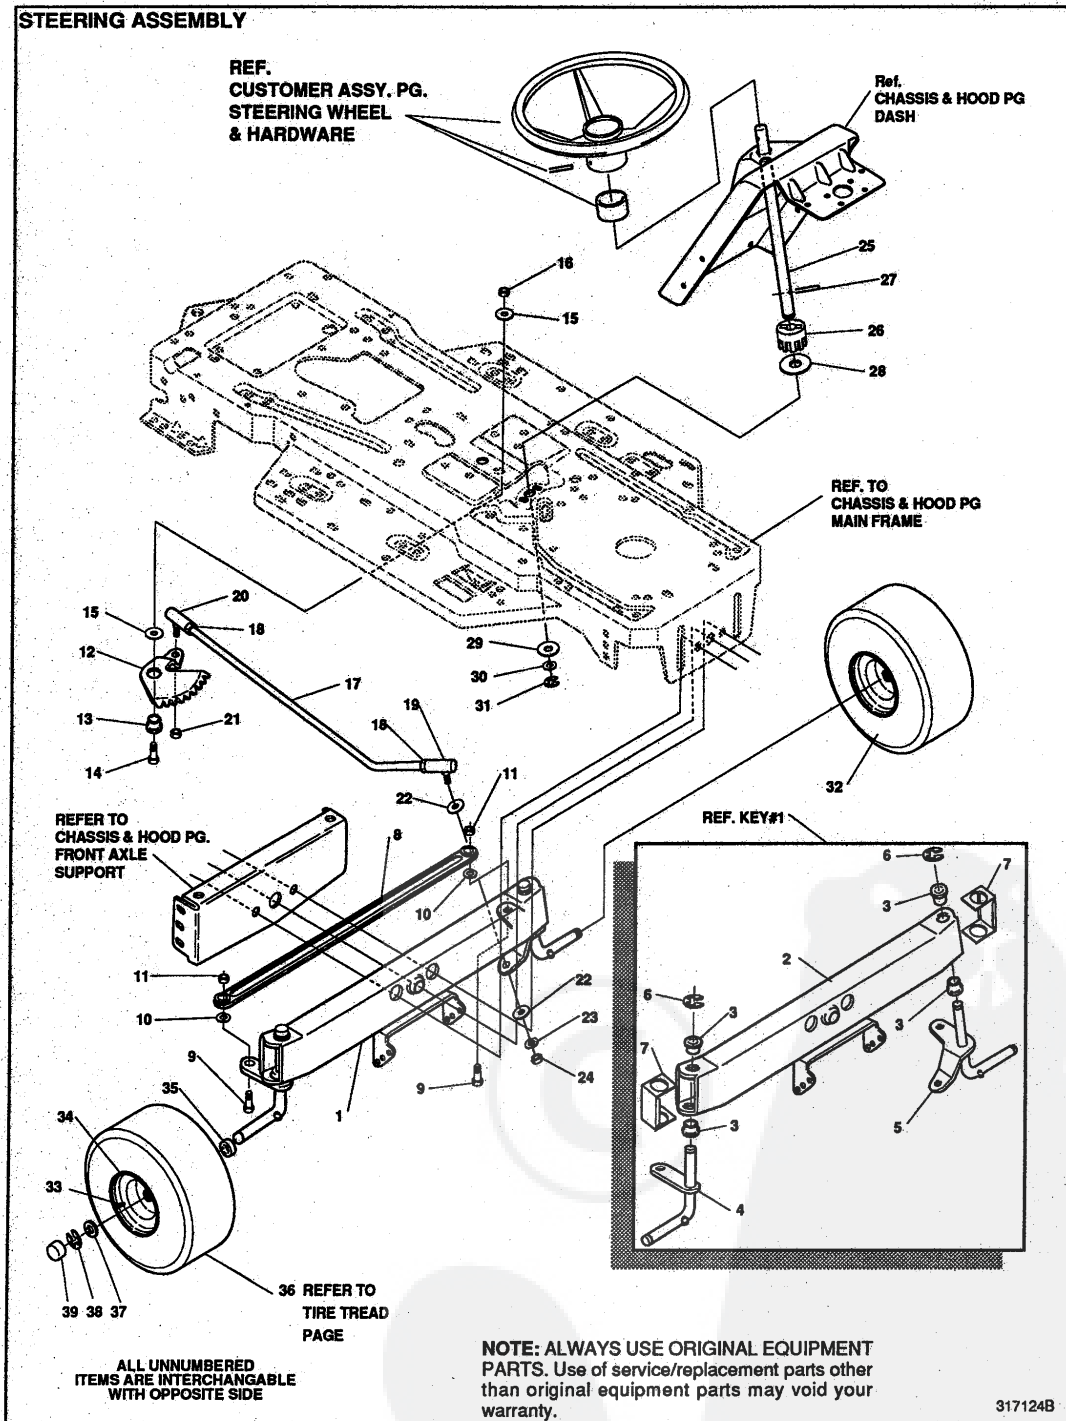

43" LAWN TRACTOR MODEL B4314-040


key#	part#	description	qty.
1	*	ASSY, AXLE FRONT	1
2	300272	AXLE, FRONT	1
3	52407	SPINDLE BEARING	4
4	9180	SPINDLE RH LONG	1
5	314088	SPINDLE LH LONG	1
6	36625	RING, RETEX .57X.05TRU5133-75	2
7	53373	AXLE COVER	2
8	304590	TIE ROD ASSY 19.81LG	1
9	180128	SCREW, 3/8-16X1.75 HHC	2
10	120382	WASHER, REGSPTLK.393X.68X.10	2
11	1499	NUT, 3/8-16 REGHXCTRLK	2
12	58289	SECTOR, STEERING LF	1
13	52406	BRNG, FL ECC.510IDX .998ODX .56	1
14	180177	SCREW, 1/2-13X1.50 HHC	1
15	22265	WASHER, FLAT .515X1.38X.119	2
16	1500	NUT, 1/2-13 REGHCTRLK	1
17	58291	STEERING LINK	1
18	124925	NUT, 3/8-24 REGHEXJAM	2
19	57158	BALL JOINT 3/8 THD SHORT STUD	1
20	21275	BALL JOINT 3/8 TH'D LONG STUD	1
21	46692	NUT, 3/8-24 WDFLHLK	1
22	120396	WASHER, FLAT .531X1.06X.095	2
23	120382	WASHER, REGSPTLK.393X.68X.10	1
24	120369	NUT, 3/8-24 REGHEX	1
25	58243	SHAFT, STEERING LF	1
26	58244	PINION, STEERING LF	1
27	58274	PIN, DOWEL .2500 OD+1.75	1
28	301410	BRNG, FL .752IDX1.061ODX .24	1
29	301398	WASHER, FORMED1.135X1.53X.12	1
30	21682	WASHER, FLAT .765X1.25X.042	1
31	36625	RING, RETEX .57X.05TRU5133-75	1
32	*	TIRE & RIM, PU 15X6.0X6	2
33	24167	VALVE STEM	1
34	39829	WHEEL W/BRG.	1
35	39979	BEARING, FL1.38OD+.753ID	1
36	301140	REFER TO TIRE TREAD PAGE	1
37	642	WASHER, FLAT .755X1.31X.075	4
38	36625	RING, RETEX .57X.05TRU5133-75	2
39	40394	CAP, HUB	2

* Order Individual Parts.

◊ Indicates STANDARD HARDWARE ITEMS.

43" LAWN TRACTOR MODEL B4314-040

MOTION DRIVE ASSEMBLY

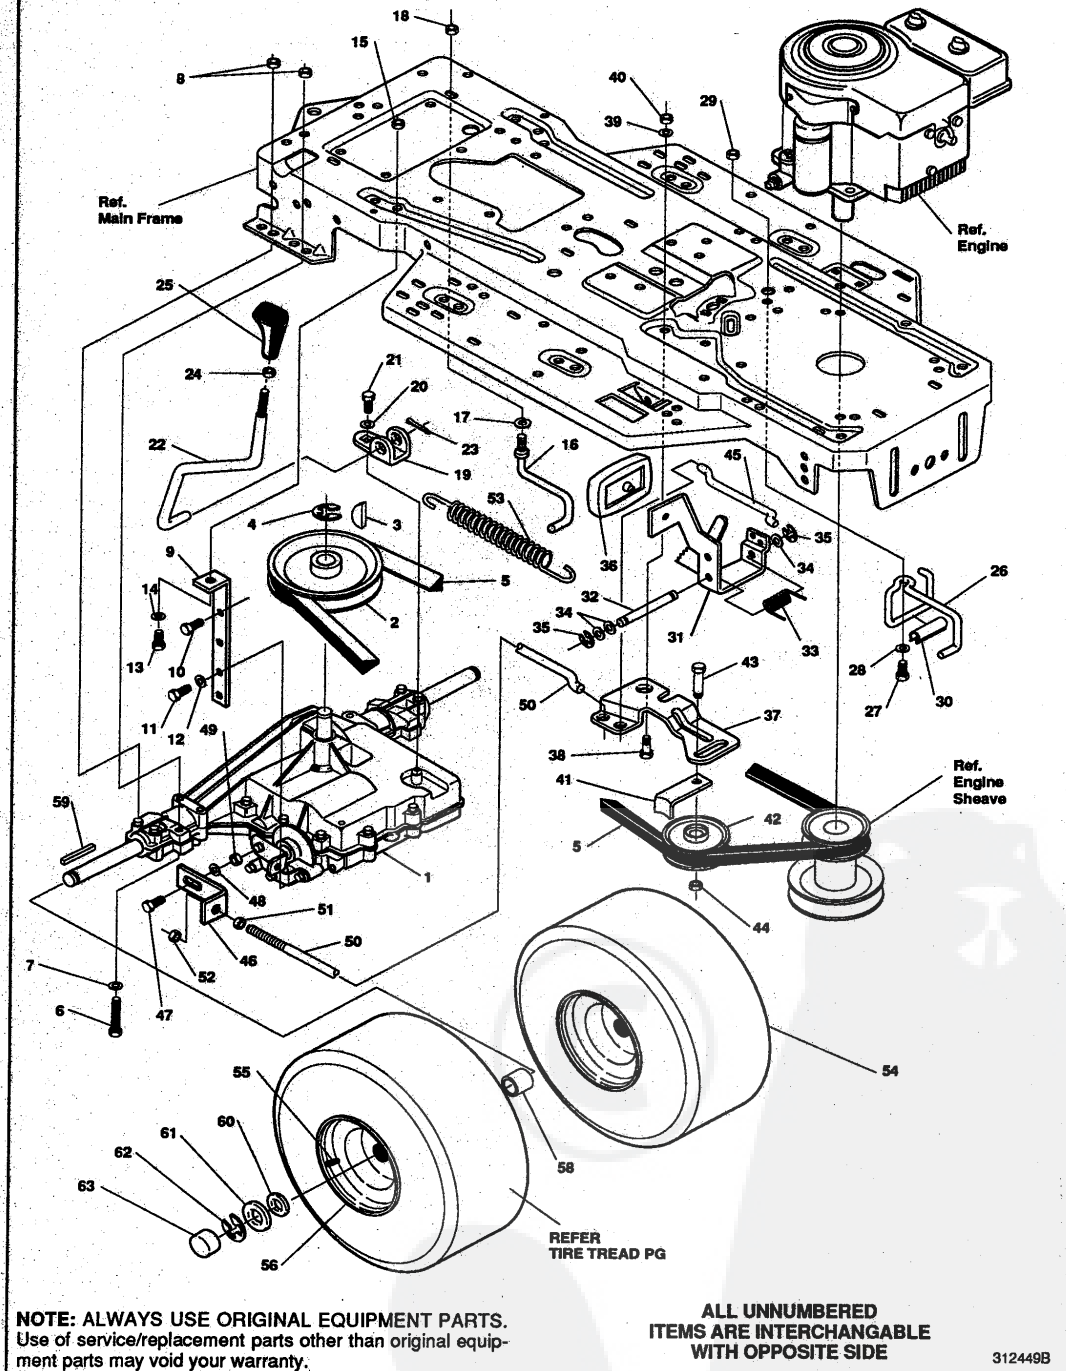


43" LAWN TRACTOR MODEL B4314-040

key#	part#	description	qty.
1	TRANSAXLE	FOOTE 4360-5 (CONTACT NEAREST DEALER)	1
2	302745	PULLEY,V 4L 6.60 OD	1
3	3021	KEY, WDRF 606 .750X.187X.312	1
4	22053	RING, RETEX .58X.04TRU5100-62	1
5	57214	BELT, V 4L 84.75	1
6	0180112	SCREW, 5/16-18X2.75 HHC GR5	4
7	120393	WASHER, FLAT .344X .69X.065	4
8	01498	NUT, 5/16-18 REGHEXCTRLK	4
9	12632	BRACKET,STABILIZER	1
10	050947	SCREW, 3/8-16X1.25 WAHHTAP	1
11	035498	SCREW, 5/16-18X .75 WAHHTAP	1
12	120638	WASHER, HVSPTLK .328X.60X.09	1
13	0122017	SCREW, 5/16-18X1.00 HHC GR2	1
14	120393	WASHER, FLAT .344X .69X.065	1
15	01498	NUT, 5/16-18 REGHEXCTRLK	1
16	57259	GUIDE, BELT 5/16-18THD	1
17	138538	WASHER, REGINTLK.320X.61X.03	1
18	01498	NUT, 5/16-18 REGHEXCTRLK	1
19	57480	BRKT,SHIFT P920-5/F4360-5&3	1
20	57157	WASHER,.750X.250 SP-TRANSAXLE	1
21	056255	SCREW, 1/4-28X .75 NYLHHCGR8	1
22	302743	LEVER,SHIFT FOOT 4360-5&6 LF	1
23	137185	PIN, COTTER .125 DIA X1.00LG	1
24	0120238	NUT, 1/2-13 HEXJAM	1
25	304438	KNOB,SHIFT NOMA 1/2-13	1
26	58356	GUIDE-BELT/DRAGLINK	1
27	0180079	SCREW, 5/16-18X1.00 HHC GR5	1
28	45602	WASHER, FLAT .333X .87X.119	1
29	01498	NUT, 5/16-18 REGHEXCTRLK	1
30	303278	PLASTIC EXTRUSION-BELT GUIDE	1
31	300308	PEDAL ASSY,BRAKE/CLUTCH LF	1
32	57196	ROD,PIVOT .50 OD+4.44LG	1
33	57847	SPRING, BRAKE PEDAL	1
34	2968	WASHER, FLAT .504X .75X.059	3
35	20864	RING, RET E .39X.04TRU5133-50	2
36	48160	PAD, CLUTCH BRAKE W/PRINTING	1
37	300154	ARM,IDLER TRACTION DR. LF	1
38	300793	BOLT, .625X .135 HSSH 5/16-18	1
39	45602	WASHER, FLAT .333X .87X.119	1
40	01498	NUT, 5/16-18 REGHEXCTRLK	1
41	39659	RETAINER,BELT	1
42	35374	PULLEY, IDLER V4L 3.06X .62	1
43	45892	BOLT, 3/8-16X1.50 CARR GR2	1
44	01499	NUT, 3/8-16 REGHXCTRLK	1
45	57204	ROD, CLUTCH	1
46	57217	BRACKET, BRAKE ROD	1
47	20507	BOLT, .437X .156 HSSH 5/16-18	1
48	45602	WASHER, FLAT .333X .87X.119	1
49	01498	NUT, 5/16-18 REGHEXCTRLK	1
50	57203	ROD, BRAKE LT 920 LF 22.25	1
51	0271184	NUT, 5/16-18 HEXKEPS	1
52	01498	NUT, 5/16-18 REGHEXCTRLK	1
53	56359	SPRING, CLUTCH .113X.750X8.75	1
54	*	TIRE&RIM,PU20X8.00-8TURFWHH134	2
55	24167	VALVE STEM	1
56	57165	WHEEL 20X8.00 WHITE .75 DIAHUB	1
57		REFER TO TIRE TREAD PAGE	
58	57479	SPACER, .75 X 1.25 X 1.32	2
59	39628	KEY, SQUARE .187SQX2.50LG	2
60	0642	WASHER, FLAT .755X1.31X.075	4
61	042815	WASHER, FLAT .755X1.53X.07	2
62	36625	RING, RETEX .57X.05TRU5133-75	2
63	40394	CAP, 1.500ID X 7/8LG HUB	2

* Order Individual Parts.
0STANDARD HARDWARE ITEMS

43" LAWN TRACTOR MODEL B4314-040

ENGINE & CONTROL ASSEMBLY

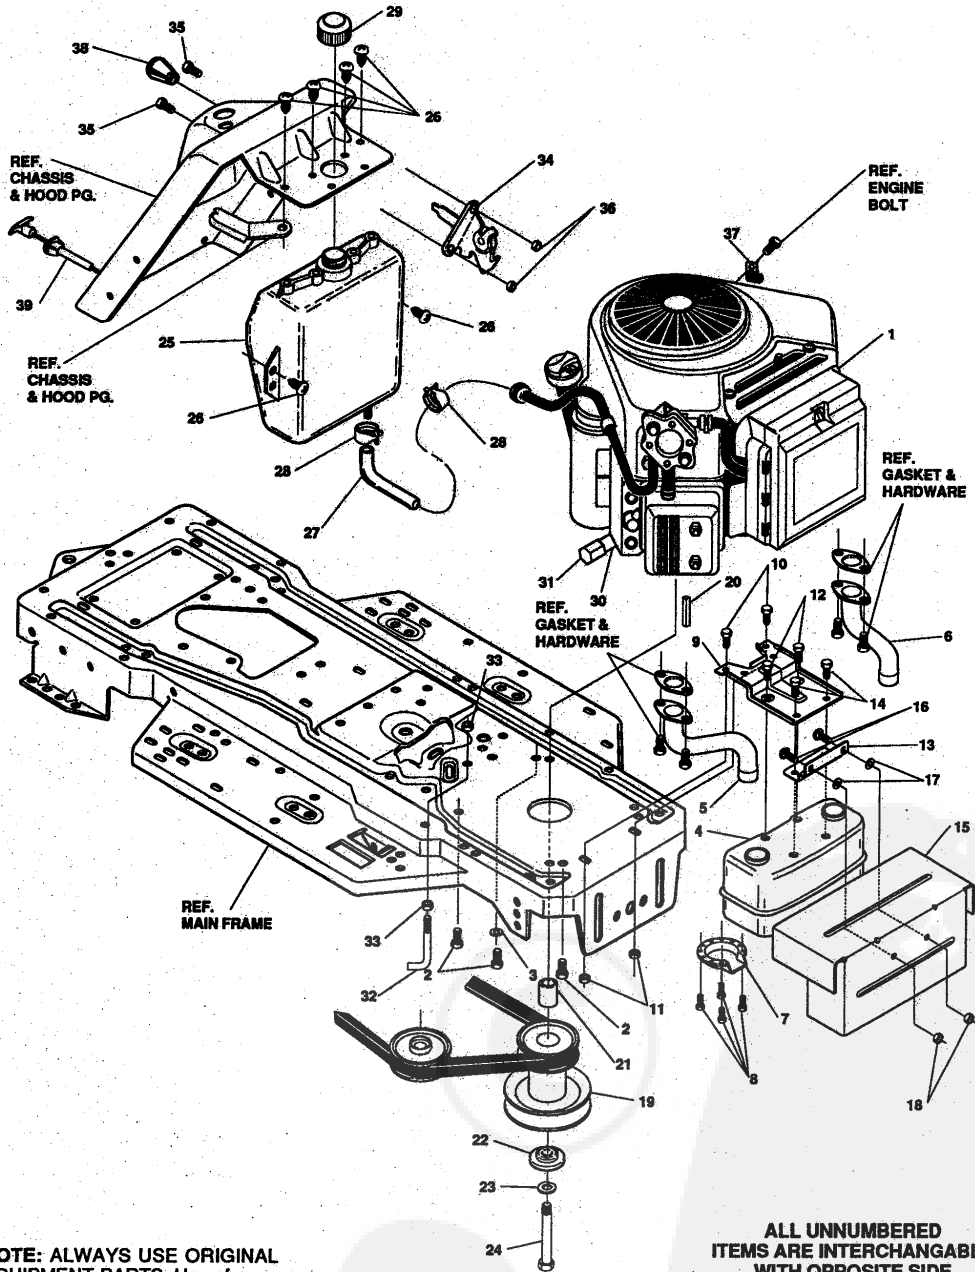

315103B


43" LAWN TRACTOR MODEL B4314-040

key#	part#	description	qty.
1	ENGINE	14HP BS V/TWIN 16AMP (SEE ENGINE MANUAL)	1
2	050947	SCREW, 3/8-16X1.25 WAHHTAP	4
3	138489	WASHER, EXLK. 384X.69X.04	1
4	305553	MUFFLER 15HP B&S VANG	1
5	305554	EXHAUST TUBE 15HP RH	1
6	305555	EXHAUST TUBE 15HP LH	1
7	56472	DEFLECTOR SIDE OUT (BS222573)	1
8	035287	SCREW, #8-32X .38 HHWATAPGR2	4
9	306577	BRACKET, MUFFLER	1
10	056030	SCREW, 5/16-18X.75WDFLLK GR5	2
11	055273	NUT, 5/16-18 HXWDFLLK	2
12	0995346	SCREW, 1/4-20X .50 WAHHTAP	2
13	9796	BRKT, TRANSAXLE	1
14	0995338	SCREW, 1/4-20X .63 HHWATAP	2
15	308144	HEAT SHIELD,MUFFLER	1
16	126211	BOLT, 5/16-18X .63 CARR GR2	2
17	309436	PUSHNUT, 5/16 BOLT RETAINER	2
18	055273	NUT, 5/16-18 HXWDFLLK	2
19	316802	PULLEY,ENG 4.40OFF/5.00D/3.00D	1
20	57791	KEY, SQUARE .250SQX5.00LG	1
21	304246	SPACER,1.01X1.484 ENGIN PULLEY	1
22	56431	WASHER,.980IDX1.38ODX.437PILOT	1
23	0120383	WASHER, REGSPTLK.459X.78X.12	1
24	0428644	SCREW, 7/16-20X5.00 HHC	1
25	314992	TANK,FUEL 2GAL CLEAR	1
26	049050	SCREW, 1/4-10X .75PHPNTAPGR2	6
27	47452	GAS LINE .25ID	10"
28	48672	CLAMP, FUEL LINE	2
29	46704	GAS CAP	1
30	307174	NIPPLE 3/8-18 NPT X 4"	1
31	47828	CAP, PIPE 3/8-18 NPT	1
32	301713	ROD, UPSTOP	1
33	045171	NUT, 3/8-16 HWDFL WHIZ-LOCK ZN	2
34	310280	CONTROL,THROTTLE 33.5LG BS VAN	1
35	0159943	SCREW, 10-24X .63PHPNMA GR2BK	2
36	0271166	NUT, #10-24 HEXKEPS	2
37	57569	RETAINER, .31IDX.62X.03 WIRE	1
38	50607	KNOB,ROUND THROTTLE	1
39	310279	CONTROL,CHOKE 35.25LG PANTK.05	1

◊ Indicates STANDARD HARDWARE ITEMS.

43" LAWN TRACTOR MODEL B4314-040

PRE-PAINTED DECK ASSEMBLY

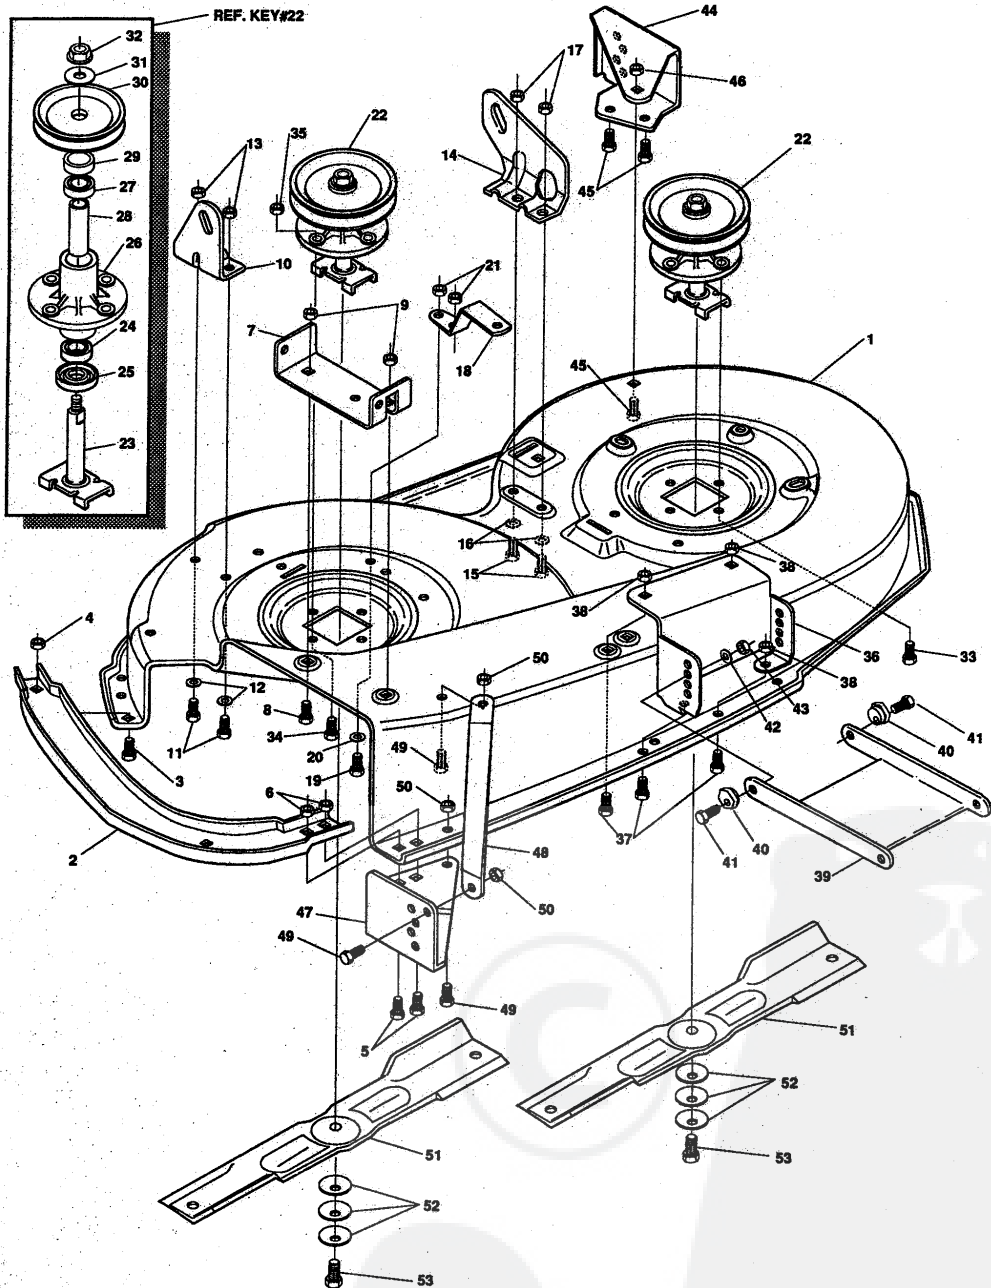

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS. Use of service/replacement parts other than original equipment parts may void your warranty.

ALL UNNUMBERED
ITEMS ARE INTERCHANGABLE
WITH OPPOSITE SIDE

315656D


43" LAWN TRACTOR MODEL B4314-040

key#	part#	description	qty.
1	316835	MOWER DECKS, RIDER 43"	1
2	304102	TOE GUARD	1
3	0180075	SCREW, 5/16-18X .63 HHC	1
4	01498	NUT, 5/16-18 REGHEXCTRLK	1
5	0122007	SCREW, 5/16-18X .75 HHC	2
6	01498	NUT, 5/16-18 REGHEXCTRLK	2
7	302364	BRACKET CHUTE MOUNT	1
8	0180075	SCREW, 5/16-18X .63 HHC	2
9	01498	NUT, 5/16-18 REGHEXCTRLK	2
10	58250	LIFT BRACKET, REAR, RH	1
11	0180077	SCREW, 5/16-18X .75 HHC	2
12	0120393	WASHER, FLAT .344X .69X.065	2
13	01498	NUT, 5/16-18 REGHEXCTRLK	2
14	58251	BRACKET, DECK LIFTREAR LH	1
15	0180077	SCREW, 5/16-18X .75 HHC	2
16	0120393	WASHER, FLAT .344X .69X.065	2
17	01498	NUT, 5/16-18 REGHEXCTRLK	2
18	302363	BRACE IDLER	1
19	0180077	SCREW, 5/16-18X .75 HHC	2
20	0120393	WASHER, FLAT .344X .69X.065	2
21	044108	NUT, 5/16-18 HWDFLCTRLK	2
22	56424	QUILL ASSY, 36/39/40/43	2
23	56425	SHAFT/SADDLE 36"	1
24	49562	BRNG, BALL	1
25	50616	DUST SHIELD	1
26	55547	QUILL CASTING (1046)	1
27	49562	BRNG, BALL	1
28	50818	SPACER, 3.797LGX.669IDX.88OD	1
29	51449	SPACER, .438LGX.932ODX.672ID	1
30	56390	PULLEY, 26/36" QUILL	1
31	56365	SPECIAL WASHER	1
32	01282	NUT, 7/16-20 WDFLLK	1
33	050634	SCREW, 5/16-18X .88 WAHTAP	7
34	0300345	SCREW, 5/16-18X1.38 WATAPGR	1
35	01498	NUT, 5/16-18 REGHEXCTRLK	1
36	313778	BRACKET FRT.	1
37	0180075	SCREW, 5/16-18X .63 HHC	4
38	01498	NUT, 5/16-18 REGHEXCTRLK	4
39	58305	LINK BRACKET, DECK FR	1
40	58247	ADJUSTING NUT	2
41	0122017	SCREW, 5/16-18X1.00 HHC	2
42	35214	WASHER, FLAT .328X1.06X.062	2
43	01498	NUT, 5/16-18 REGHEXCTRLK	2
44	304426	BRACKET, GAGE WHEEL L.H	1
45	0180075	SCREW, 5/16-18X .63 HHC	3
46	01498	NUT, 5/16-18 REGHEXCTRLK	3
47	313925	BRACKET, GAGE WHEEL R.H.	1
48	314282	BRACKET, STABILIZER	1
49	0180075	SCREW, 5/16-18X .63 HHC	3
50	01498	NUT, 5/16-18 REGHEXCTRLK	3
51	313954	BLADE, 21.70 HIGH-LIFT	2
52	2483	WASHER, .39IDX1.25DX.07 BELLVIL	6
53	039573	SCREW, 3/8-24X1.00 NYLHHC	2

◊ STANDARD HARDWARE ITEMS

43" LAWN TRACTOR MODEL B4314-040

FINAL DECK ASSEMBLY

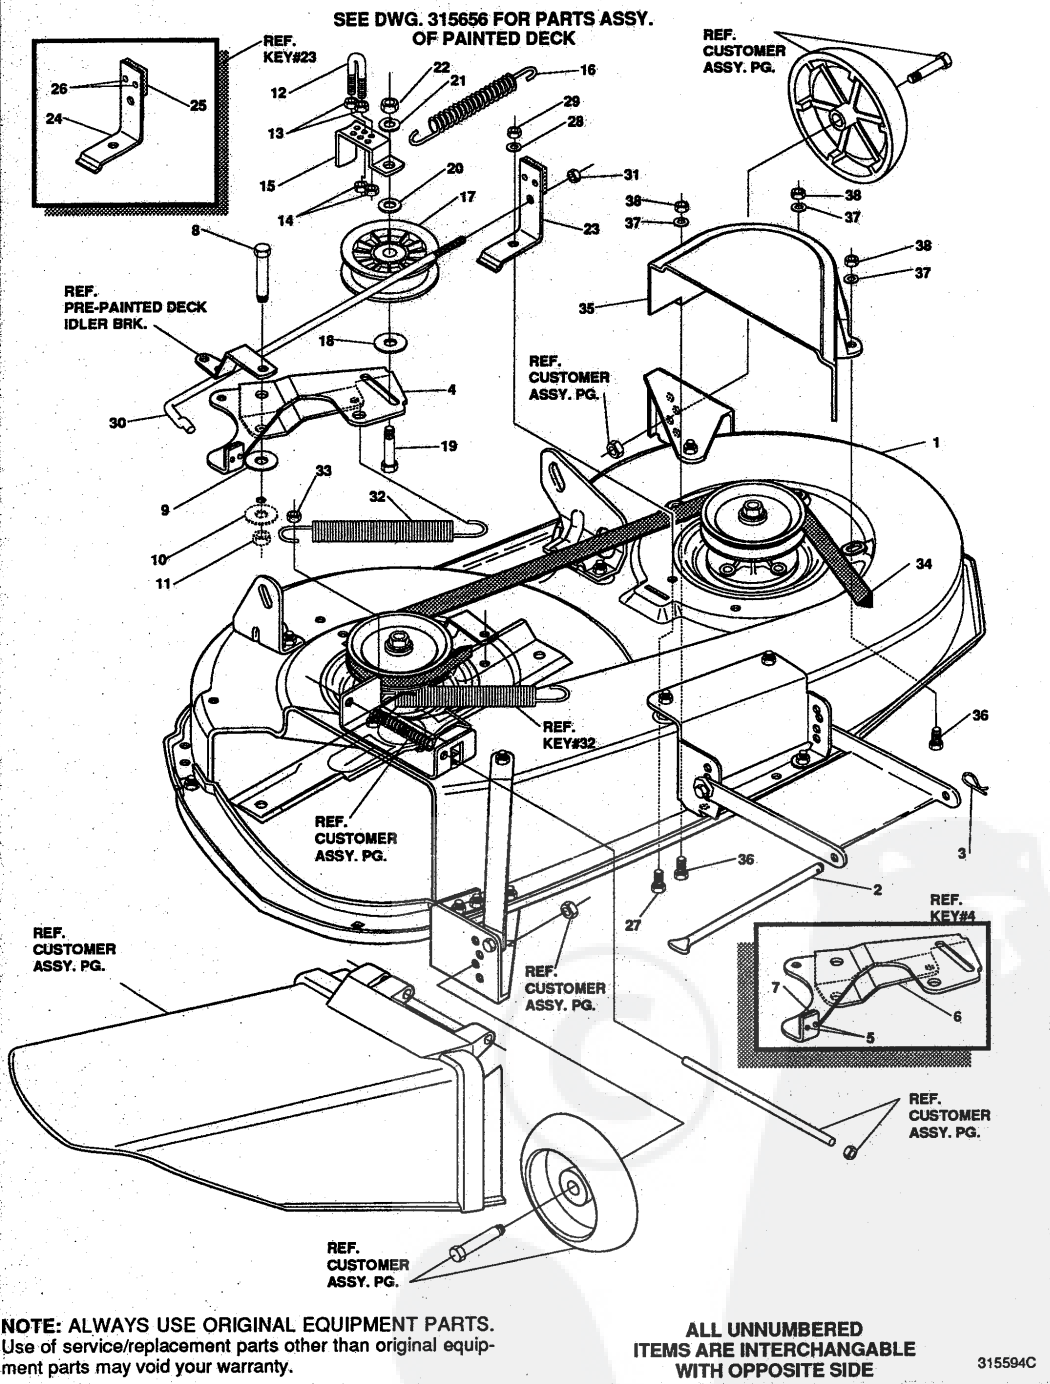

43" LAWN TRACTOR MODEL B4314-040


key#	part#	description	qty.
1	*	DECK ASSEMBLY, 43"	1
2	58306	ROD, DECK HITCH Z-PL	1
3	8260	PIN, HAIR .091 DIA X 1.66 LG	1
4	304414	ASSY. IDLER ARM	1
5	41801	RIVET, OVSET .187 DIA X .50 LG	2
6	305298	ARM IDLER	1
7	306973	BRAKE PAD - HARD - 232AF	1
8	304420	BOLT, 500X2.15 HX HDCPSH	1
9	996307	WASHER, FLAT .391X1.00X.209	1
10	996416	WASHER, FLAT .391X1.00X.125	1
11	45171	NUT, 3/8-16 HWDFL WHIZ NUT	1
12	317309	U-BOLT	1
13	271166	NUT, #10-24	2
14	997316	NUT, #10-24 REGHXCTRLK	2
15	315873	GUIDE, BELT, IDLER ZINC	1
16	314107	SPRING, TENSION 5.00 LG	1
17	310326	PULLEY, IDLER BFF 4.00 WIDE FL	1
18	25210	WASHER, FLAT .392X1.25X.09	1
19	57325	BOLT, 3/8-16X2.00 CARR	1
20	996307	WASHER, FLAT 391X1.00X.125	1
21	120382	WASHER, REGSPTLK 393X.68X.10	1
22	120377	NUT, 3/8-16 REGHX	1
23	304118	BLADE BRAKE ASSY.	1
24	308241	BRAKE ARM	1
25	306973	BRAKE PAD	1
26	135624	RIVET	2
27	120228	SCREW, 5/16-18X .63 HHC	1
28	120393	WASHER, FLAT .344X .69X.065	1
29	1498	NUT, 5/16-18 REGHEXCTRLK	1
30	314079	ROD, BRAKE	1
31	1502	NUT, 1/4-20 REGHEXCTRLK	1
32	35410	SPRING .071 X .62 X 4.37	1
33	1498	NUT, 5/16-18 REGHEXCTRLK	1
34	314108	BELT, V 5L 86.00 KEVLAR	1
35	314106	GUARD, BELT LH PLASTIC	1
36	120228	SCREW, 5/16-18X .63 HHC	3
37	120393	WASHER, FLAT .344X .69X.065	3
38	1498	NUT, 5/16-18 REGHEXCTRLK	3

* Order Individual Parts.

◇ Indicates STANDARD HARDWARE ITEMS

43" LAWN TRACTOR MODEL B4314-040

ELECTRICAL ASSEMBLY

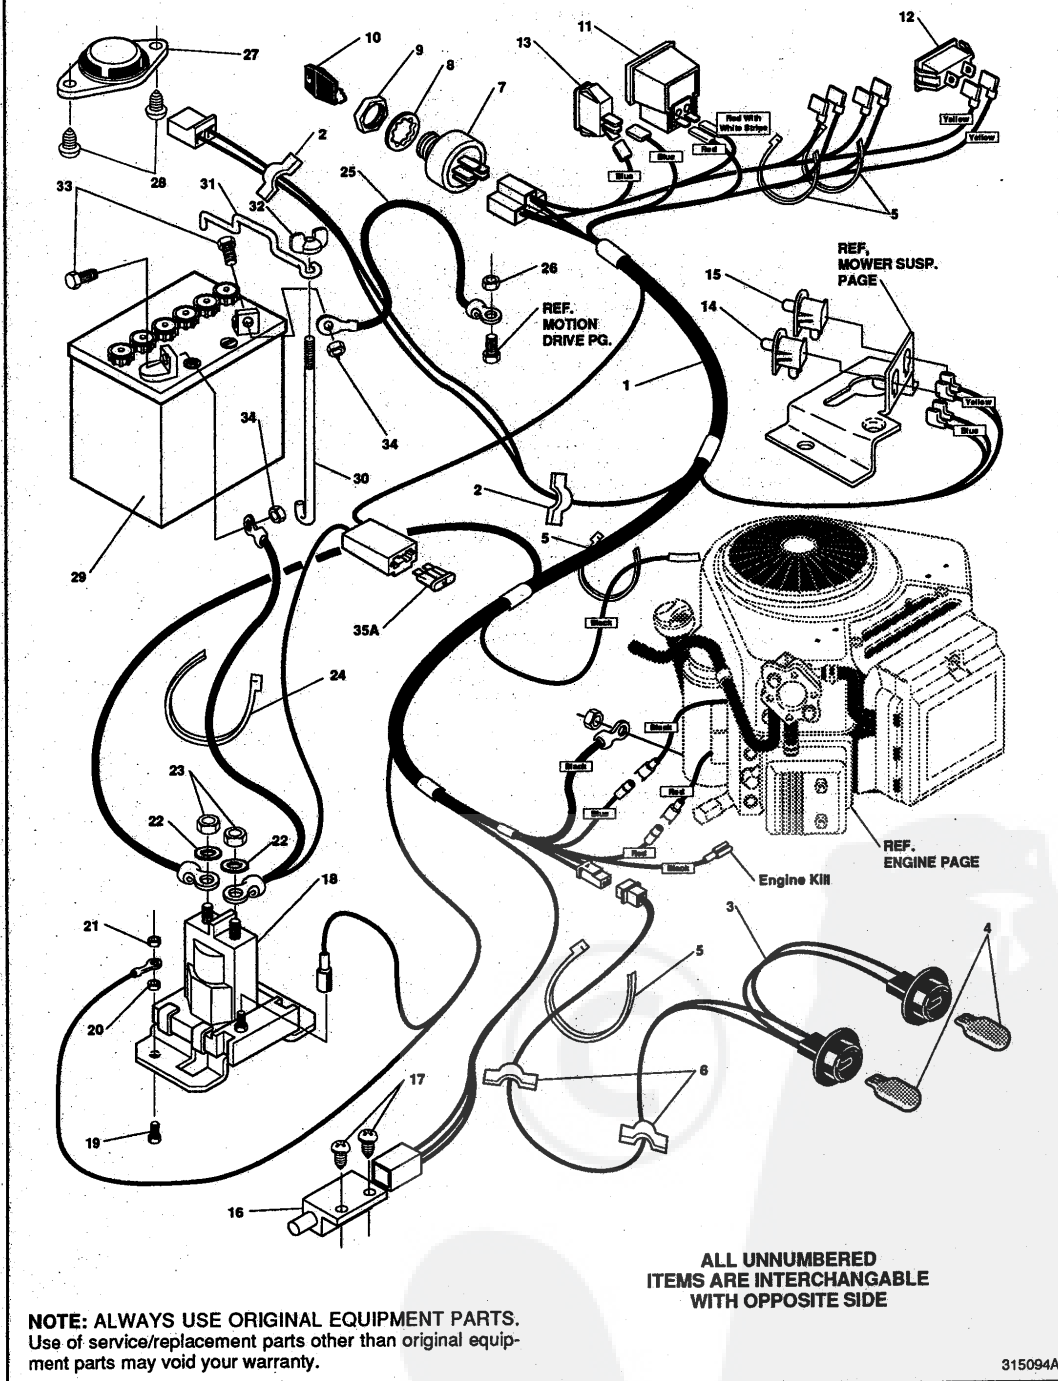


43" LAWN TRACTOR MODEL B4314-040

key#	part#	description	qty.
1	312398	WIRE,HARNES 14-16BSVAN WRAPPED	1
2	41482	PRESS CLIP,1.380LG .255ID	2
3	303064	ASSY,LIGHT WIRE-1/4 TURN	1
4	52572	BULB, HEADLAMP	2
5	57444	TIE, CABLE BLACK NYLON 5.62L	4
6	41482	PRESS CLIP,1.380LG .255ID	2
7	305720	SWITCH-IGN.(AFTER FIRE) 3 POSN	1
8	0138557	WASHER, REGINTLK.640X1.1X.05	1
9	048140	NUT, 5/8-32 HXHD IGN SWIT	1
10	300626	KEY, IGNITION SWITCH	1
11	300133	AMMETER	1
12	300255	LIGHT,INDICATOR PANEL MNT	1
13	300334	LIGHT SWITCH ON/OFF PANEL MNT	1
14	300220	SWITCH,SNAPMNT NO .055/.116BLK	1
15	58277	SWITCH,SNAPMNT NC .055/.166	1
16	57211	SWITCH,SCR MNT SP NO	1
17	057220	SCREW, #12 X .50 PHPNHTAP	2
18	53716	SOLENOID	1
19	0187745	SCREW, 1/4-20X .75 HXSEMMA	2
20	01502	NUT, 1/4-20 REGHEXCTRLK	2
21	0271172	NUT, 1/4-20 REGHEXKEPS	1
22	138485	WASHER, EXLK .320X.61X.03	2
23	0120368	NUT, 5/16-24 REGHEX	2
24	57444	TIE, CABLE BLACK NYLON 5.62L	1
25	55511	WIRE, GROUND, 12.5"	1
26	0271184	NUT, 5/16-18 HEXKEPS	1
27	57547	SWITCH, SEAT	1
28	0160505	SCREW, 1/4-20X .38PHPNHMAGR2	2
29	302257	BATTERY 12V 7 PLATE	1
30	57511	LIFT CABLE 20.75LG	1
31	57552	ROD, BATTERY, TOP	1
32	310067	NUT, WING 1/4-20 SMALL PLASTIC	1
33	0120854	SCREW, 1/4-20X .63 HHC GR2	2
34	0271172	NUT, 1/4-20 REGHEXKEPS	2
35A	** 302031	Fuse, 15 amp Spade Type	1
35B	** 49211	Fuse, 15 amp Cylindrical Type	1

**Cylindrical or Spade type fuses are included with the wire harness.
0 Indicates STANDARD HARDWARE ITEMS.

43" LAWN TRACTOR MODEL B4314-040

DECALS

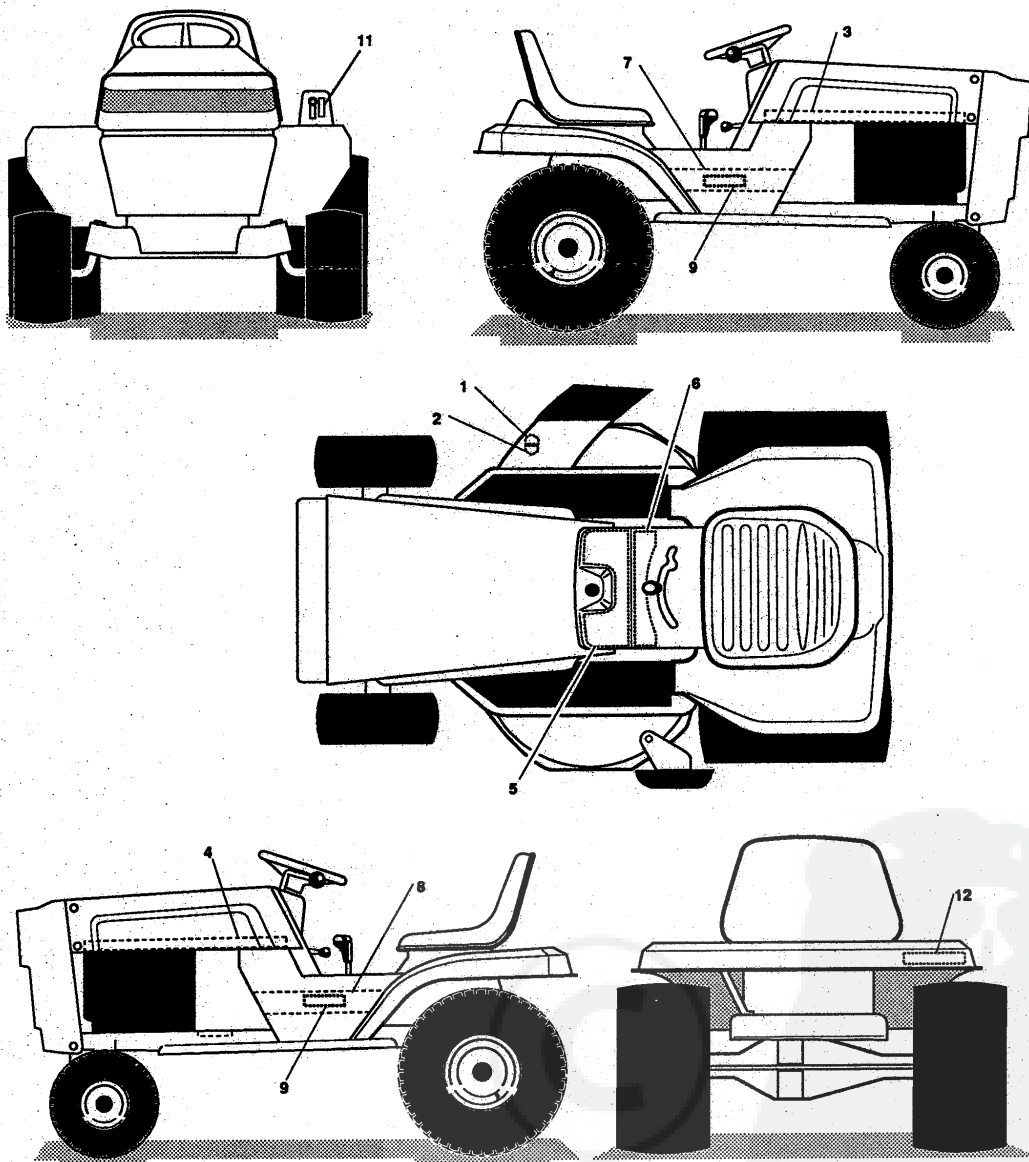

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS.
Use of service/replacement parts other than original equipment parts may void your warranty.

**ALL UNNUMBERED
ITEMS ARE INTERCHANGABLE
WITH OPPOSITE SIDE**


315115A

43" LAWN TRACTOR MODEL B4314-040

key#	part#	description	qty.
1	68547	DECAL, CUT-HAND WARNING LABEL	1
2	300191	DECAL, BLADE HGT ADJUST (OPEI)	1
3	314456	DECAL, HOODSIDE RH	1
4	314457	DECAL, HOODSIDE LH	1
5	302892	DECAL, DASH CHOKE, IL, AMM GS LF	1
6	302888	DECAL, CONSOLE P801-5&F4360-SSP	1
7	314462	DECAL, CONSOLE RH	1
8	314463	DECAL, CONSOLE LH	1
9	314466	DECAL, 14/43 PLASTIC PLATE	2
10		REFERENCE ONLY	1
11	301897	DECAL, LIFT DECK BLADE HEIGHT	1
12	302886	NAMEPLATE SM. DYNABYNOMA	1

43" LAWN TRACTOR MODEL B4314-040

CUSTOMER ASSEMBLY

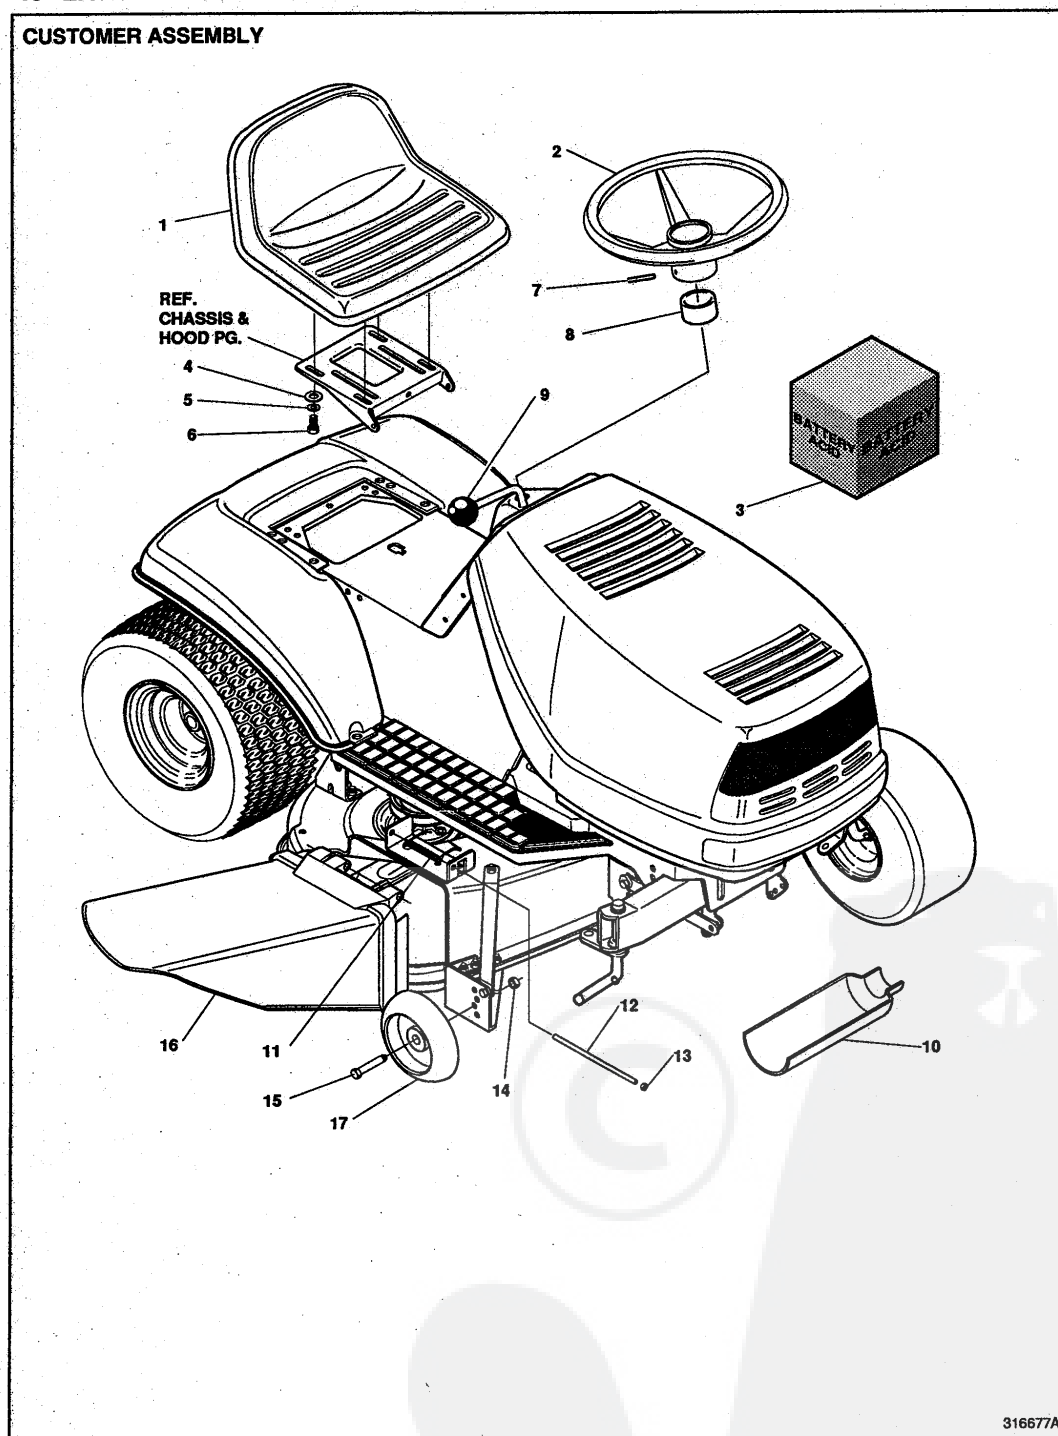

316677A

43" LAWN TRACTOR MODEL B4314-040





CUSTOMER ASSEMBLY VIEW

316678 PARTS BAG ASSY QTY1

key#	part#	description	qty
1	57454	SEAT MV450	1
2	301251	STEERING WHEEL 13" STD	1
3	52778	BATTERY ACID	1
4	120393	WASHER, FLAT .344X.69X.065	4
5	120638	WASHER, HVSP TLK .328X.60X.09	4
6	122007	SCREW, 5/16-18X.75 HHC	4
7	456378	PIN, SPRING .250DIA X2.00LG	1
8	57212	COVER, STEERING SHAFT	1
9	55514	KNOB	1
10	54873	OIL TROUGH	1
11	314975	TORSION SPRING	1
12	304424	ROD, PIVOT	1
13	3535	PUSH NUT	1
14	23763	BOLT, .500X1.390 HHSH 3/8-16	2
15	1499	NUT, 3/8-16 REGHXCTRLK	2
16	304422	CHUTE DEFLECTOR	1
17	302611	DECK WHEEL	2

43" LAWN TRACTOR MODEL B4314-040

TREAD PATTERNS

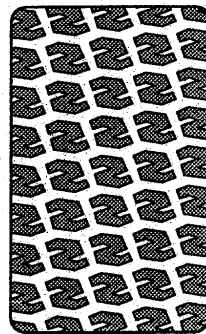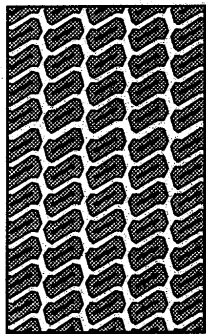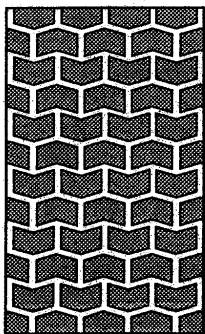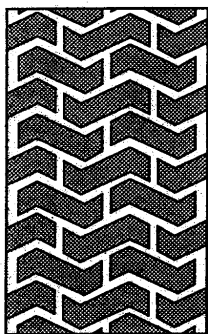

TIRE SIZE	"A"	"B"	"C"	"D"
11 X 4.00 - 5	42295			
13 X 5.00 - 6	41060			
15 X 6.00 - 6	301140	316702	39830	313952
16 X 6.50 - 8		41081		314539
18 X 6.50 - 8				
18 X 9.50 - 8		316701		313950
20 X 8.00 - 8	314584			
20 X 10.00 - 8	58276			313565
20 X 10.00 - 10		55893		
23 X 9.50 - 12	314370			
23 X 9.50 - 12		53655		

ACCESSORIES

Contact the dealer where your tractor was purchased for the available accessories. If you are unable to contact the dealer, write to the address on the front cover of this manual.

Rear Engine Rider

Model	Description
5708-16	Bagger - Fits 32" Side Discharge
5708-17	Bagger - Fits 36" Side Discharge
5709-02	Front Weight Box - holds 35 lbs.
5648-16	Lawn Sweeper w/dump Release

Lawn Tractor

Model	Description
5708-22	Bagger - Fits 30" Side Discharge
5708-13	Bagger - Fits 36", 38", 39" & 45" Side Discharge
5705-04	36" Two-Stage Snowblower - Fits 36", 38", 39", & 45" Side Discharge
5661-06	42" Snowblade - Fits 36", 38", 39", & 45"
5592-00	Tire Chains - 18" x 6.50"
5585-00	Tire Chains - 18" x 9.50" & 20" x 8"
5672-01	Wheel Weights - Front - 1 pr. w/mtg. hdw. - Fits 15" tires
5673-02	Wheel Weights - Rear - 1 pr. w/mtg. hdw. - Fits 18" & 20" tires
5709-03	Front Weights - Fits 30" & 32" Side Discharge
5648-16	Lawn Sweeper w/dump Release

Garden Tractor - Light Ground Engaging

Model	Description
5708-13	Bagger - Fits 36", 38", 39", & 45" Side Discharge
5705-04	36" Two-Stage Snowblower - Fits 36", 38", 39", & 45"
5661-06	42" Snowblade - Fits 36", 38", 39", & 45"
5672-01	Wheel Weights - Front 1 pr. w/mtg. hdw. - Fits 15" tires
5673-02	Wheel Weights - Rear - 1 pr. w/mtg. hdw. - Fits 18" & 20" tires
5648-16	Lawn Sweeper w/dump Release
5667-02	Sleeve Hitch - w/lift bar - Fits 45"
5668-01	Adaptor (sleeve hitch) for use w/23" tires
5706-00	Tire Chains - 20" x 10"
5671-00	Tire Chains - 23" x 9.50"
5672-02	Wheel Weights - Front - 1 pr. w/mtg. hdw. Fits 16" tires
5673-00	Wheel Weights - Rear - 1 pr. w/mtg. hdw. Fits 23" tires
5674-01*	10" One Bottom Moldboard Plow
5675-01*	Cultivator - 7 row - Adj. 6" - 42" width
5676-01*	Disc Harrow - 8" & 11" disc - Adj. width & disc angle
5677-02*	Tiller - 5 H.P. Self-Powered - 28" width

Four Wheel Steer

Model	Description
5708-14	Bagger - Fits 40" & 46" Side Discharge
5705-05	42" One-Stage Snowblower - Fits 40" & 46"
5661-07	48" Snowblade - Fits 40" & 46"
5709-04	Rear Weight Box for 40" & 46"
5648-16	Lawn Sweeper w/dump Release
5706-00	Tire Chains - 20" x 10"
5671-00	Tire Chains - 23" x 9.50"
5672-02	Wheel Weights - Front - 1 pr. w/mtg. hdw. Fits 16" tires
5673-00	Wheel Weights - Rear - 1 pr. w/mtg. hdw. Fits 23" tires
5672-01	Wheel Weights - Front - 1 pr. w/mtg. hdw. Fits 15" tires
5673-02	Wheel Weights - Rear - 1 pr. w/mtg. hdw. Fits 18" & 20" tires

Four Wheel Steer Garden Tractor

Model	Description
5667-04	Sleeve Hitch - w/lift bar - Fits 46"
5674-01*	10" One Bottom Moldboard Plow
5675-01*	Cultivator - 7 row - Adj. 6" - 42" width
5676-01*	Disc Harrow 8" & 11" Disc. Adj. width & disc angle
5677-02*	Tiller 5 H.P. Self-Powered - 28" width
5648-16	Lawn Sweeper w/dump Release

*Requires a sleeve hitch

CONTACT ANY OF THE FOLLOWING DISTRIBUTORS: Parts for: HOMKO - LAWN SCOUT - AMF - TURFMASTER - DYNAMARK - or any other CANADIAN, WESTERN INTERNATIONAL INCORPORATED or NOMA OUTDOOR PRODUCTS INCORPORATED product.

ALABAMA
Automotive Elect. Serv.
415-419 Meridian St.
Huntsville, AL 35801
(205) 539-2131
AL WATS 800-421-1392
*b,c,f,g,h

CALIFORNIA
Billiou's
1343 S. Main
Porterville, CA 93257
(209) 784-4102
CA WATS 800-228-7286
WATS 800-245-5468
FAX (209) 784-4108
(auto)
*b,c,e,f,g,h

COLORADO
Spitzer Ind. Prod.
6601 N Washington
Thornton, CO 80229
(303) 287-3414
FAX (303) 287-0549
(auto)
*b,c,e,f,g,h

FLORIDA
G.L.O. Products Inc.
13201 S. Belcher Rd.
Largo, FL 33643
(813) 530-9723
FL WATS 800-225-5456
FAX (813) 539-8603
(auto)
*c,e,h

Radco Distributors Inc.
4909 Victor St., Box 5459
Jacksonville, FL 32207-0459
(904) 733-7957
FL WATS 800-727-8701
FAX (904) 737-9575
(auto)
*b,c,e,g,h

ILLINOIS
Garmoe Distr. Inc.
2620 N Mannheim Road
Franklin Park, IL 60131
(708) 455-3588
FAX (708) 455-6069
(auto)
*b,c,e,f,g

INDIANA
Thompson Sales & Service
2400 W. Ridge Road
Gary, IN 46408
(219) 980-3282
FAX (219) 980-3283
IN WATS 800-234-1470
*c,f,g,h

IOWA
Bruce Engine
1829 N.W. 86th
Des Moines, IA 50325
(515) 278-5151
WATS 800-747-1829
*b,c,e,f,g,h

KENTUCKY
Auto-Electric
715 W. Hwy 80, Box 671
Somerset, KY 42501
(606) 679-1171
FAX (606) 679-1172
*c,e,f,g,h

Cayce Mill Supply Co.
505 E 1st St.
Hopkinsville, KY 42240
(502) 886-3335
FAX (502) 886-5117
KY WATS 800-242-5296
WATS 800-338-6054
*b,c,f,g,h
Kentucky Engine Service
1003-08 E. Broadway
Louisville, KY 40204
(502) 587-7976
FAX (502) 587-7976
WATS 800-456-1806
*b,c,e,f,g,h

LOUISIANA
United Engine Service, Inc.
11923 Cloverland Ave.
Baton Rouge, LA 70809
(504) 752-2622
FAX (504) 752-2442 LA
WATS 800-342-8679
*c,e,f,g,h

MAINE
Automatic Dist. Inc.
22 Target Industrial Cir.
Bangor, ME 04401
(207) 942-6769
FAX (207) 941-0247
ME WATS 800-423-2238
WATS 800-341-1658

MARYLAND
Center Supply Company
6802 Industrial Dr. #208
Beltsville, MD 20705
(301) 595-0860
FAX (301) 595-0783
*b,c,e,f,g
Kunkel Service Company
6252 Frankford Ave
Baltimore, MD 21206
(301) 377-4008
WATS 800-627-3379
FAX (301) 325-1314
*b,c,e,f,g,h

MICHIGAN
Air Cooled Engine Div.
1116 26th Ave.
Menominee, MI 49858
(906) 863-6332
WATS 800-334-9535
FAX (906) 863-1204
*c,e,f,g,h

MINNESOTA
Hance Distr.
12795 16th Ave. N.
Plymouth, MN 55441
(612) 559-2299
FAX (612) 559-2365
(auto)
*b,c,e,f,g,h

MISSOURI
Gunther's Serv. & Supply
7320 Wornall Road
Kansas City, MO 64114
(816) 523-1952
*a,d,e,f,g,h
Wilson Engine & Parts Inc.
4159 Shoreline Drive
Earth City, MO 63045
(314) 739-1313
WATS 800-873-6722
FAX (314) 739-8767
(auto)
*b,d,e,f,g,h

NEW JERSEY
Power Distributors, Inc.
71 Northfield Ave.
Edison, NJ 08837
(201) 225-4922
FAX (201) 225-2726
*i

NEW YORK
Loegler & Ladd Inc.
3950 Broadway, Box 214
Buffalo, NY 14225
(716) 684-0600
*c,e
Stiefvater Dist.
Clinton Road, Route 12B
New Hartford, NY 13413
(315) 853-5581
FAX (315) 853-5147
NY WATS 800-643-1330
DLR ONLY
*c,e,f,g,h

NORTH CAROLINA
Dixie Sales Co. Inc.
Box 1408
Greensboro, NC 27402
(919) 375-7500
WATS 800-753-4943
FAX (919) 274-2758
*b,e,f,g,h

OHIO
American Power Distr.
2430 Tremainsville Rd.
Box 5815
Toledo, OH 43613
(419) 475-7261
FAX (419) 475-4815 (auto
after 5.00 pm)
*b,d,e,f,g,h
Gardner, Inc.
1150 Chesapeake Ave.
Columbus, OH 43212
(614) 488-7951
WATS 800-848-8946
*a,b,d,e,g,h

OKLAHOMA
Original Equipment Inc.
9550 A East 55th Place
Tulsa, OK 74146
(918) 664-4992
WATS 800-645-2031
*a,c,e,f,i

PENNSYLVANIA
Bluemont Co.
11101 Frankstown Road
Pittsburgh, PA 15235
(412) 242-1622
WATS 800-344-1200
FAX (412) 243-5673
(auto)
*b,c,e,f,g,h

SOUTH CAROLINA
Magneto & Electric Service
103 Assembly St.
Columbia, SC 29201
(803) 771-4044
SC WATS 800-922-1118
WATS 800-334-4832
FAX (803) 256-2727
*b,c,e,f,g,h

TENNESSEE
Chilton A/C Engine
319 4th Ave. S.,
Box 150806
Nashville, TN 37201
(615) 254-1634
FAX (615) 242-6618
WATS 800-621-6934
*b,c,e,f,g,h

Ace Dist.
2103 E. Magnolia Ave.
Box 3577
Knoxville, TN 37917
(615) 524-5359
FAX (615) 524-8263
TN WATS 800-332-9904
WATS 800-343-2403
*c,e,f,g,h

Meadart Engine of Memphis
4365 Old Lamar
Memphis, TN 38118
(901) 795-4365
WATS 800-338-9379
(OS)
*c,e,g,h

TEXAS
Marr Bros. Inc.
423 E. Jefferson
Dallas, TX 75203
(214) 948-7387
FAX (214) 946-6259
(auto)
*a,d,e,f,g,h
Midland Small Engine Sales
106 Carlton, Box 4215
Midland, TX 79704
(915) 684-5553
*b,d,e,f,g,h

VIRGINIA
Norva Small Engines
7941 Wellingford Dr.
Manassas, VA 22110
(703) 369-3387
FAX (703) 369-9788
WATS 800-444-9390
*c,e,f,g,h

RBI Corporation
101 Cedar Ridge Rd.
Richmond, VA 23227
(804) 550-2210
FAX (804) 550-2386
WATS 800-825-8530
*b,c,f,g,h

WASHINGTON
Pacific A/C Engine
4111 Airport Way S.
Seattle, WA 98108
(206) 623-6906
FAX (206) 622-1736
c,e,f,h

WISCONSIN
Praefke A/C Engine
4050 N. 128th St
Brookfield, WI 53005
(414) 781-7010
FAX (414) 781-9546
*c,e,f,g,h
Wiggett Parts Ctr.
219 South, 3rd Street
La Crosse, WI 54602
(608) 784-4715
FAX (608) 784-4736
*c,e,f,g,h

CANADA
Noma Outdoor Prod., Inc.
155 Orenda Rd.
Brampton, Ontario L6W 1W3
(416) 457-1433
*i

Rev. 1/03/91

(*) General Information
Codes:
(a) Advance Payment
Required
(b) Accepts Credit Cards
(c) C.O.D. okay
(d) No C.O.D.
(e) Accessories Available
(f) Briggs & Stratton dealer
or distributor
(g) Tecumseh/Peerless
dealer or distributor
(h) Foote dealer or
distributor
(i) Dealer sales only,
contact for closest dealer.