


MODEL 21975X6A

REPAIR PARTS

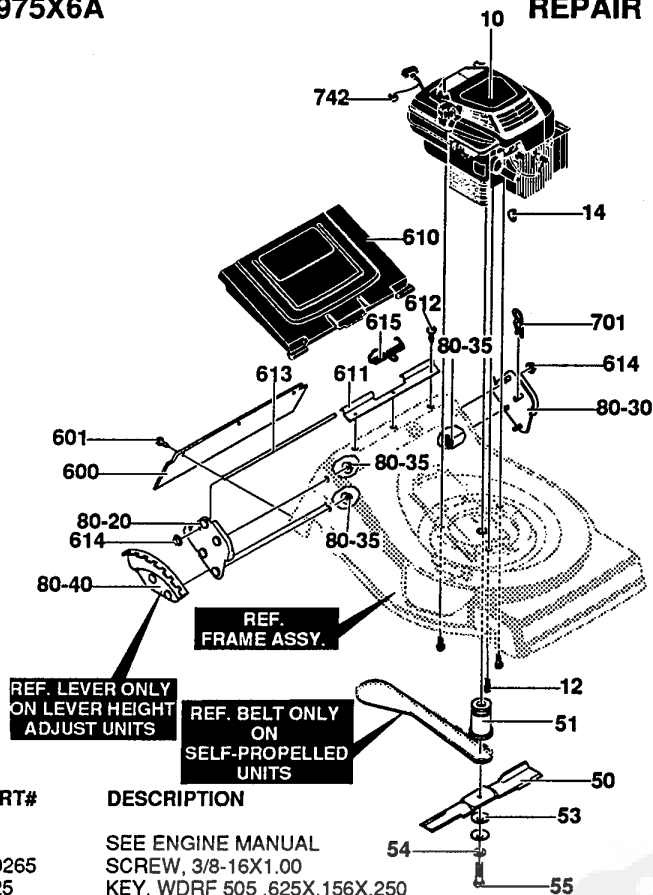


KEY#	PART#	DESCRIPTION
10	-	SEE ENGINE MANUAL
12	710265	SCREW, 3/8-16X1.00
14	2125	KEY, WDRF 505 .625X.156X.250
50	71584	BLADE, 21"X2.25" MULCH
51	671058	ADAPTER, BLADE 21"1SP
53	710210	WASHER.39IDX2.25ODX.12 BELLVIL
54	710207	WASHER, FLAT.406X.812X.06
55	710163	SCREW,3/8-24X1.50 HH
80	71762-850	ASSY,FRAME
80-20	71096	BRKT, RH HANDLE
80-30	671097	BRKT, LH HANDLE
80-35	710204	NUT,5/16-18 HEWDFLK WHIZ
80-40	71575	ASS'Y, QUADRANT
600	43640	DEFLECTOR,REAR 21
601	710271	SCREW,10-16X.50HWASEMTAP
610	71409	DOOR, REAR
611	71410	SPACER,RR DOOR
612	710273	SCREW, 10-16X.50 WAHHSEMSAB
613	340822	ROD,PIVOT REAR DOOR
614	710285	CAP, PUSH ON .250
615	340823	SPRING, TORSION
701	710291	PIN, HAIR.062DIA
742	642189	STOP, ROPE BS223294

710460

341207A

MODEL 21975X6A

REPAIR PARTS

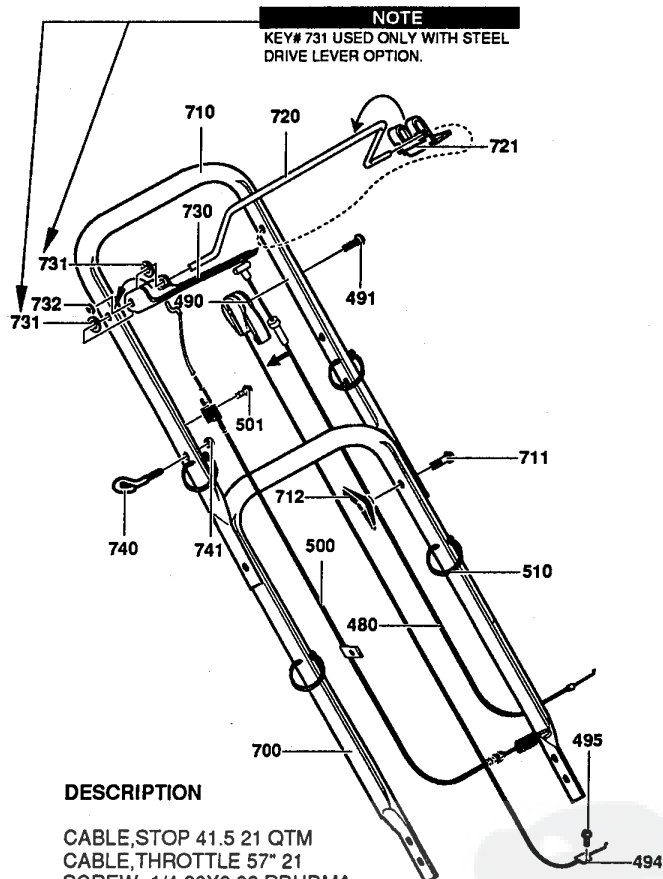


KEY#	PART#	DESCRIPTION
480	672126	CABLE,STOP 41.5 21 QTM
490	672143	CABLE,THROTTLE 57" 21
491	710178	SCREW, 1/4-20X2.00 RDHDM
494	12425	CLAMP, THROTTLE QUANTUM
495	710275	SCREW, 10-32X.62 SLWAHTAP
500	71866	CABLE, DRIVE 21 RB
501	710272	SCREW, #10 X1.25 HHTAP
510	671372	TIE,BLACK CABLE 6.3L
700	71137-846	HANDLE, LOWER
710	671581-846	HANDLE,UPPER
711	710175	BOLT,5/16-18X2.00
712	671294	KNOB, WING 5/16-18
720	672117 -850	LEVER,ENGINE STOP
721	643628	BRKT, STOP LEVER
730	671566	LEVER, DR CNTL
731	710491	WASHER, NYLON .281X1.0X.151
732	710286	CAP, RETAINER W/COVER
740	643956	GUIDE, ROPE 1/4-20 .50
741	710203	NUT, 1/4-20 HEXNYL 15X116

341511A

710460

MODEL 21975X6A

REPAIR PARTS

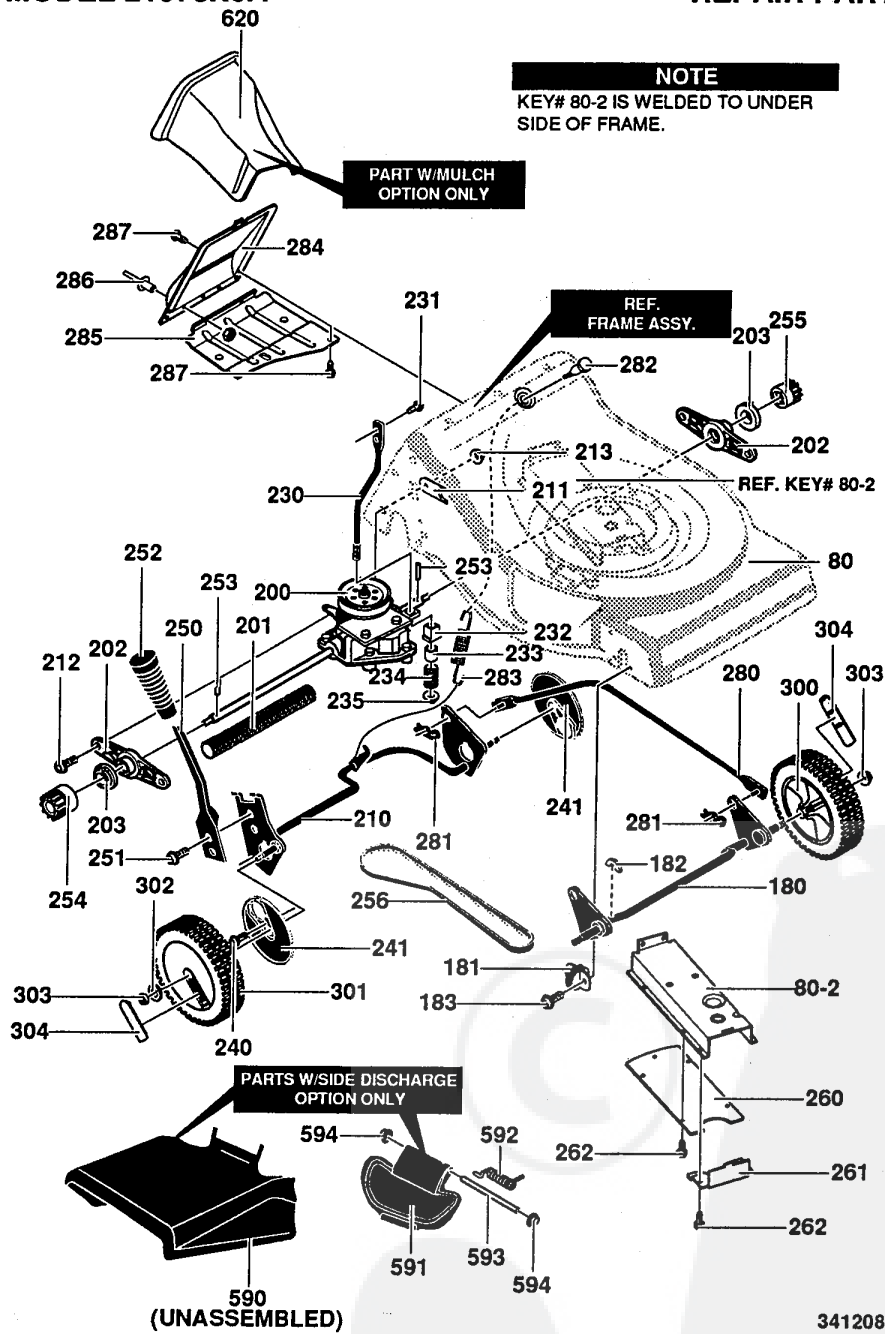

710460


MODEL 21975X6A**REPAIR PARTS**

KEY#	PART#	DESCRIPTION
80	71762-850	ASSY,FRAME 21R/DR
80-2	71238	GURARD, BELT
180	71152-850	ASS'Y,CROSSBAR FRONT
181	71167	CLIP, RETAINER FRT AXLE
182	43731	BUSHING, FRT HSG
183	710270	SCREW,1/4-14X.50 HWATAP Z,B&W
200	71549	TRANSMISSION
201	643649	SHIELD, AXLE
202	671411	SUPPORT, AXLE W/BRNG
203	643788	BEARING, LIFTER
210	71572-850	ASS'Y,CROSSBAR RR
211	71482	RETAINER,BEARING
212	710174	SCREW,5/16-18X.75 HHCFLTH
213	710205	NUT, 5/16-18 WDFLLK
230	71481	SUPPORT, SPRING
231	710274	SCREW, 1/4-20X .63HHWATAPSERBZ
232	71480	BUSHING, SPRING SUPT
233	43844	SPACER,.508X.712X.563
234	710327	SPRING, COMPRESSION .37X1.00
235	710205	NUT, 5/16-18 WDFLLK (15X88)
240	710270	SCREW,1/4-14X.50 HWATAP Z,B&W
241	643616	DUSTCOVER, 8" WHEEL
250	671293	SPRING, LEVER HGT/ADJ REAR
251	710274	SCREW, 1/4-20X .63HHWATAPSERBZ
252	671297	KNOB, HGT/ADJ
253	643629	PIN, DRIVE .177X.750
254	671286	GEAR, PINION RH
255	671287	GEAR, PINION LH
256	340829	BELT,2L B&S/TEC
260	43770-850	COVER, LOWER BELT GUARD
261	71239-850	COVER, FRONT BELT
262	710273	SCREW, 10-16X.50 WAHHSEMSAB
280	43721-850	ASS'Y, LIFTER LINK
281	710292	PIN, HAIR .080 DIA X1.63LG
282	71576	CLEVIS,PIN LIFT SPRING SUPT
283	710337	SPRING, EXTENSION
284	71246-850	COVER, REAR
285	71245-850	COVER, LOWER
286	710259	RIVET, POP .187DIA.X.44
287	710133	SCREW,HHWATAP 1/4X.50
300	672082	TIRE & RIM,
301	672083	WHEEL, DRIVE 8"X2.00
302	710252	WASHER, FLAT .382 X 1.0 X.03HT
303	710140	NUT,3/8-16HWDFLLK MACK 15X84
304	643615	HUBCAP, 8" WHEEL
590	71770	DEFLECTOR, CHUTE
591	71769	COVER, MULCH
592	340826	SPRING,TORSION .34X2.2 166X38
593	340827	ROD,PIVOT .25 X 4.68 215X16
594	710285	CAP, PUSH ON .250 DIA ROD
620	71250	PLUG, MULCHER-SMALL

710460

MODEL 21975X6A

REPAIR PARTS

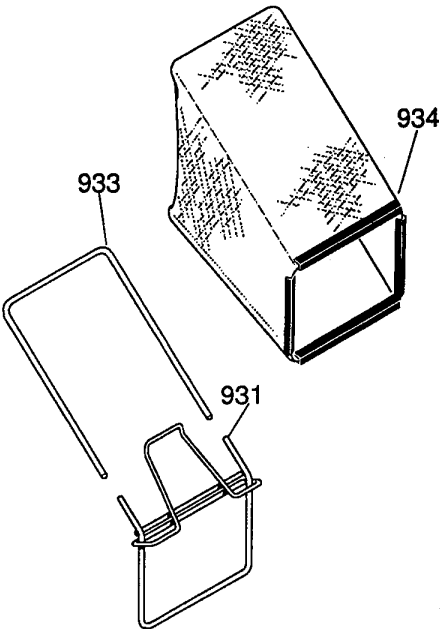

326165A

KEY#	PART#	DESCRIPTION
931	43666	ASS'Y, BAG FRAME 21 3N1
933	71592	FRAME, CATCHER BAG TOP
934	71873	CATCHER,BAG
	710460	OWNER'S MANUAL (NOT SHOWN)


710460



MODEL 21975X6A

REPAIR PARTS

KEY#	PART#	DESCRIPTION
800	-	NOT SERVICABLE
801	-	NOT USED ON THIS UNIT
802	-	NOT USED ON THIS UNIT
805	340820	DECAL, HEIGHT ADJ.
806	-	NOT USED ON THIS UNIT
810	710441	DECAL, "MURRAY ULTRA"
812	-	NOT USED ON THIS UNIT
813	710442	DECAL, "MULCH, BAG & MOW"
814	-	NOT USED ON THIS UNIT
816	335629	DECAL, CUT FINGER-CHUTE
818	335631	DECAL, WARNING
820	710299	DECAL, CAUTION 21"
822	-	NOT USED ON THIS UNIT
825	-	NOT USED ON THIS UNIT
830	-	NOT USED THIS UNIT

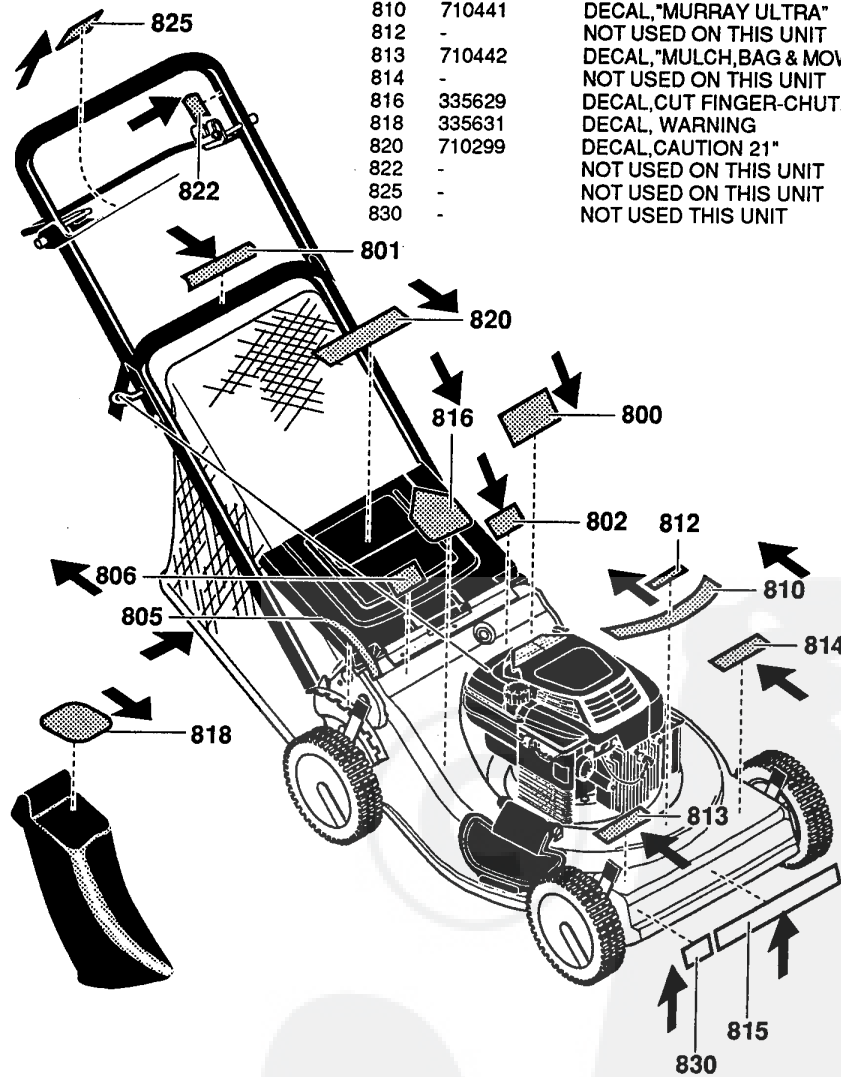

710460

341330 A